

## Contents

<b>24 - Mixture preparation - injection</b> .....	<b>1</b>
<b>1 Safety precautions and rules for cleanliness</b> .....	<b>1</b>
1.1 General notes on self-diagnosis .....	1
1.2 Safety precautions when using testers and measuring instruments during a road test .....	2
1.3 Safety precautions .....	2
1.4 Safety precautions when working on vehicles with start/stop system .....	3
1.5 Rules for cleanliness when working on the injection system .....	3
1.6 Important: Required procedure prior to opening high-pressure injection system .....	4
1.7 Checking for leaks in the fuel system .....	5
1.8 Checking vacuum system .....	5
<b>2 Technical data</b> .....	<b>6</b>
<b>3 Overview of fitting locations</b> .....	<b>7</b>
<b>4 Air cleaner</b> .....	<b>16</b>
4.1 Air cleaner - exploded view .....	16
4.2 Removing and installing air filter element .....	17
4.3 Removing air cleaner housing .....	19
<b>5 Intake manifold, fuel rail and injectors</b> .....	<b>21</b>
5.1 Intake manifold - exploded view .....	21
5.2 Removing and installing intake manifold .....	22
5.3 Fuel rail - exploded view .....	24
5.4 Removing and installing fuel rail .....	25
5.5 Removing and installing injectors .....	26
5.6 Removing and installing fuel pressure sender G247 .....	30
<b>6 High-pressure pump</b> .....	<b>31</b>
6.1 High-pressure pump - exploded view .....	31
6.2 Removing and installing high-pressure pipes .....	33
6.3 Removing and installing high-pressure pump .....	34
<b>7 Lambda probes</b> .....	<b>39</b>
7.1 Lambda probes - overview .....	39
7.2 Removing and installing Lambda probes .....	40
<b>8 Engine control unit</b> .....	<b>47</b>
8.1 Wiring and component check with test box V.A.G 1598/42 .....	47
8.2 Removing and installing engine control unit J623 .....	49
<b>28 - Ignition system</b> .....	<b>52</b>
<b>1 General notes and safety precautions</b> .....	<b>52</b>
1.1 General notes on ignition system .....	52
1.2 Safety precautions when working on the injection and ignition system .....	52
1.3 Safety precautions when working on vehicles with start/stop system .....	53
1.4 Safety precautions when using testers and measuring instruments during a road test .....	53
<b>2 Servicing ignition system</b> .....	<b>54</b>
2.1 Test data .....	54
2.2 Ignition system - exploded view .....	55
2.3 Removing and installing ignition coils .....	56
2.4 Removing and installing knock sensors .....	58
2.5 Removing and installing Hall senders .....	59
2.6 Removing and installing engine speed sender G28 .....	61