

## Contents

<b>24 - Mixture preparation - injection</b>	<b>1</b>
<b>1 Safety precautions and rules for cleanliness</b>	<b>1</b>
1.1 General notes on self-diagnosis	1
1.2 Safety precautions when working on the fuel system	2
1.3 Safety precautions when working on the injection and ignition system	2
1.4 Safety precautions when working on vehicles with start/stop system	3
1.5 Safety precautions when using testers and measuring instruments during a road test	3
1.6 Rules for cleanliness and instructions for working on fuel system	3
1.7 Reducing pressure in high-pressure section of injection system	4
1.8 Checking for leaks in the fuel system	5
1.9 Checking vacuum system	5
<b>2 Technical data</b>	<b>6</b>
<b>3 Overview of fitting locations</b>	<b>7</b>
<b>4 Air cleaner</b>	<b>18</b>
4.1 Air cleaner - exploded view	18
4.2 Removing and installing engine cover panels	19
4.3 Removing and installing air filter element	19
4.4 Removing and installing air cleaner housing	20
<b>5 Intake manifold (bottom section), fuel rail, injectors</b>	<b>22</b>
5.1 Intake manifold (bottom section), fuel rail, injector - exploded view	23
5.2 Removing and installing intake air temperature sender G42 / intake manifold pressure sender G71	26
5.3 Removing and installing throttle valve module J338	26
5.4 Cleaning throttle valve module J338	27
5.5 Removing and installing regulating flap control unit J808	28
5.6 Removing and installing intake manifold (bottom section) with fuel rail	29
5.7 Removing and installing injectors	31
5.8 Checking fuel pressure and residual pressure (up to high-pressure pump)	34
<b>6 High-pressure pump</b>	<b>38</b>
6.1 High-pressure pump - exploded view	38
6.2 Removing and installing high-pressure pipe	39
6.3 Removing and installing high-pressure pump	41
<b>7 Lambda probes</b>	<b>44</b>
7.1 Lambda probes - overview	44
7.2 Removing and installing Lambda probe G39 and Lambda probe after catalytic converter G130	45
7.3 Removing and installing Lambda probe 2 G108 and Lambda probe 2 after catalytic converter G131	46
<b>8 Engine control unit</b>	<b>49</b>
8.1 Wiring and component check with test box V.A.G 1598/42	49
8.2 Removing and installing engine control unit J623	51
<b>28 - Ignition system</b>	<b>52</b>
<b>1 General notes and safety precautions</b>	<b>52</b>
1.1 General notes on ignition system	52
1.2 Safety precautions when working on the injection and ignition system	52
1.3 Safety precautions when working on vehicles with start/stop system	53
1.4 Safety precautions when using testers and measuring instruments during a road test	53
<b>2 Servicing ignition system</b>	<b>54</b>
2.1 Test data	54
2.2 Ignition system - exploded view	55
2.3 Removing and installing ignition coils	55

2.4	Removing and installing knock sensors G61 / G66	58
2.5	Removing and installing Hall senders G40 / G163	59
2.6	Removing and installing engine speed sender G28	59