

Contents

23 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 Safety precautions when using testers and measuring instruments during a road test	1
1.2 Safety precautions for vehicles with start/stop system	1
1.3 Safety precautions when working on the fuel system	2
1.4 Safety precautions when working on the injection and glow plug system	4
1.5 Checking vacuum system	5
2 Injection system	6
2.1 Overview of fitting locations - injection system	6
2.2 Overview - fuel system	13
2.3 Filling and bleeding fuel system	14
3 Air cleaner	15
3.1 Exploded view - air cleaner	15
3.2 Removing and installing engine cover panel	16
3.3 Removing and installing air filter element	16
3.4 Removing and installing air cleaner housing	18
3.5 Removing and installing air mass meter G70	19
4 Intake manifold	20
4.1 Exploded view - intake manifold	20
4.2 Removing and installing throttle valve module J338	21
4.3 Removing and installing intake manifold	21
5 High-pressure pump	25
5.1 Exploded view - high-pressure pump	25
5.2 Removing and installing high-pressure pump	26
5.3 Performing first fuel filling after installing high-pressure pump	28
5.4 Checking fuel system for leaks	29
6 Injectors/high-pressure reservoir (rail)	31
6.1 Exploded view - injectors	31
6.2 Checking injectors	34
6.3 Performing adaption of correction values for injectors	35
6.4 Checking for injectors sticking open	35
6.5 Checking return flow rate of injectors with engine running	37
6.6 Checking return flow rate of injectors at starter cranking speed	40
6.7 Removing and installing injectors	42
6.8 Removing and installing fuel rail	48
6.9 Installing high-pressure pipes	50
7 Senders and sensors	52
7.1 Checking fuel pressure regulating valve N276	52
7.2 Removing and installing fuel pressure regulating valve N276	54
7.3 Removing and installing fuel pressure sender G247	55
8 Lambda probe	59
8.1 Exploded view - Lambda probe and exhaust gas temperature senders	59
8.2 Removing and installing Lambda probe G39 with Lambda probe heater Z19	60
8.3 Removing and installing pressure differential sender G505	61
9 Engine control unit	62
9.1 Wiring and component check with test box V.A.G 1598/42	62
9.2 Removing and installing engine control unit J623	63
28 - Glow plug system	67
1 Glow plug system	67
1.1 Checking glow plug system	67
1.2 Exploded view - glow plugs, Hall sender, engine speed sender	67



1.3	Removing and installing glow plugs	68
1.4	Removing and installing Hall sender G40	70
1.5	Removing and installing engine speed sender G28	71