

## Contents

<b>23 - Mixture preparation - injection</b> .....	<b>1</b>
<b>1 Safety precautions and rules for cleanliness</b> .....	<b>1</b>
1.1 Safety precautions when using testers and measuring instruments during a road test .....	1
1.2 Safety precautions when working on vehicles with start/stop system .....	2
1.3 Safety precautions when working on the fuel system .....	2
1.4 Safety precautions when working on the injection and glow plug system .....	4
1.5 Checking vacuum system .....	4
<b>2 Injection system</b> .....	<b>6</b>
2.1 Overview of fitting locations - injection system (CLAA, CLAB, CDUC, CKVB, CPNB) .....	6
2.2 Overview of fitting locations - injection system (CGQB) .....	15
2.3 Overview - fuel system .....	26
2.4 Filling and bleeding fuel system .....	27
2.5 Connection diagram - vacuum system .....	28
<b>3 Air cleaner</b> .....	<b>30</b>
3.1 Exploded view - air cleaner .....	30
3.2 Removing and installing engine cover panel .....	31
3.3 Removing and installing air filter element .....	31
3.4 Removing and installing air cleaner housing .....	33
<b>4 Intake manifold</b> .....	<b>35</b>
4.1 Exploded view - intake manifold .....	35
4.2 Removing and installing intake manifold .....	36
4.3 Removing and installing throttle valve module J338 .....	41
4.4 Removing and installing intake manifold flap motor V157 .....	42
<b>5 High-pressure pump</b> .....	<b>44</b>
5.1 Exploded view - high-pressure pump .....	44
5.2 Removing and installing high-pressure pump .....	45
5.3 Performing first fuel filling after installing high-pressure pump .....	50
<b>6 Injectors</b> .....	<b>52</b>
6.1 Exploded view - injectors .....	52
6.2 Checking injectors .....	55
6.3 Performing adaption of correction values for injectors .....	56
6.4 Checking for injectors sticking open .....	56
6.5 Measuring return flow rate of injectors with engine running .....	60
6.6 Checking return flow rate of injectors at starter cranking speed .....	63
6.7 Checking restrictor in fuel return line .....	66
6.8 Removing and installing injectors .....	67
6.9 Removing and installing fuel rail .....	74
6.10 Installing high-pressure pipes .....	77
<b>7 Senders and sensors</b> .....	<b>80</b>
7.1 Removing and installing air mass meter G70 .....	80
7.2 Checking fuel pressure regulating valve N276 .....	81
7.3 Removing and installing fuel pressure regulating valve N276 .....	83
7.4 Removing and installing fuel pressure sender G247 .....	85
7.5 Removing and installing pressure differential sender G505 .....	88
<b>8 Lambda probes and exhaust gas temperature senders (CLAA, CLAB, CDUC, CKVB, CPNB)</b> .....	<b>90</b>
8.1 Exploded view - Lambda probe, exhaust gas temperature control (CLAA, CLAB, CDUC) .....	90
8.2 Exploded view - Lambda probe, exhaust gas temperature control (CKVB, CPNB) .....	91
8.3 Removing and installing Lambda probe G39 with Lambda probe heater Z19 .....	93
8.4 Removing and installing exhaust gas temperature sender 2 G448 (engine code CPNB only) .....	93



<b>9</b>	<b>Lambda probes and exhaust gas temperature senders (CGQB)</b> .....	<b>95</b>
9.1	Exploded view - Lambda probe, exhaust gas temperature control (CGQB) .....	95
9.2	Removing and installing Lambda probe G39 with Lambda probe heater Z19 .....	96
<b>10</b>	<b>Engine control unit</b> .....	<b>97</b>
10.1	Wiring and component check with isolator box VAS 6606 .....	97
10.2	Removing and installing engine control unit J623 .....	98
<b>28</b>	<b>- Glow plug system</b> .....	<b>100</b>
<b>1</b>	<b>Glow plug system</b> .....	<b>100</b>
1.1	Checking glow plug system .....	100
1.2	Exploded view - glow plugs, Hall sender, engine speed sender .....	100
1.3	Removing and installing glow plugs .....	101
1.4	Removing and installing engine speed sender G28 .....	103
1.5	Removing and installing Hall sender G40 .....	104