

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when working on the fuel system	1
1.2 Safety precautions when working on vehicles with start/stop system	3
1.3 Safety precautions when using testers and measuring instruments during a road test	3
<b>2 Repair instructions</b>	<b>4</b>
2.1 Rules for cleanliness	4
2.2 Test conditions	4
2.3 Contact corrosion	4
2.4 Routing and attachment of pipes, hoses and wiring	5
<b>20 - Fuel supply system</b>	<b>6</b>
<b>1 Fuel tank</b>	<b>6</b>
1.1 Exploded view - fuel tank	6
1.2 Draining fuel tank	11
1.3 Removing and installing fuel tank	13
<b>2 Fuel delivery unit/fuel gauge senders</b>	<b>20</b>
2.1 Assembly overview - fuel delivery unit/fuel gauge sender	20
2.2 Removing and installing fuel delivery unit/fuel gauge senders	24
2.3 Filling and bleeding fuel system	30
2.4 Checking fuel gauge sender G	31
2.5 Removing and installing fuel gauge sender G	34
2.6 Checking fuel gauge sender 2 G169	35
2.7 Removing and installing fuel gauge sender 2 G169	37
<b>3 Plug-in connectors</b>	<b>43</b>
3.1 Disconnecting plug-in connectors	43
<b>4 Fuel filter</b>	<b>47</b>
4.1 Assembly overview - fuel filter	47
4.2 Removing and installing fuel filter	48
<b>5 Activated charcoal filter system</b>	<b>49</b>
5.1 Connection diagram - activated charcoal filter system	49
5.2 Assembly overview - activated charcoal filter system	50
5.3 Removing and installing activated charcoal filter	55
5.4 Checking fuel system for leaks	59
5.5 Removing and installing fuel system diagnostic pump	60
<b>6 Accelerator mechanism</b>	<b>61</b>
6.1 Assembly overview - accelerator pedal module	61
6.2 Removing and installing accelerator pedal module with accelerator position sender G79 / G185	62
<b>7 Fuel pump</b>	<b>63</b>
7.1 Checking fuel system pressurisation pump G6	63
7.2 Removing and installing fuel pump control unit J538	68