

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety precautions when working on the fuel system	1
1.2 Safety precautions when working on vehicles with start/stop system	3
1.3 Safety precautions when using testers and measuring instruments during a road test	3
1.4 Safety precautions when working on the SCR system	4
2 Repair instructions	5
2.1 Rules for cleanliness	5
2.2 Test conditions	5
2.3 Contact corrosion	5
2.4 Routing and attachment of pipes, hoses and wiring	6
20 - Fuel supply system	7
1 Fuel tank	7
1.1 Exploded view - fuel tank	7
1.2 Draining fuel tank	10
1.3 Removing and installing fuel tank	11
1.4 Deactivating misfuelling prevention device	17
2 Fuel delivery unit/fuel gauge senders	19
2.1 Exploded view - fuel delivery unit/fuel gauge senders	19
2.2 Removing and installing fuel delivery unit/fuel gauge senders	21
2.3 Checking fuel gauge sender G	29
2.4 Removing and installing fuel gauge sender G	32
2.5 Checking fuel gauge sender 2 G169	32
2.6 Removing and installing fuel gauge sender 2 G169	35
3 Plug-in connectors	41
3.1 Disconnecting plug-in connectors	41
4 Fuel cooler	46
4.1 Exploded view - fuel cooler	46
4.2 Removing and installing fuel cooler	46
5 Fuel filter	49
5.1 Exploded view - fuel filter	49
5.2 Removing and installing fuel filter	51
5.3 Removing and installing water level sender G120	51
6 Accelerator mechanism	52
6.1 Exploded view - accelerator pedal module	52
6.2 Removing and installing accelerator pedal module with accelerator position sender G79/G185	53
7 Fuel pump	55
7.1 Checking fuel system pressurisation pump G6	55
7.2 Removing and installing fuel pump control unit J538	62