

Contents

1	General information	1
1.1	--- Change history ---	1
1.2	General notes on Maintenance Manuals	2
1.3	Cleaning engine	2
1.4	Engine number	2
1.5	Vehicle identification number	4
1.6	Vehicle data sticker	4
1.7	Warnings for high-voltage vehicles	5
2	Preparations	10
2.1	Vehicle: raising	10
2.2	Engine cover panel: removing and installing	12
2.3	Noise insulation: removing and installing	14
2.4	Window regulators: activating automatic open/close function	15
2.5	Vehicle diagnostic tester: connecting	15
3	Maintenance	18
3.1	Diesel particulate filter: reading out ash deposit volume	22
3.2	ERA-GLONASS: checking emergency call function	23
3.3	Certificate of conformity (COC): checking COC is present in vehicle	23
3.4	Emergency flare: fitted so it is visible from driver's seat or driver's entrance	24
3.5	Emergency call function: checking status LED (must be green before delivery to customer)	24
3.6	Event memory: reading out	24
3.7	Static event memory: working through	25
3.8	Service interval display: resetting service event	25
3.9	Air spring bellows on rear axle: checking for damage and making sure they are seated correctly	26
3.10	Diagnostic work: performing	26
3.11	Transport mode: deactivating	27
3.12	SCR system: checking	27
3.13	Plenum chamber and water drains: checking for dirt and cleaning if necessary	27
3.14	Transport mode: checking activation and activating if necessary	29
3.15	Connected gateway: renewing emergency battery, telematics	29
3.16	Connectivity box: checking emergency battery, telematics	30
3.17	Shipping mode: deactivating	31
3.18	Battery: reading out status	31
3.19	Vehicle diagnosis: completing	33
3.20	Battery: checking electrolyte level	33
3.21	Battery: connecting stationary battery charger (min. 30A, charging voltage max. 14.8 V on IV characteristic curve)	36
3.22	Battery: determining and recording state of charge (SOC)	37
3.23	Mirror hanger indicating defective battery: renewing battery on affected vehicles	40
3.24	Swerve assist and turn-off assist: activating in MMI	40
3.25	Brake fluid: changing	41
3.26	Brake fluid (vehicles older than 12 months): changing	45
3.27	Brake fluid: checking fluid level	46
3.28	Brake system: checking condition of brake hoses, and checking that caps are fitted on bleeder screws	46
3.29	Brake pads: checking thickness	47
3.30	Brake discs: checking for surface rust and operating brakes to clean if necessary	48
3.31	Parking brake: releasing	49
3.32	Tyres: checking condition, age and wear pattern, and checking and recording tread depth	49
3.33	Tyres: checking tyre pressures and adjusting if necessary	50
3.34	Tyres (except spare wheel): checking tyre pressures and adjusting to 3.5 bar if necessary	51



3.35	Tyre Pressure Loss Indicator: storing changed tyre pressures	52
3.36	Tyre repair kit: checking that set is complete, and checking and recording expiry date	52
3.37	Wheel bolts: tightening to specified torque	53
3.38	Suspension struts on front and rear axle: removing locking elements and correctly fitting bump stops	54
3.39	Suspension struts on front axle: removing locking elements on vehicles with sports running gear	56
3.40	Axles (front and rear): checking components for play, secure attachment and damage, and checking protective boots	56
3.41	Engine, gearbox, final drive and steering: checking for leaks and damage	60
3.42	Service disconnect: checking for dirt and damage	61
3.43	Vehicle (from below): checking for damage	61
3.44	Vehicle: cleaning interior and exterior	62
3.45	Underbody: checking trim, wheel housing liners, side members and pipes/wiring for damage, and checking that they are properly secured	62
3.46	Roof insert for panoramic sliding sunroof: checking operation	62
3.47	Water drains - panoramic sliding sunroof: checking	63
3.48	Door hinges with separate door arrester: cleaning and lubricating	63
3.49	Windscreen/rear window washer system: checking spray pattern and adjusting if necessary	64
3.50	Wiper blades: checking for damage	67
3.51	Headlight washer system: checking operation	68
3.52	Headlights: checking for correct adjustment	68
3.53	Headlights and reversing lights, brake lights, side lights, number plate lights, turn signals, hazard warning lights: checking operation	69
3.54	Luggage compartment lighting: checking operation	70
3.55	Luggage compartment: removing protective film and felt pieces	70
3.56	Glove compartment light, interior lighting and reading light: checking operation	71
3.57	Horn: checking operation	71
3.58	Passenger airbag: checking key switch on/off and setting to "on"	72
3.59	Owner's literature: checking that all documents are present	72
3.60	Owner's Manual: attaching vehicle data sticker	72
3.61	Service Schedule: affixing vehicle data sticker	73
3.62	Service Schedule: entering Delivery Inspection	73
3.63	Seat belts: checking retainers for latch plate and belt buckle, and checking locking action of automatic belt retractor	73
3.64	Protective display films: removing if present	74
3.65	Vehicle interior: removing protective film (if present) and protective covers for seats	74
3.66	Vehicle interior: checking that it is clean and cleaning if necessary	74
3.67	ECE towing bracket: checking (if fitted)	74
3.68	Vehicle identification numbers: checking numbers match and are embossed properly	75
3.69	Vehicle interior: removing any objects other than those protecting interior surfaces	75
3.70	Vehicle interior and exterior: checking for and documenting any damage	75
3.71	Instrument cluster: checking warning lamps	75
3.72	Warning triangle: checking availability	76
3.73	First-aid kit: checking and recording expiry date	76
3.74	Vehicle keys: checking operation and recording number of keys given to customer	76
3.75	Vehicle keys: checking operation and recording number of keys given to customer	77
3.76	Vehicle key: removing from ignition lock	77
3.77	Vehicle key(s), wheel covers and owner's literature: checking availability and recording number present	77
3.78	Sun visors: checking that they are folded up and folding up if necessary	77
3.79	Luggage compartment cover and sun blind: checking that they are rolled up and rolling up if necessary	78
3.80	Engine oil: draining	78
3.81	Engine oil: extracting	79
3.82	Engine oil: renewing oil filter	80
3.83	Engine oil: filling up	86

3.84	Engine oil: checking oil level and correcting if necessary	87
3.85	Poly V-belts for ancillaries: checking	88
3.86	Spark plugs: renewing	89
3.87	Coolant level: checking (coolant level must reach at least top marking on coolant expansion tank)	97
3.88	Cooling system for high-voltage system: checking anti-freeze protection and coolant level, and correcting if necessary	100
3.89	Air quality package: renewing fragrance vials	103
3.90	Air filter: renewing filter element and cleaning housing	104
3.91	Dust and pollen filter: renewing	110
3.92	Fuel filter: draining	111
3.93	Fuel filter: renewing	112
3.94	Water separator filter: renewing	114
3.95	Water separator (fuel filter): draining	115
3.96	Fuel tank: adding fuel additive	116
3.97	Reducing agent (AdBlue®): filling up tank completely	117
3.98	Vehicle doors: removing edge protection	122
3.99	Vehicle exterior: checking unprotected areas for dirt, and cleaning if necessary	122
3.100	Vehicle exterior: removing protective film, if present	122
3.101	Vehicle cover: checking position and correcting if necessary	123
3.102	Vehicle cover: removing according to manufacturer's instructions	123
3.103	Paintwork, trims, side windows and wiper blades: checking cleanliness	123
3.104	Body: checking vehicle paintwork for damage and corrosion from below and with bonnet, rear lid and doors open	123
3.105	Vehicles parked outdoors: locking	123
3.106	Road test	123
3.107	Stock vehicles: observing measures specified in maintenance table for stock vehicles (see "Before handing vehicle over to customer")	124
3.108	Accessories: installing	124
3.109	"TQS – Documentation of the vehicle care" checklist: checking that list is present	125
3.110	"Stock vehicle maintenance" checklist: signing and placing in vehicle wallet	125
3.111	Cleaning and care: checking that required measures have been carried out on time	125
3.112	Stock vehicle care management: deciding and recording date of next check	125
3.113	Rear final drive: changing gear oil	125
3.114	Rear final drive: changing ATF	126
3.115	Display instruments: setting time and date	126
3.116	Manual gearbox/automatic gearbox: selecting 1st gear/park	126
3.117	Automatic gearbox (multitronic): changing ATF	126
3.118	Automatic gearbox (Tiptronic): changing ATF	126
3.119	Dual clutch gearbox (S tronic): changing ATF	126
3.120	Dual clutch gearbox (S tronic): changing ATF and renewing exchangeable ATF filter	126
3.121	High-voltage battery: checking state of charge (recommendation: approx. 80% when delivering to customer)	126
3.122	High-voltage battery: charging	127
3.123	High-voltage battery on electric vehicles and hybrid vehicles: charging to a state of charge (SOC) of 3/4 according to manufacturer's instructions	127
3.124	High-voltage battery on electric vehicles and hybrid vehicles: determining and recording state of charge (SOC)	127
3.125	Charging cable: checking that cable is present and complete	127
3.126	Charging socket: checking for dirt and damage	128
3.127	Charging system: checking that system is present and complete	128
3.128	Readiness for sending and receiving information: establishing	129
3.129	Interior mirror: calibrating compass	129
3.130	Poly V-belt for ancillaries: renewing	130
3.131	Instrument cluster: resetting driver information system	130
3.132	Toothed belt for camshaft drive: renewing	130
3.133	Toothed belt for camshaft drive and tensioning roller: renewing	130



4	Exhaust emissions test	131
4.1	Petrol engines: performing exhaust emissions test	131
4.2	Diesel engines: performing exhaust emissions test - up to EU5	139
4.3	Diesel engines: performing exhaust emissions test - from EU6 onwards	148
5	Periodic technical inspection (PTI)	150