

Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 Identification | 1 |
| 1.1 PR number and type of brake system | 1 |
| 2 Safety information | 2 |
| 2.1 Safety precautions when working on the high-voltage system | 2 |
| 2.2 Safety precautions when working in the vicinity of high-voltage components | 2 |
| 2.3 Safety precautions when working on vehicles with start/stop system | 3 |
| 2.4 Safety precautions when using testers and measuring instruments during a road test | 3 |
| 3 Repair instructions | 4 |
| 3.1 Identification plates | 4 |
| 3.2 Use of impact wrenches | 4 |
| 3.3 Rules for cleanliness | 5 |
| 3.4 General repair instructions | 5 |
| 3.5 Nuts, bolts | 5 |
| 3.6 Contact corrosion | 5 |
| 4 Technical data | 7 |
| 4.1 Technical data for brakes | 7 |
| 5 Brake test | 9 |
| 5.1 General notes | 9 |
| 5.2 Checking vehicles on roller dynamometer | 9 |
| 5.3 Checking parking brake | 9 |
| 5.4 Checking brake discs | 10 |
| 6 Electrical components | 17 |
| 6.1 Starting diagnosis | 17 |
| 45 - Anti-lock brake system | 19 |
| 1 Safety information | 19 |
| 2 General notes | 20 |
| 3 Overview of fitting locations | 21 |
| 3.1 Overview of fitting locations - ABS/ESP | 21 |
| 4 Control unit and hydraulic unit | 24 |
| 4.1 Assembly overview - control unit and hydraulic unit | 24 |
| 4.2 Removing and installing ABS control unit J104 / ABS hydraulic unit N55 | 26 |
| 4.3 Separating control unit from hydraulic unit | 31 |
| 4.4 Attaching control unit to hydraulic unit | 32 |
| 5 Sensors | 34 |
| 5.1 Assembly overview - speed sensors on front axle | 34 |
| 5.2 Assembly overview - speed sensors on rear axle | 34 |
| 5.3 Removing and installing brake light switch | 35 |
| 5.4 Removing and installing front wheel speed sensor G45 / G47 | 36 |
| 5.5 Removing and installing rear wheel speed sensor G44 / G46 | 37 |
| 5.6 Checking ABS sensor ring | 37 |
| 46 - Brakes - mechanism | 39 |
| 1 Safety information | 39 |
| 2 Front brakes | 40 |
| 2.1 Assembly overview - front brakes | 40 |
| 2.2 Removing and installing brake pads | 52 |
| 2.3 Removing and installing brake caliper | 64 |
| 2.4 Renewing brake caliper | 74 |
| 2.5 Removing and installing brake disc | 84 |



| | | |
|---------------------------------|--|------------|
| 2.6 | Removing and installing splash plate | 86 |
| 2.7 | Removing and installing pad wear indicator wire | 86 |
| 3 | Rear brakes | 92 |
| 3.1 | Assembly overview - rear brakes | 92 |
| 3.2 | Removing and installing brake pads | 98 |
| 3.3 | Removing and installing brake caliper | 106 |
| 3.4 | Renewing brake caliper | 109 |
| 3.5 | Removing and installing brake carrier | 112 |
| 3.6 | Removing and installing brake disc | 113 |
| 3.7 | Removing and installing splash plate | 115 |
| 3.8 | Removing and installing pad wear indicator wire | 116 |
| 4 | Parking brake | 117 |
| 4.1 | Assembly overview - parking brake | 117 |
| 4.2 | Removing and installing parking brake motor V282 / V283 | 117 |
| 4.3 | Releasing parking brake manually | 119 |
| 5 | Brake pedal | 120 |
| 5.1 | Assembly overview - brake pedal | 120 |
| 5.2 | Removing and installing mounting bracket | 122 |
| 5.3 | Separating brake pedal from brake servo | 123 |
| 5.4 | Connecting brake pedal to brake servo | 124 |
| 5.5 | Removing and installing brake pedal | 124 |
| 47 - Brakes - hydraulics | | 126 |
| 1 | Safety information | 126 |
| 2 | Front brake caliper | 127 |
| 2.1 | Assembly overview - front brake caliper | 127 |
| 2.2 | Removing and installing brake caliper piston | 127 |
| 3 | Rear brake caliper | 133 |
| 3.1 | Assembly overview - rear brake caliper | 133 |
| 3.2 | Removing and installing brake caliper piston | 133 |
| 4 | Brake servo/brake master cylinder | 138 |
| 4.1 | Assembly overview - brake servo/brake master cylinder | 138 |
| 4.2 | Removing and installing brake servo | 146 |
| 4.3 | Removing and installing brake master cylinder | 154 |
| 4.4 | Removing and installing brake fluid reservoir | 157 |
| 4.5 | Removing and installing brake fluid level warning contact F34 | 160 |
| 4.6 | Removing and installing brake system pressure accumulator VX70 | 161 |
| 5 | Vacuum system | 165 |
| 5.1 | Assembly overview - vacuum pump | 165 |
| 5.2 | Checking non-return valve | 170 |
| 5.3 | Removing and installing non-return valve | 171 |
| 5.4 | Removing and installing vacuum pump | 173 |
| 5.5 | Removing and installing vacuum sender G608 | 177 |
| 5.6 | Checking vacuum system | 178 |
| 6 | Hydraulic system | 183 |
| 6.1 | General notes on brake fluid | 183 |
| 6.2 | Bleeding hydraulic system | 184 |
| 6.3 | Pre-bleeding brake system pressure accumulator VX70 | 189 |
| 6.4 | Leak test | 190 |