

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when working on the high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on vehicles with start/stop system	2
1.4 Safety precautions when using testers and measuring instruments during a road test	3
<b>2 Repair instructions</b>	<b>4</b>
2.1 Rules for cleanliness	4
2.2 General notes	4
2.3 Contact corrosion	4
2.4 Routing and attachment of lines and wiring	5
2.5 Identification plates	5
2.6 Use of impact wrenches	5
<b>98 - Assist systems</b>	<b>7</b>
<b>1 Safety information</b>	<b>7</b>
<b>2 Fitting locations</b>	<b>8</b>
2.1 Overview of fitting locations - senders, sensors and control units in front section of vehicle	8
2.2 Overview of fitting locations - senders, sensors and control units in centre section of vehicle	10
2.3 Overview of fitting locations - senders, sensors and control units in rear section of vehicle	12
<b>3 Senders/sensors/control units</b>	<b>16</b>
3.1 Removing and installing rear parking aid sender G203/G204/G205/G206	17
3.2 Removing and installing front parking aid sender G252/G253/G254/G255	19
3.3 Removing and installing front park assist steering sender G568/G569	21
3.4 Removing and installing rear park assist steering sender G716/G717	21
3.5 Removing and installing rear parking aid warning buzzer H15	22
3.6 Removing and installing front parking aid warning buzzer H22	23
3.7 Assembly overview - adaptive cruise control unit	23
3.8 Removing and installing adaptive cruise control unit J428	25
3.9 Removing and installing reversing camera system control unit J772	30
3.10 Assembly overview - lane change assist control unit	30
3.11 Removing and installing lane change assist control unit J769/J770	34
3.12 Removing and installing control unit for night vision system J853	36
3.13 Assembly overview - front radar sensor control unit for object detection	38
3.14 Removing and installing front radar sensor control unit for object detection J1088/J1089	42
3.15 Assembly overview - driver assist systems control unit	44
3.16 Removing and installing driver assist systems control unit J1121	46
3.17 Assembly overview - control unit for laser distance control	47
3.18 Removing and installing control unit for laser distance control J1122	49
3.19 Removing and installing lane change assist warning lamp in exterior mirror K233/K234	53
3.20 Removing and installing reversing camera R189	54
3.21 Assembly overview - camera for night vision system	55
3.22 Removing and installing camera for night vision system R212	55
3.23 Assembly overview - front camera for driver assist systems	57
3.24 Removing and installing front camera for driver assist systems R242	58
3.25 Removing and installing front overhead view camera R243	61
3.26 Removing and installing right/left overhead view camera R244/R245	62
3.27 Removing and installing rear overhead view camera R246	63
<b>4 Adaptive cruise control</b>	<b>65</b>
4.1 Layout - adaptive cruise control	65
4.2 Adjusting adaptive cruise control	65



<b>5</b>	<b>Parking aid/park assist steering/autonomous parking</b>	<b>77</b>
5.1	Layout - parking aid/park assist steering/autonomous parking	77
<b>6</b>	<b>Lane change assist</b>	<b>79</b>
6.1	Layout - lane change assist	79
6.2	Calibrating lane change assist	79
<b>7</b>	<b>Front corner radar</b>	<b>89</b>
7.1	Layout - front corner radar	89
7.2	Calibrating front corner radar	89
<b>8</b>	<b>Reversing camera system</b>	<b>97</b>
8.1	Layout - reversing camera system	97
8.2	Calibrating reversing camera system	97
<b>9</b>	<b>Night vision system</b>	<b>104</b>
9.1	Layout - night vision system	104
9.2	Calibrating night vision system	104
<b>10</b>	<b>Overhead view camera</b>	<b>113</b>
10.1	Layout - overhead view camera	113
10.2	Calibrating overhead view camera	113
<b>11</b>	<b>Front camera for driver assist systems</b>	<b>117</b>
11.1	Layout - front camera for driver assist systems	117
11.2	Calibrating front camera for driver assist systems	117