

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on pyrotechnic components	2
1.2 Safety precautions when working on vehicles with high-voltage system	4
1.3 Safety precautions when working in the vicinity of high-voltage components	5
1.4 Safety precautions when working on the high-voltage system	5
1.5 Safety precautions when working on vehicles with start/stop system	6
1.6 Storing, transporting and disposing of airbag units, belt tensioner units and battery isolators (pyrotechnic components)	6
1.7 Additional safety regulations for side airbags	6
1.8 Additional safety regulations for curtain airbags	7
1.9 Safety regulations for crash sensors (pressure sensors) for front side airbag	8
1.10 Additional safety regulations for working on seat occupied sensor controlling deactivation of front passenger airbag - country-specific version	8
1.11 Procedure for dealing with seat occupied sensor controlling deactivation of front passenger airbag following an accident - country-specific version	9
1.12 Renewing pyrotechnic, electrical and mechanical components of the restraint system following an accident	9
1.13 Additional safety regulations for active head restraints	11
1.14 Checking airbag mounting components following an accident	11
1.15 Accident in which no airbag was triggered	12
1.16 Checking seat belts	12
1.17 Checking belt webbing	12
1.18 Checking automatic belt retractor (locking action)	13
1.19 Visual inspection of belt buckle	14
1.20 Functional check of belt buckle	14
1.21 Checking guide fittings and latch plate	14
1.22 Checking securing components and anchorage points following an accident	14
1.23 Checking child seat restraint function of seat belt for additional child seats (not for driver seat belt; country-specific version)	15
1.24 Checking child seat anchors following an accident	15
1.25 Safety regulations for automatic anti-dazzle interior mirror	15
2 Repair instructions	17
2.1 Contact corrosion	17
2.2 Routing and attachment of pipes, hoses and wiring	17
2.3 Use of impact wrenches	17
2.4 Identification plates	18
68 - Interior equipment	19
1 Safety information	19
2 Storage compartments/covers/trim panels	20
2.1 Overview of fitting locations - storage compartments/covers/trim panels	20
2.2 Assembly overview - dash panel cover (driver side)	21
2.3 Assembly overview - steering column trim	22
2.4 Assembly overview - glove compartment	23
2.5 Removing and installing dash panel cover (driver side)	24
2.6 Removing and installing footwell cover (driver side)	25
2.7 Removing and installing upper steering column trim	27
2.8 Removing and installing lower steering column trim	28
2.9 Removing and installing glove compartment opening mechanism	30
2.10 Removing and installing lock cylinder for glove compartment opening mechanism	31
2.11 Removing and installing glove compartment	32
3 Equipment	35
3.1 Assembly overview - sun visors	35



3.2	Removing and installing sun visor	35
3.3	Removing and installing sun visor centre mount	36
3.4	Removing and installing grab handle	37
4	Centre console	39
4.1	Assembly overview - centre console	39
4.2	Removing and installing centre console trim (rear)	44
4.3	Removing and installing centre console trim (side)	46
4.4	Removing and installing cover for centre console	47
4.5	Removing and installing centre console insert	48
4.6	Removing and installing front centre console storage compartment	50
4.7	Removing and installing centre console trim	51
4.8	Removing and installing front centre console footwell trim	52
4.9	Removing and installing centre console	53
4.10	Removing and installing cup holder	55
4.11	Removing and installing vent (rear) in centre console	56
4.12	Removing and installing trim	57
5	Front centre armrest	58
5.1	Assembly overview - front centre armrest	58
5.2	Removing and installing front centre armrest	58
5.3	Removing and installing upper part of centre armrest	59
6	Interior mirror	62
6.1	Assembly overview - interior mirror	62
6.2	Removing and installing interior mirror	62
69	- Passenger protection	66
1	Safety information	66
2	Seat belts	67
2.1	Overview of fitting locations - seat belts and anchorage points	67
2.2	Assembly overview - front three-point seat belt	69
2.3	Assembly overview - rear outer three-point seat belt	72
2.4	Assembly overview - rear centre three-point seat belt	74
2.5	Assembly overview - front belt buckle	74
2.6	Assembly overview - rear belt buckle	75
2.7	Removing and installing front three-point seat belt	77
2.8	Removing and installing rear three-point seat belt	81
2.9	Removing and installing front belt guide	84
2.10	Removing and installing rear belt guide	85
2.11	Removing and installing front belt end fitting	87
2.12	Removing and installing rear outer belt end fitting	89
2.13	Removing and installing belt height adjuster	90
2.14	Removing and installing front belt buckle	91
2.15	Removing and installing rear belt buckle	92
3	Child seat anchors	94
3.1	Assembly overview - front child seat anchors	94
3.2	Assembly overview - rear child seat anchors	94
3.3	Removing and installing front child seat anchor	95
3.4	Removing and installing rear child seat anchor	97
4	Airbag system	99
4.1	Overview of fitting locations - airbag system	99
5	Airbag control unit	102
5.1	Assembly overview - airbag control unit	102
5.2	Removing and installing airbag control unit J234	102
6	Battery isolation igniter	106
6.1	Assembly overview - battery isolation igniter	106

6.2	Removing and installing battery isolation igniter	108
6.3	Removing and installing battery isolation igniter, 48 V N751	109
7	Driver airbag	110
7.1	Assembly overview - driver airbag	110
7.2	Removing and installing airbag unit with igniters	110
7.3	Removing and installing connector at airbag	115
8	Front passenger airbag	118
8.1	Assembly overview - front passenger airbag	118
8.2	Removing and installing front passenger airbag unit with igniters	119
8.3	Removing and installing key-operated switch to deactivate airbag on front passenger side	121
9	Side airbags	124
9.1	Assembly overview - front side airbag	124
9.2	Assembly overview - rear side airbag	124
9.3	Removing and installing front side airbag with igniter	125
9.4	Removing and installing rear side airbag with igniter	128
9.5	Removing and installing wire for front side airbag	131
10	Curtain airbags	134
10.1	Assembly overview - curtain airbag	134
10.2	Removing and installing curtain airbag with igniter	134
11	Knee airbags	139
11.1	Assembly overview - knee airbag	139
11.2	Removing and installing knee airbag with igniter	140
12	Crash sensors for airbags	146
12.1	Overview of fitting locations - crash sensors for airbags	146
12.2	Removing and installing front airbag crash sensor for driver side G283	148
12.3	Removing and installing front side airbag crash sensor G179/G180	153
12.4	Removing and installing rear side airbag crash sensor G256/G257	155
13	Seat position sensor	158
13.1	Assembly overview - seat position sensor	158
13.2	Removing and installing seat position sensor	158
14	Belt-fastened recognition system	162
14.1	Assembly overview - seat occupied sensor	162
14.2	Removing and installing seat occupied sensor on front passenger side G128	162
14.3	Removing and installing seat occupied sensor (rear) G177/G178/G1010	163
15	Seat occupied recognition system	165
15.1	Overview of fitting locations - seat occupied recognition system	165
15.2	Removing and installing seat occupied sensor	167
16	Pedestrian protection	170
16.1	Assembly overview - pedestrian protection	170
16.2	Removing and installing crash sensor for pedestrian protection G570/G571	172
16.3	Removing and installing front pressure hose sensor for pedestrian protection G579	174
16.4	Removing and installing centre crash sensor for pedestrian protection G693	176
16.5	Resetting triggered pedestrian protection system	178
16.6	Removing and installing trigger for pedestrian protection G598/G599	178
70	Trim, insulation	180
1	Safety information	180
2	Front door trim	181
2.1	Assembly overview - front door trim	181
2.2	Removing and installing loudspeaker trim in door trim	183
2.3	Removing and installing trim panel	184
2.4	Removing and installing front door trim	185
2.5	Removing and installing front door puller	188
2.6	Removing and installing interior door handle	190



2.7	Removing and installing cover for mirror triangle	191
3	Rear door trim	192
3.1	Assembly overview - rear door trim	192
3.2	Removing and installing loudspeaker trim in door trim	194
3.3	Removing and installing trim panel	195
3.4	Removing and installing rear door trim	195
3.5	Removing and installing rear door puller	198
3.6	Removing and installing interior door handle	200
4	Dash panel	201
4.1	Assembly overview - dash panel	201
4.2	Removing and installing dash panel cover (side)	205
4.3	Removing and installing trim for dash panel insert	205
4.4	Removing and installing loudspeaker trim	206
4.5	Removing and installing trim panel for dash panel	208
4.6	Removing and installing carrier for trim panel for dash panel	214
4.7	Removing and installing dash panel	216
4.8	Removing and installing cover for dash panel/head-up display	221
4.9	Removing and installing loudspeaker mounting	222
4.10	Removing and installing outer dash panel vent	223
4.11	Removing and installing centre vent	223
4.12	Removing and installing front centre defroster vent	224
5	Dash panel cross member	226
5.1	Assembly overview - dash panel cross member	226
5.2	Removing and installing dash panel cross member	229
5.3	Removing and installing support for knee bolster	234
6	Passenger compartment trim panels	236
6.1	Overview of fitting locations - passenger compartment trim panels	236
6.2	Assembly overview - sill panel moulding	237
6.3	Assembly overview - A-pillar trim	238
6.4	Assembly overview - B-pillar trim	240
6.5	Assembly overview - C-pillar trim	241
6.6	Assembly overview - D-pillar trim	242
6.7	Assembly overview - foot rest and floor covering	243
6.8	Assembly overview - rear shelf	245
6.9	Removing and installing sill panel moulding	247
6.10	Removing and installing A-pillar trim	248
6.11	Removing and installing B-pillar trim	253
6.12	Removing and installing C-pillar trim	256
6.13	Removing and installing D-pillar trim	258
6.14	Removing and installing foot rest	261
6.15	Removing and installing floor covering	262
6.16	Removing and installing rear shelf	264
6.17	Servicing rear shelf	265
7	Luggage compartment trim panels	268
7.1	Overview of fitting locations - luggage compartment trim panels	268
7.2	Assembly overview - luggage compartment side trim	269
7.3	Assembly overview - luggage compartment floor	272
7.4	Assembly overview - rear lid trim	274
7.5	Removing and installing lower rear lid trim	276
7.6	Removing and installing upper rear lid trim	278
7.7	Removing and installing luggage compartment side trim	279
7.8	Removing and installing luggage compartment floor	284
7.9	Removing and installing lock carrier trim	285
7.10	Removing and installing fastening ring	286
7.11	Removing and installing frame for loading aid	286

7.12	Removing and installing bag hook	287
7.13	Removing and installing grip for rear luggage compartment floor	287
7.14	Removing and installing lining for spare wheel well	289
7.15	Removing and installing tail light cover	290
8	Roof trim panels	291
8.1	Assembly overview - moulded headliner	291
8.2	Removing and installing moulded headliner	292
8.3	Lowering moulded headliner	292
8.4	Lowering moulded headliner for removal of roof aerial	296
8.5	Removing and installing roof reinforcement	299