

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when working on vehicles with start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when working on the cooling system	1
1.4 Safety precautions when working on the high-voltage system	2
1.5 Safety precautions when working in the vicinity of high-voltage components	3
<b>2 Repair instructions</b>	<b>4</b>
2.1 Routing and attachment of pipes, hoses and wiring	4
2.2 Contact corrosion	4
2.3 Preparations for installation of self-adhesive components	4
2.4 General information on using adhesives	6
2.5 Secure threaded connections	7
2.6 Identification plates	7
2.7 Use of impact wrenches	7
<b>3 Electrical components</b>	<b>9</b>
3.1 Starting diagnosis	9
<b>50 - Body - front</b>	<b>10</b>
<b>1 Safety information</b>	<b>10</b>
<b>2 Lock carrier</b>	<b>11</b>
2.1 Assembly overview - lock carrier	11
2.2 Assembly overview - insert	13
2.3 Removing and installing lock carrier	14
2.4 Removing and installing lower longitudinal member	21
2.5 Removing and installing bracket with spring element	22
2.6 Removing and installing mounting for bracket with spring element	22
2.7 Removing and installing insert	23
<b>3 Wing</b>	<b>24</b>
3.1 Assembly overview - wing	24
3.2 Removing and installing wing	30
3.3 Removing and installing wing panel brace	32
3.4 Removing and installing front cover for wing	32
3.5 Removing and installing rear cover for wing	32
3.6 Removing and installing closure plate	33
<b>4 Bulkhead</b>	<b>35</b>
4.1 Assembly overview - bulkhead	35
4.2 Assembly overview - plenum chamber cover	35
4.3 Removing and installing headlight cover	36
4.4 Removing and installing plenum chamber bulkhead	38
4.5 Removing and installing plenum chamber cover	41
<b>55 - Bonnet, rear lid</b>	<b>42</b>
<b>1 Safety information</b>	<b>42</b>
<b>2 Bonnet</b>	<b>43</b>
2.1 Assembly overview - bonnet	43
2.2 Assembly overview - Bowden cable	45
2.3 Removing and installing bonnet	47
2.4 Adjusting bonnet	47
2.5 Removing and installing hinges	52
2.6 Resetting hinge	53
2.7 Removing and installing striker	53



2.8	Removing and installing gas strut	54
2.9	Releasing gas from gas strut	55
2.10	Removing and installing impact guard	55
2.11	Removing and installing Bowden cable	56
2.12	Removing and installing bonnet lock	63
2.13	Removing and installing operating lever for arrester	65
2.14	Removing and installing operating lever for bonnet lock	65
2.15	Removing and installing mounting bracket for operating lever for bonnet lock	65
2.16	Removing and installing mounting bracket with Bowden cable for operating lever for arrester	66
<b>3</b>	<b>Rear lid</b>	<b>67</b>
3.1	Assembly overview - rear lid	67
3.2	Assembly overview - manual release cable, rear lid locking mechanism	73
3.3	Assembly overview - rear lid power opening	76
3.4	Removing and installing rear lid	82
3.5	Adjusting rear lid	85
3.6	Removing and installing hinges	93
3.7	Removing and installing mounting for motor for rear lid	95
3.8	Removing and installing rear lid seal	96
3.9	Removing and installing roof frame trim	97
3.10	Removing and installing adjusting buffer	100
3.11	Removing and installing stop for adjusting buffer	101
3.12	Removing and installing gas strut	101
3.13	Releasing gas from gas strut	102
3.14	Removing and installing extension spring	102
3.15	Removing and installing rear lid lock	102
3.16	Removing and installing striker	104
3.17	Removing and installing power latching motor for rear lid V382	104
3.18	Removing and installing Bowden cable for power latching system	105
3.19	Removing and installing motor for rear lid	107
3.20	Adapting rear lid drive unit V444 / V445 / VX69 / rear lid drive unit 2 VX77	109
3.21	Preparing rear lid drive unit VX69 / rear lid drive unit 2 VX77 for disposal	109
3.22	Removing and installing rear lid control unit J605	110
3.23	Removing and installing rear lid power opening control unit J938	111
3.24	Removing and installing rear lid power opening sender G750 / G760	111
<b>4</b>	<b>Tank flap unit</b>	<b>114</b>
4.1	Assembly overview - tank flap unit	114
4.2	Removing and installing tank flap unit	114
4.3	Removing and installing trim panel for tank flap	116
4.4	Removing and installing drain hose for tank flap unit	116
4.5	Removing and installing manual release cable	117
<b>5</b>	<b>Charging flap unit</b>	<b>118</b>
5.1	Assembly overview - charging flap unit	118
5.2	Removing and installing charging flap unit	118
5.3	Removing and installing charging flap unit trim	120
5.4	Removing and installing manual release cable for high-voltage charging flap lock	121
<b>57</b>	<b>Front doors, door components, central locking</b>	<b>122</b>
<b>1</b>	<b>Safety information</b>	<b>122</b>
<b>2</b>	<b>Door</b>	<b>123</b>
2.1	Assembly overview - door	123
2.2	Assembly overview - door seals	126
2.3	Removing and installing door	128
2.4	Adjusting door	129
2.5	Removing and installing door arrester	136

2.6	Removing and installing impact bar	137
2.7	Removing and installing inner door seal	138
2.8	Removing and installing retainer for inner door seal	139
2.9	Removing and installing door seal for roof trim strip	141
2.10	Removing and installing outer door seal	142
2.11	Removing and installing door joint seal	151
<b>3</b>	<b>Door components</b>	<b>153</b>
3.1	Assembly overview - window regulator	153
3.2	Assembly overview - door handle and door lock	155
3.3	Assembly overview - window guides and window slot seals	158
3.4	Removing and installing window regulator	159
3.5	Removing and installing window regulator motor	162
3.6	Removing and installing door handle	163
3.7	Removing and installing door handle trim	164
3.8	Removing and installing trim strip for door handle	165
3.9	Removing and installing mounting bracket	166
3.10	Removing and installing operating cable for exterior door handle	169
3.11	Removing and installing lock cylinder	170
3.12	Removing and installing cap on door handle	171
3.13	Removing and installing trim strip for cap	171
3.14	Removing and installing door lock	172
3.15	Removing and installing striker	176
3.16	Removing and installing operating cable for interior door handle	176
3.17	Removing and installing inner door cover	177
3.18	Removing and installing door power latching motor V302 / V303	178
3.19	Removing and installing window guide	179
3.20	Removing and installing inner window slot seal	179
3.21	Removing and installing outer window slot seal	180
<b>4</b>	<b>Central locking system</b>	<b>183</b>
4.1	Overview of fitting locations - central locking system	183
4.2	Removing and installing driver door control unit J386 / front passenger door control unit J387	185
4.3	Removing and installing rear left door control unit J388 / rear right door control unit J389	185
4.4	Removing and installing convenience system central control unit J393	186
4.5	Removing and installing bonnet contact switch F266 / bonnet contact switch 2 F329	187
4.6	Removing and installing tank filler flap locking motor V155	187
4.7	Removing and installing actuator for high-voltage charging flap lock 1 F496	188
<b>58</b>	<b>Rear doors, door components</b>	<b>189</b>
<b>1</b>	<b>Safety information</b>	<b>189</b>
<b>2</b>	<b>Door</b>	<b>190</b>
2.1	Assembly overview - door	190
2.2	Assembly overview - door seals	193
2.3	Removing and installing door	196
2.4	Adjusting door	196
2.5	Removing and installing door arrester	202
2.6	Removing and installing inner protective padding	203
2.7	Removing and installing inner door seal	203
2.8	Removing and installing retainer for inner door seal	205
2.9	Removing and installing outer door seal	206
2.10	Removing and installing door joint seal	215
<b>3</b>	<b>Door components</b>	<b>220</b>
3.1	Assembly overview - window regulator	220
3.2	Assembly overview - door handle and door lock	223
3.3	Assembly overview - window guides and window slot seals	226

3.4	Removing and installing window regulator	227
3.5	Removing and installing window regulator motor	231
3.6	Removing and installing door handle	232
3.7	Removing and installing door handle trim	233
3.8	Removing and installing trim strip for door handle	234
3.9	Removing and installing mounting bracket	235
3.10	Removing and installing operating cable for exterior door handle	238
3.11	Removing and installing housing	239
3.12	Removing and installing cap on door handle	240
3.13	Removing and installing trim strip for cap	240
3.14	Removing and installing door lock	241
3.15	Removing and installing striker	243
3.16	Removing and installing operating cable for interior door handle	243
3.17	Removing and installing inner door cover	243
3.18	Removing and installing door power latching motor V541 / V542	245
3.19	Removing and installing window guide	245
3.20	Removing and installing inner window slot seal	246
3.21	Removing and installing outer window slot seal	247
<b>60</b>	<b>- Sunroof</b>	<b>248</b>
<b>1</b>	<b>Safety information</b>	<b>248</b>
<b>2</b>	<b>Repair instructions</b>	<b>249</b>
2.1	Minimum drying times for bonded sunroofs	249
2.2	Tools and materials required for installation and removal	249
2.3	Preparing new glass trim for installation	252
2.4	Preparing new side trim for installation	254
2.5	Preparing undamaged sunroof frame for installation	255
2.6	Preparing a new sunroof frame for installation	256
2.7	Preparing body flange for installation	257
2.8	Preparing a new glass panel (rear) for installation	258
2.9	Cleaning off adhesive sealant	259
<b>3</b>	<b>Sliding sunroof</b>	<b>261</b>
3.1	Assembly overview - sliding sunroof	261
3.2	Assembly overview - slide and tilt mechanism	268
3.3	Assembly overview - glass panel (rear)	270
3.4	Assembly overview - adhesive beads on sliding sunroof	272
3.5	Assembly overview - sunroof roller blind	281
3.6	Assembly overview - wind deflector	288
3.7	Removing and installing sliding sunroof frame	290
3.8	Removing and installing glass trim	322
3.9	Removing and installing glass panel	328
3.10	Adjusting glass panel	338
3.11	Removing and installing sliding sunroof adjustment control unit J245	344
3.12	Removing and installing rear sliding sunroof control unit J392	345
3.13	Adapting sliding sunroof adjustment control unit J245	346
3.14	Adapting rear sliding sunroof control unit J392	347
3.15	Removing and installing sliding sunroof motor V1	347
3.16	Adapting sliding sunroof motor V1	348
3.17	Removing and installing side trim	349
3.18	Removing and installing slide and tilt mechanism	352
3.19	Removing and installing cable for slide and tilt mechanism	355
3.20	Removing and installing sliding sunroof seals	359
3.21	Removing and installing sunroof roller blind	363
3.22	Removing and installing cables for sunroof roller blind	373
3.23	Removing and installing sunroof roller blind motor V260	376
3.24	Removing and installing sunroof roller blind motor 2 V583	377

3.25	Adapting sunroof roller blind motor V260 .....	378
3.26	Adapting sunroof roller blind motor 2 V583 .....	378
3.27	Removing and installing wind deflector .....	379
3.28	Manual actuation .....	380
<b>4</b>	<b>Water drain hoses .....</b>	<b>381</b>
4.1	Assembly overview - water drain hoses .....	381
4.2	Cleaning water drain hoses .....	383
4.3	Removing and installing water drain hoses .....	384
<b>63</b>	<b>- Bumpers .....</b>	<b>385</b>
<b>1</b>	<b>Safety information .....</b>	<b>385</b>
<b>2</b>	<b>Front bumper .....</b>	<b>386</b>
2.1	Assembly overview - bumper cover .....	386
2.2	Assembly overview - bumper carrier .....	407
2.3	Removing and installing bumper cover .....	408
2.4	Adjusting bumper cover .....	414
2.5	Removing and installing bumper cover mounting .....	415
2.6	Removing and installing cover for headlight washer jet .....	415
2.7	Removing and installing centre air intake grille .....	416
2.8	Removing and installing side air intake grille for front bumper .....	422
2.9	Removing and installing air duct (side) .....	426
2.10	Removing and installing trim panels .....	432
2.11	Removing and installing front spoiler .....	435
2.12	Removing and installing underbody guard .....	439
2.13	Removing and installing closure plate for bumper cover .....	439
2.14	Removing and installing lock carrier cover .....	440
2.15	Removing and installing bumper carrier .....	441
2.16	Removing and installing connecting brace .....	444
2.17	Removing and installing moulded foam insert .....	445
2.18	Removing and installing mounting for moulded foam insert .....	446
<b>3</b>	<b>Rear bumper .....</b>	<b>447</b>
3.1	Assembly overview - bumper cover .....	447
3.2	Assembly overview - bumper carrier .....	469
3.3	Removing and installing bumper cover .....	471
3.4	Removing and installing base plate for bumper cover .....	477
3.5	Removing and installing underbody guard .....	480
3.6	Removing and installing bumper cover mounting .....	481
3.7	Removing and installing trim strip for bumper cover .....	485
3.8	Removing and installing reflectors .....	492
3.9	Removing and installing bumper carrier .....	494
3.10	Removing and cover for bumper carrier .....	496
<b>64</b>	<b>- Glazing .....</b>	<b>497</b>
<b>1</b>	<b>Safety information .....</b>	<b>497</b>
<b>2</b>	<b>Repair instructions .....</b>	<b>498</b>
2.1	Minimum drying times for bonded windows .....	498
2.2	Repairing windscreen .....	498
2.3	Tools and materials required for installation and removal .....	499
2.4	Preparing undamaged windows for installation .....	502
2.5	Preparing new windows for installation .....	502
2.6	Preparing body flange for installation .....	503
2.7	Cleaning off adhesive sealant .....	504
<b>3</b>	<b>Windscreen .....</b>	<b>505</b>
3.1	Assembly overview - windscreen .....	505
3.2	Removing and installing windscreen .....	507



3.3	Removing and installing heated windscreen control unit J505	512
<b>4</b>	<b>Rear window</b>	<b>513</b>
4.1	Assembly overview - rear window	513
4.2	Removing and installing rear window	516
<b>5</b>	<b>Side windows</b>	<b>531</b>
5.1	Assembly overview - rear side window	531
5.2	Removing and installing rear side window	533
<b>6</b>	<b>Door windows</b>	<b>543</b>
6.1	Assembly overview - front door window	543
6.2	Assembly overview - rear door window	544
6.3	Removing and installing front door window	547
6.4	Adjusting front door window	550
6.5	Removing and installing rear door window	555
6.6	Adjusting rear door window	559
<b>66</b>	<b>Exterior equipment</b>	<b>565</b>
<b>1</b>	<b>Safety information</b>	<b>565</b>
<b>2</b>	<b>Radiator grille/front trim</b>	<b>566</b>
2.1	Assembly overview - radiator grille	566
2.2	Removing and installing radiator grille	570
2.3	Preparing new radiator grille for installation	572
2.4	Attaching number plate - country-specific version	577
2.5	Removing and installing centre closure plate	578
2.6	Removing and installing number plate carrier	580
2.7	Attaching number plate - from model upgrade onwards	581
2.8	Removing and installing cover for sensor	582
2.9	Securing mounting for parking aid sender to radiator grille	590
<b>3</b>	<b>Spoilers</b>	<b>591</b>
3.1	Assembly overview - spoilers	591
3.2	Removing and installing spoiler	595
3.3	Removing and installing spoiler (side)	603
3.4	Removing and installing spoiler blade	605
3.5	Removing and installing spoiler cover	606
3.6	Adjusting spoiler	607
3.7	Removing and installing water drain hose	610
3.8	Removing and installing rear spoiler adjustment control unit J223	610
<b>4</b>	<b>Strips/trim panels/extensions</b>	<b>611</b>
4.1	Assembly overview - trim strips	611
4.2	Assembly overview - door covers	612
4.3	Assembly overview - sill panel trim	613
4.4	Assembly overview - side member trim	614
4.5	Assembly overview - water deflector strip	616
4.6	Assembly overview - trim panel for A-pillar	617
4.7	Assembly overview - trim panel for B-pillar	618
4.8	Assembly overview - trim panel for C-pillar	620
4.9	Assembly overview - wheel arch covers, A6 allroad	621
4.10	Removing and installing trim strip	622
4.11	Removing and installing cover	624
4.12	Removing and installing sill panel trim	627
4.13	Removing and installing side member trim	629
4.14	Removing and installing trim panel for side member trim	632
4.15	Removing and installing water deflector strip	635
4.16	Removing and installing trim panel for A-pillar	636
4.17	Removing and installing trim panel for B-pillar on door	637
4.18	Removing and installing trim panel for B-pillar	638

4.19	Removing and installing trim panel for C-pillar on door	639
4.20	Removing and installing wheel arch covers - A6 allroad	640
<b>5</b>	<b>Noise insulation</b>	<b>644</b>
5.1	Assembly overview - noise insulation	644
<b>6</b>	<b>Underbody cladding</b>	<b>645</b>
6.1	Assembly overview - underbody cladding	645
6.2	Assembly overview - underbody struts	647
6.3	Removing and installing tunnel cross-piece	650
6.4	Removing and installing diagonal struts	651
<b>7</b>	<b>Decorative film/protective film</b>	<b>655</b>
7.1	Removing and installing protective films	655
<b>8</b>	<b>Roof strips/roof rails</b>	<b>657</b>
8.1	Assembly overview - roof rail	657
8.2	Assembly overview - roof trim strip, A7 Sportback	661
8.3	Removing and installing roof rail	662
8.4	Removing and installing compensation element	662
8.5	Removing and installing roof trim strip - A7 Sportback	663
<b>9</b>	<b>Exterior mirrors</b>	<b>665</b>
9.1	Assembly overview - exterior mirror	665
9.2	Removing and installing exterior mirror	667
9.3	Removing and installing mirror glass	671
9.4	Removing and installing mirror adjustment unit	672
9.5	Removing and installing mirror trim (bottom)	672
9.6	Removing and installing mirror trim	674
<b>10</b>	<b>Wheel housing liners</b>	<b>676</b>
10.1	Assembly overview - front wheel housing liner	676
10.2	Assembly overview - rear wheel housing liner	677
<b>11</b>	<b>Lettering and badges</b>	<b>679</b>
11.1	Dimensions - lettering and badges at rear	679
11.2	Dimensions - lettering and badges on sides	683
11.3	General notes on renewing lettering and badges	684
11.4	Removing and installing lettering and badges for radiator grille	685
<b>12</b>	<b>Towing bracket</b>	<b>690</b>
12.1	Assembly overview - towing bracket	690
12.2	Removing and installing trailer detector control unit J345	690
<b>13</b>	<b>Heat shields</b>	<b>692</b>
13.1	Overview of fitting locations - heat shields	692
13.2	Removing and installing heat shield for plenum chamber bulkhead	696
13.3	Removing and installing heat shield for propshaft	697
13.4	Removing and installing heat shield for tunnel (front)	697
13.5	Removing and installing heat shield for tunnel (centre)	698
13.6	Removing and installing heat shield for tunnel (rear)	698
13.7	Removing and installing heat shield for charging unit	699
13.8	Removing and installing heat shield for rear silencer	700