

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Checking child seat anchors following an accident	1
<b>2 Repair instructions</b>	<b>2</b>
2.1 Routing and attachment of pipes, hoses and wiring	2
2.2 Contact corrosion	2
2.3 Secure threaded connections	2
2.4 Identification plates	2
2.5 Impact wrenches	2
<b>72 - Seat frames</b>	<b>4</b>
<b>1 Safety information</b>	<b>4</b>
<b>2 Front seats</b>	<b>6</b>
2.1 Assembly overview - front seat	7
2.2 Assembly overview - backrest	7
2.3 Assembly overview - seat pan	9
2.4 Assembly overview - seat rake adjuster	16
2.5 Assembly overview - head restraint	17
2.6 Overview of fitting locations - electrical and electronic components	18
2.7 Removing and installing front seat	21
2.8 Attaching front seat to seat repair stand	27
2.9 Removing and installing backrest	28
2.10 Removing and installing backrest cover panel	29
2.11 Removing and installing spring mat	33
2.12 Removing and installing backrest adjuster	33
2.13 Removing and installing lumbar support adjustment motor V125 / V126 / V129 / V130	34
2.14 Removing and installing front seat fans	35
2.15 Removing and installing seat frame trim	38
2.16 Removing and installing bracket for seat frame trim/control unit/compressor	44
2.17 Removing and installing seat rail cover	45
2.18 Removing and installing seat height adjuster	47
2.19 Removing and installing seat longitudinal adjustment handle	49
2.20 Removing and installing seat rake adjuster	50
2.21 Removing and installing carrier for seat depth adjuster - convenience seat	50
2.22 Removing and installing trim for seat depth adjuster	51
2.23 Removing and installing retainer for Owner's Manual	52
2.24 Removing and installing bracket for fire extinguisher	53
2.25 Removing and installing storage compartment	53
2.26 Removing and installing head restraint	54
2.27 Removing and installing head restraint guide	55
2.28 Connecting and disconnecting modular wiring	56
2.29 Removing and installing seat adjustment operating unit E470 / E471	57
2.30 Removing and installing switch/switch module for front seat	58
2.31 Removing and installing control unit for seat functions	58
2.32 Removing and installing carrier for multimedia system display unit	59
<b>3 Rear seats</b>	<b>62</b>
3.1 Assembly overview - rear bench seat	62
3.2 Assembly overview - rear seat backrest	63
3.3 Assembly overview - centre armrest	66
3.4 Assembly overview - locking mechanism	69
3.5 Assembly overview - head restraint and head restraint guide	70
3.6 Overview of fitting locations - electrical and electronic components	72
3.7 Removing and installing rear bench seat	73



3.8	Removing and installing rear seat backrest	75
3.9	Removing and installing backrest with load-through hatch	78
3.10	Removing and installing trim for backrest with load-through hatch	79
3.11	Removing and installing outer bearing sleeve	79
3.12	Removing and installing inner pivot pin	80
3.13	Removing and installing centre mounting	80
3.14	Removing and installing backrest remote release mechanism	81
3.15	Removing and installing locking mechanism for rear seat backrest	82
3.16	Removing and installing trim for locking mechanism	83
3.17	Removing and installing lock cylinder	84
3.18	Removing and installing rear seat fan	85
3.19	Removing and installing centre armrest	86
3.20	Removing and installing centre armrest storage compartment (rear)	87
3.21	Removing and installing frame for centre armrest insert	87
3.22	Removing and installing trim for centre console insert	88
3.23	Removing and installing cover (top) for centre armrest	89
3.24	Removing and installing cup holder	90
3.25	Removing and installing head restraint	92
3.26	Removing and installing head restraint guide	95
3.27	Removing and installing control unit for seat adjustment	97
<b>4</b>	<b>Front seat pneumatic system</b>	<b>99</b>
4.1	Connection diagram - pneumatic system, convenience seat	99
4.2	Assembly overview - pneumatic system	100
4.3	Checking pneumatic system	102
4.4	Severing and connecting pneumatic lines	106
4.5	Servicing pneumatic lines	107
4.6	Removing and installing compressor for pneumatic system	107
4.7	Removing and installing lumbar support with air cushions - module with valve block and backrest bolster adjusters	108
4.8	Removing and installing air cushion for seat bolster adjustment	110
4.9	Removing and installing valve block for massage function	110
4.10	Removing and installing massage mat	111
<b>5</b>	<b>Rear seat pneumatic system</b>	<b>113</b>
5.1	Connection diagram - pneumatic system	113
5.2	Assembly overview - pneumatic system	113
5.3	Checking pneumatic system	114
5.4	Severing and connecting pneumatic lines	118
5.5	Removing and installing compressor for pneumatic system	119
5.6	Removing and installing lumbar support - module with air cushions and valve block	120
5.7	Removing and installing valve block for massage function	120
5.8	Removing and installing massage mat	121
<b>74</b>	<b>Seat - padding, covers</b>	<b>122</b>
<b>1</b>	<b>Safety information</b>	<b>122</b>
<b>2</b>	<b>Covers and padding on front seats</b>	<b>123</b>
2.1	Assembly overview - seat pan cover and padding	123
2.2	Assembly overview - backrest cover and padding	125
2.3	Assembly overview - seat heater elements	128
2.4	Removing and installing seat pan cover and padding	130
2.5	Separating seat pan cover and padding	138
2.6	Removing and installing backrest cover and padding	140
2.7	Separating backrest cover and padding	148
2.8	Removing and installing seat heater element Z6 / Z8	149
2.9	Removing and installing seat bolster heater element	150
2.10	Removing and installing seat depth adjuster heater element	151
2.11	Removing and installing backrest heater element Z7 / Z9	151

<b>3</b>	<b>Covers and padding on rear seats</b> .....	<b>153</b>
3.1	Assembly overview - cover and padding .....	153
3.2	Assembly overview - seat heater elements .....	158
3.3	Removing and installing cover and padding .....	159
3.4	Removing and installing intermediate padding - backrest with load-through hatch .....	165
3.5	Detaching cover from padding .....	167
3.6	Removing and installing side padding .....	168
3.7	Removing and installing seat heater element .....	169
3.8	Removing and installing backrest heater element .....	169