

Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 Safety briefing/employee qualification | 1 |
| 1.1 Qualification | 1 |
| 2 Safety precautions | 2 |
| 2.1 Safety precautions | 2 |
| 2.2 Work that requires high-voltage system to be de-energised | 4 |
| 2.3 Safety precautions when working on the high-voltage system | 4 |
| 2.4 Safety precautions when working in the vicinity of high-voltage components | 5 |
| 2.5 Safety precautions when working on the cooling system | 6 |
| 2.6 Safety precautions when using testers and measuring instruments during a road test | 6 |
| 3 Repair instructions | 7 |
| 3.1 Important notes | 7 |
| 3.2 General notes | 7 |
| 3.3 Information on handling fine dust, aluminium dust and steel dust | 8 |
| 3.4 Routing and attaching pipes and wiring | 9 |
| 3.5 Contact corrosion | 9 |
| 3.6 Bonding surfaces for adhesive strips | 9 |
| 3.7 Self-locking bolts | 9 |
| 3.8 Identification plates | 9 |
| 3.9 Impact wrenches | 9 |
| 3.10 Moulded foam inserts | 10 |
| 3.11 Galvanised body panels, high-strength and extra-high-strength steel | 12 |
| 3.12 Straightening and re-alignment of body parts | 16 |
| 3.13 Bonded joints | 16 |
| 3.14 Matching the surface contour | 18 |
| 4 Vehicle identification data | 20 |
| 4.1 Vehicle identification number | 20 |
| 4.2 Type plate | 20 |
| 4.3 Vehicle data sticker | 20 |
| 5 Body dimensions | 21 |
| 5.1 Body - front | 21 |
| 5.2 Body - centre | 23 |
| 5.3 Floor group | 26 |
| 5.4 Body - rear | 28 |
| 6 Overview of riveting attachments (pairs of tools) | 30 |
| 7 Overview of rivets and tools | 32 |
| 7.1 Overview of rivets used for repair measures | 37 |
| 8 Thread repair for M6 pop rivet nut | 40 |
| 9 Processing body structure adhesive D 180 004 M2 | 41 |
| 9.1 Preparing bonding surfaces | 42 |
| 10 Using edge milling unit -VAS 882 005- | 56 |
| 10.1 General information | 56 |
| 10.2 Assembling unit/changing milling tool | 59 |
| 10.3 Separating flanged edges | 69 |
| 10.4 Separating panels at corners and along surfaces | 75 |
| 10.5 Separating outer edges | 78 |
| 10.6 Roof - Renewal | 81 |
| 10.7 Separating laser weld seams using round head milling unit | 83 |
| 10.8 Aluminium panels | 85 |
| 11 Tools | 88 |
| 12 Straightening jig | 92 |

| | | |
|---------------------------|---|------------|
| 12.1 | Procedure for repairing structural body damage on Audi vehicles | 92 |
| 50 - Body - front | | 94 |
| 1 | Safety precautions | 94 |
| 2 | Wing mounting flange - Renewal | 95 |
| 2.1 | Tools | 95 |
| 2.2 | Procedure | 96 |
| 3 | Suspension turret and front longitudinal member - Renewal | 103 |
| 3.1 | Tools | 103 |
| 3.2 | Procedure | 104 |
| 4 | Front longitudinal member (left-side) - Partial renewal | 115 |
| 4.1 | Tools | 115 |
| 4.2 | Procedure | 116 |
| 5 | Front longitudinal member (right-side) - Partial renewal | 123 |
| 5.1 | Tools | 123 |
| 5.2 | Procedure | 124 |
| 6 | Footwell cross member - Renewal | 131 |
| 6.1 | Tools | 131 |
| 6.2 | Procedure | 132 |
| 7 | Repairing threads for attachment of subframe | 136 |
| 7.1 | Tools | 136 |
| 51 - Body - centre | | 143 |
| 1 | Safety precautions | 143 |
| 2 | Permitted separating cuts on side panel | 144 |
| 3 | Roof - Renewal | 145 |
| 3.1 | Tools | 145 |
| 3.2 | Procedure | 151 |
| 4 | Panoramic sunroof - Renewal | 168 |
| 4.1 | Tools | 168 |
| 4.2 | Procedure | 174 |
| 5 | Roof side member - Renewal | 188 |
| 5.1 | Tools | 188 |
| 5.2 | Procedure | 189 |
| 6 | Roof cross member (front) - Renewal | 195 |
| 6.1 | Tools | 195 |
| 6.2 | Procedure | 196 |
| 7 | Centre roof cross member - Renewal | 199 |
| 7.1 | Tools | 199 |
| 7.2 | Procedure | 200 |
| 8 | Roof cross member (rear) - Renewal | 203 |
| 8.1 | Tools | 203 |
| 8.2 | Procedure | 204 |
| 9 | Hinge mounting - Renewal | 214 |
| 9.1 | Tools | 214 |
| 9.2 | Procedure | 215 |
| 10 | Outer A-pillar - Renewal | 219 |
| 10.1 | Tools | 219 |
| 10.2 | Procedure | 220 |
| 11 | Upper inner A-pillar - Partial renewal | 226 |
| 11.1 | Tools | 226 |
| 11.2 | Procedure | 227 |
| 12 | Upper inner A-pillar - Partial renewal (NAR vehicles only) | 238 |

| | | |
|-------------------------|---|------------|
| 12.1 | Tools | 239 |
| 12.2 | Procedure | 240 |
| 13 | Lower inner A-pillar - Renewal | 255 |
| 13.1 | Tools | 255 |
| 13.2 | Procedure | 256 |
| 14 | Outer B-pillar - Renewal | 261 |
| 14.1 | Tools | 261 |
| 14.2 | Procedure | 262 |
| 15 | Inner B-pillar - Renewal | 268 |
| 15.1 | Tools | 268 |
| 15.2 | Procedure | 269 |
| 16 | Outer side member - Renewal | 276 |
| 16.1 | Tools | 276 |
| 16.2 | Procedure | 277 |
| 17 | Inner side member - Renewal | 282 |
| 17.1 | Tools | 282 |
| 17.2 | Procedure | 283 |
| 18 | Inner side member reinforcement - Renewal | 287 |
| 18.1 | Tools | 287 |
| 18.2 | Procedure | 288 |
| 19 | Front seat cross member - Renewal | 294 |
| 19.1 | Tools | 294 |
| 19.2 | Procedure | 295 |
| 20 | Centre tunnel - Renewal | 300 |
| 20.1 | Tools | 300 |
| 20.2 | Procedure | 301 |
| 21 | Rear seat cross member - Renewal | 305 |
| 21.1 | Tools | 305 |
| 21.2 | Procedure | 306 |
| 53 - Body - rear | | 311 |
| 1 | Safety precautions | 311 |
| 2 | Permitted separating cuts on side panel | 312 |
| 3 | Rear upper cross panel - Renewal | 313 |
| 3.1 | Tools | 313 |
| 3.2 | Procedure | 314 |
| 4 | Cross panel reinforcement - Renewal | 317 |
| 4.1 | Tools | 317 |
| 4.2 | Procedure | 318 |
| 5 | Tail light mounting - Renewal | 321 |
| 5.1 | Tools | 321 |
| 5.2 | Procedure | 322 |
| 6 | Rear longitudinal member - Partial renewal | 325 |
| 6.1 | Tools | 325 |
| 6.2 | Procedure | 326 |
| 7 | Rear longitudinal member - Renewal | 334 |
| 7.1 | Tools | 334 |
| 7.2 | Procedure | 335 |
| 8 | Side panel - Renewal | 346 |
| 8.1 | Tools | 347 |
| 8.2 | Procedure | 347 |
| 9 | C-pillar reinforcement - Renewal | 356 |
| 9.1 | Tools | 356 |

| | | |
|-----------|---|------------|
| 9.2 | Procedure | 357 |
| 10 | D-pillar reinforcement - Renewal | 363 |
| 10.1 | Tools | 363 |
| 10.2 | Procedure | 364 |
| 11 | Wheel housing - Partial renewal | 370 |
| 11.1 | Tools | 370 |
| 11.2 | Procedure | 371 |
| 12 | Rear wheel housing - Renewal | 374 |
| 12.1 | Tools | 374 |
| 12.2 | Procedure | 375 |
| 13 | Spare wheel well - Renewal | 379 |
| 13.1 | Tools | 379 |
| 13.2 | Procedure | 380 |
| 14 | Luggage compartment floor - Renewal (e-tron) | 388 |
| 14.1 | Tools | 388 |
| 14.2 | Procedure | 389 |