

Contents

00 - Technical data	1
1 Identification	1
2 Safety information	2
2.1 Safety precautions	2
2.2 Safety precautions when working on the high-voltage system	2
2.3 Safety precautions when working in the vicinity of high-voltage components	3
3 Repair instructions	4
3.1 Rules for cleanliness when working on the high-voltage battery	4
3.2 Painting work on vehicles with high-voltage system	4
3.3 Repair instructions - all vehicles	4
4 Assessing high-voltage system risk level	5
4.1 Necessary qualifications	5
4.2 Work that requires high-voltage system to be de-energised	5
10 - Removing and installing engine	8
1 Safety information	8
2 Removing and installing engine	9
2.1 Removing engine	9
2.2 Securing engine to engine and gearbox support	67
2.3 Installing engine	68
3 Assembly mountings	75
3.1 Assembly overview - assembly mountings	75
3.2 Supporting engine in installation position	79
3.3 Removing and installing engine mountings	80
3.4 Removing and installing power unit mounting senders	90
3.5 Removing and installing power unit mounting control unit J931	91
3.6 Removing and installing gearbox mountings	92
4 Engine cover panel	94
13 - Crankshaft group	95
1 Safety information	95
2 Cylinder block (pulley end)	96
2.1 Assembly overview - cylinder block (pulley end)	96
2.2 Removing and installing poly V-belt	96
2.3 Removing and installing poly V-belt tensioner	96
2.4 Removing and installing vibration damper	96
2.5 Removing and installing bracket for ancillaries	97
2.6 Removing and installing engine support	98
3 Cylinder block (gearbox end)	103
4 Crankshaft	104
5 Balance shaft	105
6 Pistons and conrods	106
15 - Cylinder head, valve gear	107
1 Safety information	107
2 Timing chain cover	108
2.1 Assembly overview - timing chain cover	108
2.2 Removing and installing timing chain cover	108
2.3 Renewing oil seal for vibration damper	109
3 Chain drive	110
3.1 Assembly overview - camshaft timing chains	110



3.2	Assembly overview - drive chain for balance shaft	110
3.3	Removing and installing bearing saddle	110
3.4	Removing and installing camshaft timing chain	110
3.5	Checking timing chain	110
3.6	Checking valve timing	111
4	Cylinder head	112
4.1	Assembly overview - cylinder head	112
4.2	Removing and installing cylinder head	113
4.3	Checking compression	124
5	Valve gear	125
5.1	Assembly overview - valve gear	125
5.2	Removing and installing camshaft	125
5.3	Installing ball for slider	132
5.4	Removing and installing cam adjustment actuators	132
5.5	Removing and installing camshaft control valve 1 N205	132
5.6	Removing and installing valve stem oil seals	133
6	Inlet and exhaust valves	134
17 - Lubrication		135
1	Safety information	135
2	Sump/oil pump	136
2.1	Assembly overview - sump/oil pump	136
2.2	Engine oil	136
2.3	Removing and installing lower part of sump	136
2.4	Removing and installing oil pump	138
2.5	Removing and installing upper part of sump	139
2.6	Removing and installing oil level and oil temperature sender G266	139
3	Engine oil cooler	140
4	Crankcase breather	141
5	Oil filter/oil pressure switches	142
5.1	Assembly overview - oil filter	142
5.2	Assembly overview - oil pressure switches/oil pressure control	142
5.3	Removing and installing oil pressure switch F22	142
5.4	Removing and installing oil pressure switch for reduced oil pressure F378	142
5.5	Removing and installing stage 3 oil pressure switch F447	142
5.6	Removing and installing valve for oil pressure control N428	145
5.7	Removing and installing piston cooling jet control valve N522	145
5.8	Checking oil pressure	146
19 - Cooling		147
1	Safety information	147
2	Cooling system/coolant	148
2.1	Connection diagram - coolant hoses	148
2.2	Overview of fitting locations - cooling system	154
2.3	Assembly overview - coolant expansion tank	156
2.4	Checking cooling system for leaks	158
2.5	Draining and filling cooling system	163
2.6	Removing and installing coolant expansion tank	181
3	Coolant pump/thermostat assembly	186
3.1	Assembly overview - coolant pump/thermostat	187
3.2	Assembly overview - electric coolant pump	187
3.3	Assembly overview - coolant temperature senders	189
3.4	Assembly overview - coolant valves	192
3.5	Removing and installing electric coolant pump	194

3.6	Removing and installing coolant pump for high-voltage battery V590	200
3.7	Removing and installing thermal management coolant pump 4 V620	202
3.8	Removing and installing thermal management coolant pump 2 V618	206
3.9	Removing and installing coolant pump	208
3.10	Removing and installing toothed belt for coolant pump	212
3.11	Removing and installing actuator for engine temperature regulation N493	216
3.12	Removing and installing coolant temperature sender G62	216
3.13	Removing and installing radiator outlet coolant temperature sender G83	216
3.14	Removing and installing coolant temperature sender 1 for thermal management G902	217
3.15	Removing and installing coolant temperature sender 2 for thermal management G903	219
3.16	Removing and installing coolant temperature sender 3 for thermal management G904	220
3.17	Removing and installing coolant temperature sender 4 for thermal management G905	222
3.18	Removing and installing coolant temperature sender 5 for thermal management G906	222
3.19	Removing and installing coolant temperature sender 6 for thermal management G907	224
3.20	Removing and installing coolant temperature sender 7 for thermal management G908	225
3.21	Removing and installing coolant temperature sender 8 for thermal management G968	226
3.22	Removing and installing coolant temperature sender for high-voltage battery G898/G899	228
3.23	Removing and installing coolant changeover valve 1 N632	231
3.24	Removing and installing coolant changeover valve 2 N633	232
3.25	Removing and installing coolant changeover valve 3 N634	234
3.26	Removing and installing coolant changeover valve 4 N635	237
4	Coolant pipes	240
4.1	Assembly overview - coolant pipes	240
4.2	Removing and installing coolant pipes	247
4.3	Removing and installing coolant pipes for gearbox	273
5	Radiators/radiator fan	282
5.1	Assembly overview - radiators/radiator fan	282
5.2	Removing and installing radiator	285
5.3	Removing and installing radiator cowl	291
5.4	Removing and installing radiator fan V7	295
5.5	Removing and installing auxiliary radiator	296
21 - Turbocharging/supercharging	298	
1	Safety information	298
2	Turbocharger	299
2.1	Assembly overview - turbocharger	299
2.2	Removing and installing turbocharger	299
2.3	Removing and installing turbocharger air recirculation valve N249	301
3	Charge air system	304
3.1	Assembly overview - charge air system	304
3.2	Assembly overview - hose connections for charge air system	306
3.3	Removing and installing charge air cooler	306
3.4	Removing and installing air pipe	308
3.5	Removing and installing charge pressure sender G31	313
3.6	Checking charge air system for leaks	313
24 - Mixture preparation - injection	317	
1	Safety information	317
2	Injection system	318
2.1	Overview of fitting locations - injection system	318
2.2	Checking fuel system for leaks	331
3	Air filter	332
3.1	Assembly overview - air filter housing	332
3.2	Removing and installing air filter housing	333
4	Intake manifold	335



4.1	Assembly overview - intake manifold	335
4.2	Removing and installing intake manifold	335
4.3	Removing and installing throttle valve module GX3	351
4.4	Cleaning throttle valve module GX3	352
4.5	Checking intake manifold change-over function	352
5	Injectors	353
5.1	Assembly overview - fuel rail with injectors	353
5.2	Removing and installing fuel rail	353
5.3	Removing and installing injectors	355
5.4	Renewing seals on injector	355
5.5	Cleaning injectors	355
6	Senders and sensors	356
7	High-pressure pump	357
7.1	Assembly overview - high-pressure pump	357
7.2	Removing and installing high-pressure pump	357
7.3	Removing and installing high-pressure pipe	359
8	Lambda probe	361
9	Engine control unit	362
9.1	Assembly overview - engine control unit	362
9.2	Removing and installing engine control unit J623	362
26 - Exhaust system		364
1	Safety information	364
2	Exhaust pipes/silencers	365
2.1	Assembly overview - silencers	365
2.2	Separating exhaust pipes/silencer	370
2.3	Removing and installing front silencer	371
2.4	Removing and installing silencer	374
2.5	Stress-free alignment of exhaust system	380
2.6	Checking exhaust system for leaks	380
2.7	Installation position of clamp	381
3	Emission control system	383
3.1	Assembly overview - emission control system	383
3.2	Removing and installing catalytic converter	383
3.3	Removing and installing particulate filter	387
3.4	Removing and installing exhaust flap control unit J883	392
4	Exhaust gas temperature regulation	393
4.1	Assembly overview - exhaust gas temperature regulation	393
4.2	Removing and installing parts of exhaust gas temperature regulation	394
5	Secondary air system	399
5.1	Assembly overview - secondary air system	399
5.2	Removing and installing secondary air pump motor V101	399
5.3	Removing and installing secondary air inlet valve N112	400
5.4	Removing and installing sender 1 for secondary air pressure G609	401
5.5	Removing and installing resonator for secondary air system	402
28 - Ignition system		404
1	Safety information	404
2	Ignition system	405
2.1	Assembly overview - ignition system	405
2.2	Removing and installing ignition coils with output stages	405
2.3	Removing and installing knock sensor 1 G61	405
2.4	Removing and installing Hall senders	405
2.5	Removing and installing engine speed sender G28	405

93 - Electric drive systems	408
1 Safety information	408
2 High-voltage components	409
2.1 Overview of fitting locations - high-voltage components	409
3 Warning stickers	412
3.1 Checking warning stickers	412
4 High-voltage battery unit	416
4.1 Assembly overview - high-voltage battery	416
4.2 Determining mean cell voltage	419
4.3 Charging and discharging battery modules	421
4.4 Leak test for hybrid battery unit AX1	422
4.5 Checking high-voltage battery for leaks	429
4.6 Inspecting and classifying hybrid battery unit AX1	429
4.7 Removing and installing hybrid battery unit AX1	430
4.8 Removing and installing battery regulation control unit J840	440
4.9 Removing and installing switching unit for high-voltage battery SX6	441
5 High-voltage battery components	445
5.1 Assembly overview - components of hybrid battery unit AX1	445
5.2 Overview of fitting locations - battery modules	451
5.3 Removing battery module	453
5.4 Installing battery module	466
6 Power and control electronics for electric drive	477
6.1 Overview of fitting locations - power and control electronics for electric drive	477
6.2 Removing and installing power and control electronics for electric drive	480
6.3 Removing and installing bracket for power and control electronics for electric drive JX1	483
7 Electric drive motor	486
7.1 Assembly overview - electric drive motor	486
7.2 Removing and installing three-phase current drive VX54	488
7.3 Removing and installing drive motor temperature sender G712	488
7.4 Removing and installing drive motor rotor position sender 1 G713	490
7.5 Removing and installing oil return connection	492
7.6 Renewing input shaft oil seal	492
8 High-voltage wiring	494
8.1 Overview of fitting locations - high-voltage wiring	494
8.2 Removing and installing high-voltage wiring harness for high-voltage battery	502
8.3 Removing and installing high-voltage wiring harness for drive motor	504
8.4 Removing and installing high-voltage wire leading to switching unit for high-voltage battery	510
8.5 Removing and installing high-voltage wire for electrical air conditioner compressor and high-voltage heater (PTC)	512
9 De-energising high-voltage system	513
10 Re-energising high-voltage system	516
11 Potential equalisation lines	518
11.1 General notes - potential equalisation lines	518
11.2 Overview of fitting locations - potential equalisation lines	518
11.3 Potential equalisation measurement	519
11.4 Removing and installing potential equalisation lines	520
12 Charging socket	525
12.1 Assembly overview - charging socket	525
12.2 e-tron charging system	527
12.3 Diagnosis of e-tron charging system	527
12.4 Removing and installing high-voltage battery charging socket 1 UX4	530
12.5 Removing and installing module for battery charge selector buttons EX32	532



13	Charging unit for high-voltage battery	534
13.1	Assembly overview - charging unit for high-voltage battery	534
13.2	Removing and installing charging unit 1 for high-voltage battery AX4	534
13.3	Removing and installing bracket for charging unit 1 for high-voltage battery AX4	538
14	Vehicle noise/engine sound	541
14.1	Overview of fitting locations - vehicle noise/engine sound	541
14.2	Removing and installing engine sound generator control unit J943	541
14.3	Removing and installing actuator 1 for engine sound generator R257	542