

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification</b> .....	<b>1</b>
<b>2 Safety information</b> .....	<b>2</b>
<b>3 Repair instructions</b> .....	<b>3</b>
<b>10 - Removing and installing engine</b> .....	<b>4</b>
<b>1 Removing and installing engine</b> .....	<b>4</b>
1.1 Removing engine .....	4
1.2 Separating engine and gearbox .....	20
1.3 Removing engine from scissor-type assembly platform .....	26
1.4 Securing engine to engine and gearbox support .....	27
1.5 Installing engine .....	28
<b>2 Assembly mountings</b> .....	<b>33</b>
2.1 Assembly overview - assembly mountings .....	33
2.2 Supporting engine in installation position .....	35
2.3 Removing and installing engine mountings .....	40
2.4 Removing and installing gearbox mounting .....	41
<b>3 Engine cover panel</b> .....	<b>45</b>
3.1 Assembly overview - engine cover panel .....	45
3.2 Removing and installing engine cover panel .....	46
<b>13 - Crankshaft group</b> .....	<b>47</b>
<b>1 Cylinder block (pulley end)</b> .....	<b>47</b>
1.1 Assembly overview - cylinder block (pulley end) .....	47
1.2 Assembly overview - sealing flange (pulley end) .....	47
1.3 Removing and installing poly V-belts .....	47
1.4 Removing and installing poly V-belt tensioner .....	49
1.5 Removing and installing vibration damper .....	50
1.6 Removing and installing bracket for ancillaries .....	51
1.7 Removing and installing engine support .....	51
1.8 Renewing crankshaft oil seal (pulley end) .....	51
1.9 Removing and installing sealing flange (pulley end) .....	51
<b>2 Cylinder block (gearbox end)</b> .....	<b>52</b>
<b>3 Crankshaft</b> .....	<b>53</b>
<b>4 Balance shaft</b> .....	<b>54</b>
<b>5 Pistons and conrods</b> .....	<b>55</b>
<b>15 - Cylinder head, valve gear</b> .....	<b>56</b>
<b>1 Timing chain cover</b> .....	<b>56</b>
<b>2 Chain drive</b> .....	<b>57</b>
2.1 Assembly overview - camshaft timing chains .....	57
2.2 Assembly overview - drive chain for oil pump .....	57
2.3 Removing camshaft timing chain from camshafts .....	57
2.4 Removing and installing camshaft timing chain .....	59
2.5 Removing and installing chain tensioner .....	59
<b>3 Cylinder head</b> .....	<b>60</b>
3.1 Assembly overview - cylinder head .....	60
3.2 Assembly overview - camshaft housing .....	60
3.3 Removing and installing cylinder head .....	60
3.4 Removing and installing camshaft housing .....	60
3.5 Checking compression .....	61



<b>4</b>	<b>Valve gear</b> .....	<b>62</b>
4.1	Assembly overview - valve gear .....	62
4.2	Measuring axial clearance of camshaft .....	62
4.3	Measuring radial clearance of camshaft .....	62
4.4	Removing and installing camshaft .....	62
4.5	Removing and installing cam actuators .....	62
4.6	Removing and installing camshaft control valve 1 N205 .....	65
4.7	Removing and installing valve stem oil seals .....	66
<b>5</b>	<b>Inlet and exhaust valves</b> .....	<b>67</b>
<b>17 - Lubrication</b> .....		<b>68</b>
<b>1</b>	<b>Sump/oil pump</b> .....	<b>68</b>
1.1	Assembly overview - sump/oil pump .....	68
1.2	Engine oil .....	68
1.3	Removing and installing lower part of sump .....	69
1.4	Removing and installing upper part of sump .....	69
1.5	Removing and installing oil pump .....	70
1.6	Removing and installing oil level and oil temperature sender G266 .....	70
<b>2</b>	<b>Engine oil cooler</b> .....	<b>71</b>
<b>3</b>	<b>Crankcase breather</b> .....	<b>72</b>
3.1	Assembly overview - crankcase breather system .....	72
3.2	Removing and installing oil separator .....	72
3.3	Renewing crankcase breather hose .....	72
<b>4</b>	<b>Oil filter/oil pressure switches</b> .....	<b>73</b>
4.1	Assembly overview - oil filter .....	73
4.2	Assembly overview - oil pressure switches/oil pressure control .....	73
4.3	Removing and installing oil filter housing .....	73
4.4	Removing and installing oil pressure switch F22 .....	73
4.5	Removing and installing oil temperature sender G8 .....	74
4.6	Removing and installing oil pressure sender G10 .....	74
4.7	Checking oil pressure .....	75
4.8	Removing and installing valve for oil pressure control N428 .....	75
4.9	Removing and installing piston cooling jet control valve N522 .....	76
<b>19 - Cooling</b> .....		<b>77</b>
<b>1</b>	<b>Cooling system/coolant</b> .....	<b>77</b>
1.1	Connection diagram - coolant hoses .....	77
1.2	Assembly overview - coolant expansion tank .....	81
1.3	Checking cooling system for leaks .....	81
1.4	Draining and filling cooling system .....	81
<b>2</b>	<b>Coolant pump/thermostat assembly</b> .....	<b>88</b>
2.1	Assembly overview - coolant pump/thermostat .....	88
2.2	Assembly overview - electric coolant pump .....	88
2.3	Assembly overview - coolant valves .....	92
2.4	Removing and installing electric coolant pump .....	93
2.5	Removing and installing coolant pump .....	99
2.6	Removing and installing housing for map-controlled engine cooling system thermostat F265 .....	100
2.7	Removing and installing map-controlled engine cooling system thermostat F265 .....	101
2.8	Removing and installing radiator outlet coolant temperature sender G83 .....	102
2.9	Removing and installing engine temperature sender G407 .....	102
2.10	Removing and installing coolant valves .....	103
<b>3</b>	<b>Coolant pipes</b> .....	<b>105</b>
3.1	Assembly overview - coolant pipes .....	105
3.2	Removing and installing coolant pipes .....	109

<b>4</b>	<b>Radiators/radiator fans</b> .....	<b>120</b>
4.1	Assembly overview - radiators/radiator fans .....	120
4.2	Assembly overview - radiator cowl and radiator fans .....	122
4.3	Removing and installing radiator .....	123
4.4	Removing and installing radiator cowl .....	127
4.5	Removing and installing radiator fan V7 .....	131
4.6	Removing and installing auxiliary radiator .....	132
<b>21</b>	<b>- Turbocharging/supercharging</b> .....	<b>134</b>
<b>1</b>	<b>Turbocharger</b> .....	<b>134</b>
1.1	Assembly overview - turbochargers .....	134
1.2	Removing and installing turbochargers .....	134
1.3	Renewing vacuum unit for turbocharger .....	135
1.4	Removing and installing oil lines at turbocharger .....	135
1.5	Removing and installing coolant lines at turbocharger .....	135
1.6	Removing and installing temperature sender for engine cover panel G765 .....	135
1.7	Removing and installing overrun air recirculation valve .....	136
<b>2</b>	<b>Charge air system</b> .....	<b>137</b>
2.1	Assembly overview - charge air system .....	137
2.2	Assembly overview - hose connections for charge air system .....	139
2.3	Removing and installing air intake pipe .....	139
2.4	Removing and installing charge air cooler .....	144
2.5	Removing and installing charge pressure sender G31 .....	145
2.6	Removing and installing charge pressure sender 2 G447 .....	146
2.7	Checking charge air system for leaks .....	147
<b>24</b>	<b>- Mixture preparation - injection</b> .....	<b>149</b>
<b>1</b>	<b>Injection system</b> .....	<b>149</b>
1.1	Overview of fitting locations - injection system .....	149
1.2	Checking fuel system for leaks .....	160
<b>2</b>	<b>Vacuum system</b> .....	<b>161</b>
2.1	Assembly overview - vacuum system .....	161
2.2	Checking vacuum system .....	163
2.3	Removing and installing switch valve for mechanical coolant pump .....	163
2.4	Removing and installing charge pressure control solenoid valve .....	164
2.5	Removing and installing vacuum line .....	164
<b>3</b>	<b>Air filter</b> .....	<b>166</b>
3.1	Assembly overview - air filter housing .....	166
3.2	Removing and installing air filter housing .....	168
<b>4</b>	<b>Intake manifold</b> .....	<b>169</b>
4.1	Assembly overview - intake manifold .....	169
4.2	Removing and installing intake manifold .....	169
4.3	Removing and installing throttle valve module GX3 .....	172
4.4	Removing and installing throttle valve module 2 GX4 .....	173
4.5	Cleaning throttle valve module GX3 .....	174
<b>5</b>	<b>Injectors</b> .....	<b>175</b>
5.1	Assembly overview - fuel rail with injectors .....	175
5.2	Removing and installing fuel rail .....	175
5.3	Removing and installing injectors .....	177
5.4	Cleaning injectors .....	177
<b>6</b>	<b>Senders and sensors</b> .....	<b>178</b>
6.1	Assembly overview - actuator for structure-borne sound and control unit for structure-borne sound .....	178
6.2	Assembly overview - pressure differential sender .....	179
6.3	Removing and installing actuator for structure-borne sound R214 .....	179



6.4	Removing and installing control unit for structure-borne sound J869	180
6.5	Removing and installing intake manifold pressure sender	180
6.6	Removing and installing fuel pressure sender G247	181
6.7	Removing and installing fuel pressure sender for low pressure G410	181
6.8	Removing and installing pressure differential sender	181
<b>7</b>	<b>High-pressure pump</b>	<b>182</b>
7.1	Assembly overview - high-pressure pump	182
7.2	Removing and installing high-pressure pump	182
7.3	Removing and installing high-pressure pipe	185
<b>8</b>	<b>Lambda probe</b>	<b>188</b>
8.1	Assembly overview - Lambda probe	188
8.2	Removing and installing Lambda probe	188
<b>9</b>	<b>Engine control unit</b>	<b>190</b>
9.1	Assembly overview - engine control unit	190
9.2	Removing and installing engine control unit J623	190
<b>26</b>	<b>- Exhaust system</b>	<b>192</b>
<b>1</b>	<b>Exhaust pipes/silencers</b>	<b>192</b>
1.1	Assembly overview - silencers	192
1.2	Removing and installing front silencers	195
1.3	Separating exhaust pipes/silencers	195
1.4	Removing and installing silencer	196
1.5	Stress-free alignment of exhaust system	197
1.6	Checking exhaust system for leaks	198
<b>2</b>	<b>Emission control system</b>	<b>199</b>
2.1	Assembly overview - emission control system	199
2.2	Assembly overview - exhaust flap control unit	199
2.3	Removing and installing catalytic converter	200
2.4	Removing and installing particulate filter	204
2.5	Removing and installing exhaust flap control unit J883	204
<b>3</b>	<b>Exhaust gas temperature regulation</b>	<b>206</b>
3.1	Assembly overview - exhaust gas temperature regulation	206
3.2	Removing and installing parts of exhaust gas temperature regulation	206
<b>4</b>	<b>Exhaust manifold</b>	<b>208</b>
<b>28</b>	<b>- Ignition system</b>	<b>209</b>
<b>1</b>	<b>Ignition system</b>	<b>209</b>
1.1	Assembly overview - ignition system	209
1.2	Removing and installing ignition coil	209
1.3	Removing and installing knock sensor 1 G61	213
1.4	Removing and installing Hall senders	213
1.5	Removing and installing engine speed sender G28	214