

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Engine number/engine data	1
<b>2 Safety information</b>	<b>2</b>
2.1 Safety precautions when working on the high-voltage system	2
2.2 Safety precautions when working in the vicinity of high-voltage components	3
2.3 Safety precautions when working on the fuel supply system	3
2.4 Safety precautions when working on vehicles with start/stop system	4
2.5 Safety precautions when using testers and measuring instruments during a road test	4
2.6 Safety precautions when working on the ignition system	4
2.7 Safety precautions when working on the cooling system	5
2.8 Safety precautions when working on the exhaust system	5
<b>3 Repair instructions</b>	<b>6</b>
3.1 Identification plates	6
3.2 Use of impact wrenches	6
3.3 Rules for cleanliness	7
3.4 General notes	7
3.5 General repair instructions	7
3.6 Foreign material in engine	8
3.7 Contact corrosion	9
3.8 Cleaning engine	9
3.9 Routing and attachment of pipes, hoses and wiring	9
3.10 Installing radiators and condensers	9
3.11 Nuts, bolts	10
3.12 Checking fuel system for leaks	10
<b>10 - Removing and installing engine</b>	<b>11</b>
<b>1 Safety information</b>	<b>11</b>
<b>2 Removing and installing engine</b>	<b>12</b>
<b>3 Assembly mountings</b>	<b>13</b>
<b>4 Engine cover panel</b>	<b>14</b>
4.1 Removing and installing engine cover panel	14
<b>13 - Crankshaft group</b>	<b>16</b>
<b>1 Safety information</b>	<b>16</b>
<b>2 Cylinder block (pulley end)</b>	<b>17</b>
2.1 Assembly overview - cylinder block (pulley end)	17
2.2 Assembly overview - sealing flange (pulley end)	30
2.3 Removing and installing poly V-belts	32
2.4 Removing and installing poly V-belt tensioner	41
2.5 Removing and installing vibration damper	44
2.6 Removing and installing bracket for ancillaries	52
2.7 Removing and installing engine support	57
2.8 Renewing crankshaft oil seal (pulley end)	57
2.9 Removing and installing sealing flange (pulley end)	58
<b>3 Cylinder block (gearbox end)</b>	<b>64</b>
3.1 Assembly overview - cylinder block (gearbox end)	64
3.2 Removing and installing drive plate	64
3.3 Renewing crankshaft oil seal (gearbox end)	66
<b>4 Crankshaft</b>	<b>69</b>
4.1 Assembly overview - crankshaft	69
4.2 Crankshaft dimensions	73



4.3	Allocation of main bearing shells	73
4.4	Measuring axial clearance of crankshaft	75
4.5	Measuring radial clearance of crankshaft	76
4.6	Removing and installing sender wheel	76
4.7	Checking sender wheel	77
4.8	Removing and installing crankshaft	78
<b>5</b>	<b>Balance shaft</b>	<b>83</b>
5.1	Assembly overview - balance shaft	83
5.2	Removing and installing balance shaft	83
5.3	Renewing roller bearing	88
<b>6</b>	<b>Pistons and conrods</b>	<b>92</b>
6.1	Assembly overview - pistons and conrods	92
6.2	Removing and installing pistons	97
6.3	Removing and installing oil spray jets	101
6.4	Checking pistons and cylinder bores	102
6.5	Checking radial clearance of conrod bearings	105
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>107</b>
<b>1</b>	<b>Safety information</b>	<b>107</b>
<b>2</b>	<b>Timing chain cover</b>	<b>108</b>
2.1	Assembly overview - timing chain cover	108
2.2	Removing and installing timing chain cover	112
<b>3</b>	<b>Chain drive</b>	<b>123</b>
3.1	Assembly overview - camshaft timing chains	123
3.2	Assembly overview - drive chain for oil pump	127
3.3	Removing camshaft timing chain from camshafts	128
3.4	Removing and installing camshaft timing chain	154
3.5	Removing and installing chain tensioner	155
<b>4</b>	<b>Cylinder head</b>	<b>159</b>
4.1	Assembly overview - cylinder head	159
4.2	Assembly overview - camshaft housing	164
4.3	Removing and installing cylinder head	168
4.4	Removing and installing camshaft housing	186
4.5	Checking compression	199
<b>5</b>	<b>Valve gear</b>	<b>204</b>
5.1	Assembly overview - valve gear	204
5.2	Measuring axial clearance of camshaft	207
5.3	Measuring radial clearance of camshaft	208
5.4	Removing and installing camshaft	209
5.5	Removing and installing cam actuators	211
5.6	Removing and installing camshaft control valves	213
5.7	Removing and installing valve stem oil seals	214
<b>6</b>	<b>Inlet and exhaust valves</b>	<b>228</b>
6.1	Checking valve guides	228
6.2	Checking valves	229
6.3	Valve dimensions	229
<b>17</b>	<b>Lubrication</b>	<b>230</b>
<b>1</b>	<b>Safety information</b>	<b>230</b>
<b>2</b>	<b>Sump/oil pump</b>	<b>231</b>
2.1	Assembly overview - sump/oil pump	231
2.2	Engine oil	236
2.3	Removing and installing lower part of sump	236
2.4	Removing and installing upper part of sump	239

2.5	Removing and installing oil baffle plate .....	249
2.6	Removing and installing oil pump .....	251
2.7	Removing and installing oil level and oil temperature sender G266 .....	252
<b>3</b>	<b>Engine oil cooler .....</b>	<b>253</b>
3.1	Assembly overview - engine oil cooler .....	253
3.2	Removing and installing engine oil cooler .....	254
3.3	Removing and installing spray nozzle valve .....	256
<b>4</b>	<b>Crankcase breather .....</b>	<b>258</b>
4.1	Assembly overview - crankcase breather system .....	258
4.2	Removing and installing crankcase breather module .....	259
<b>5</b>	<b>Oil filter/oil pressure switches .....</b>	<b>261</b>
5.1	Assembly overview - oil filter .....	261
5.2	Assembly overview - oil pressure switches/oil pressure control .....	263
5.3	Removing and installing oil filter housing .....	265
5.4	Removing and installing oil pressure switch F22 .....	267
5.5	Removing and installing oil temperature sender G8 .....	269
5.6	Removing and installing oil pressure sender G10 .....	271
5.7	Checking oil pressure .....	273
5.8	Removing and installing valve for oil pressure control N428 .....	274
<b>19 - Cooling .....</b>		<b>277</b>
<b>1</b>	<b>Safety information .....</b>	<b>277</b>
<b>2</b>	<b>Cooling system/coolant .....</b>	<b>278</b>
2.1	Connection diagram - coolant hoses .....	278
2.2	Checking cooling system for leaks .....	278
2.3	Draining and filling cooling system .....	283
<b>3</b>	<b>Coolant pump/thermostat assembly .....</b>	<b>286</b>
3.1	Assembly overview - coolant pump/thermostat .....	286
3.2	Assembly overview - electric coolant pump .....	288
3.3	Assembly overview - coolant valves .....	288
3.4	Assembly overview - coolant temperature senders .....	288
3.5	Removing and installing electric coolant pump .....	290
3.6	Removing and installing coolant pump .....	290
3.7	Removing and installing map-controlled engine cooling system thermostat F265 .....	290
3.8	Removing and installing coolant temperature sender G62 .....	293
3.9	Removing and installing engine outlet coolant temperature sender G82 .....	296
3.10	Removing and installing radiator outlet coolant temperature sender G83 .....	299
3.11	Removing and installing temperature sender for engine temperature regulation G694 .....	299
3.12	Removing and installing coolant valves .....	302
<b>4</b>	<b>Coolant pipes .....</b>	<b>304</b>
<b>5</b>	<b>Radiators/radiator fans .....</b>	<b>305</b>
<b>21 - Turbocharging/supercharging .....</b>		<b>306</b>
<b>1</b>	<b>Safety information .....</b>	<b>306</b>
<b>2</b>	<b>Turbochargers .....</b>	<b>307</b>
2.1	Assembly overview - turbocharger .....	307
2.2	Removing and installing turbocharger .....	316
2.3	Renewing vacuum unit for turbocharger .....	327
2.4	Removing and installing temperature sender for engine cover panel G765 .....	342
<b>3</b>	<b>Charge air system .....</b>	<b>344</b>
3.1	Assembly overview - charge air system .....	344
3.2	Assembly overview - hose connections for charge air system .....	359
3.3	Removing and installing air pipe .....	360
3.4	Removing and installing intake manifold .....	362



3.5	Removing and installing charge air cooler	370
3.6	Removing and installing charge pressure sender G31	370
3.7	Removing and installing charge air temperature sender	370
3.8	Removing and installing overrun air recirculation valve	371
3.9	Checking charge air system for leaks	374
<b>24</b>	<b>Mixture preparation - injection</b>	<b>376</b>
<b>1</b>	<b>Safety information</b>	<b>376</b>
<b>2</b>	<b>Injection system</b>	<b>377</b>
<b>3</b>	<b>Vacuum system</b>	<b>378</b>
3.1	Connection diagram - vacuum system	378
3.2	Checking vacuum system	380
<b>4</b>	<b>Air filter</b>	<b>382</b>
<b>5</b>	<b>Intake manifold</b>	<b>383</b>
5.1	Assembly overview - intake manifold	383
5.2	Removing and installing intake manifold	384
5.3	Removing and installing throttle valve module GX3	387
5.4	Cleaning throttle valve module GX3	387
<b>6</b>	<b>Injectors</b>	<b>389</b>
6.1	Assembly overview - fuel rail with injectors	389
6.2	Removing and installing fuel rail	394
6.3	Removing and installing injectors	397
6.4	Cleaning injectors	410
<b>7</b>	<b>Senders and sensors</b>	<b>413</b>
7.1	Assembly overview - actuator for structure-borne sound and control unit for structure-borne sound	413
7.2	Assembly overview - pressure differential sender	413
7.3	Removing and installing actuator for structure-borne sound R214	415
7.4	Removing and installing control unit for structure-borne sound J869	415
7.5	Removing and installing intake air temperature sender G42/intake manifold pressure sender G71	415
7.6	Removing and installing fuel pressure sender G247	416
7.7	Removing and installing fuel pressure sender for low pressure G410	416
7.8	Removing and installing pressure differential sender for particulate filter G1037	417
<b>8</b>	<b>High-pressure pump</b>	<b>423</b>
8.1	Assembly overview - high-pressure pump	423
8.2	Removing and installing high-pressure pump	427
8.3	Removing and installing high-pressure pipe	430
<b>9</b>	<b>Lambda probe</b>	<b>438</b>
9.1	Assembly overview - Lambda probe	438
9.2	Removing and installing Lambda probe	442
<b>10</b>	<b>Engine control unit</b>	<b>450</b>
<b>26</b>	<b>Exhaust system</b>	<b>451</b>
<b>1</b>	<b>Safety information</b>	<b>451</b>
<b>2</b>	<b>Exhaust pipes/silencers</b>	<b>452</b>
2.1	Assembly overview - silencers	452
2.2	Separating exhaust pipes/silencers	452
2.3	Removing and installing front silencers	452
2.4	Stress-free alignment of exhaust system	452
2.5	Checking exhaust system for leaks	452
<b>3</b>	<b>Emission control system</b>	<b>453</b>
<b>4</b>	<b>Exhaust gas temperature regulation</b>	<b>454</b>
4.1	Assembly overview - exhaust gas temperature regulation	454

4.2	Removing and installing parts of exhaust gas temperature regulation .....	455
<b>28</b>	<b>- Ignition system .....</b>	<b>462</b>
1	<b>Safety information .....</b>	<b>462</b>
2	<b>Ignition system .....</b>	<b>463</b>
2.1	Assembly overview - ignition system .....	463
2.2	Removing and installing ignition coils .....	465
2.3	Removing and installing knock sensor 1 G61/knock sensor 2 G66 .....	468
2.4	Removing and installing Hall senders .....	468
2.5	Removing and installing engine speed sender G28 .....	471