

## Contents

<b>00 - Technical data</b>	<b>1</b>
1 Identification	1
2 Safety information	2
3 Repair instructions	3
<b>10 - Removing and installing engine</b>	<b>4</b>
1 Removing and installing engine	4
1.1 Removing engine	4
1.2 Separating engine and gearbox	25
1.3 Securing engine to engine and gearbox support	35
1.4 Installing engine	38
2 Assembly mountings	42
2.1 Assembly overview - assembly mountings	42
2.2 Supporting engine in installation position	45
2.3 Removing and installing engine mountings	50
2.4 Removing and installing gearbox mounting	53
3 Engine cover panel	55
<b>13 - Crankshaft group</b>	<b>56</b>
1 Cylinder block (pulley end)	56
1.1 Assembly overview - cylinder block (pulley end)	56
1.2 Assembly overview - sealing flange (pulley end)	56
1.3 Removing and installing poly V-belt	56
1.4 Removing and installing poly V-belt tensioner	56
1.5 Removing and installing vibration damper	56
1.6 Removing and installing bracket for ancillaries	58
1.7 Removing and installing engine support	60
1.8 Renewing crankshaft oil seal (pulley end)	61
1.9 Removing and installing sealing flange (pulley end)	61
2 Cylinder block (gearbox end)	63
3 Crankshaft	64
4 Balance shaft	65
5 Pistons and conrods	66
<b>15 - Cylinder head, valve gear</b>	<b>67</b>
1 Timing chain cover	67
1.1 Assembly overview - timing chain cover	67
1.2 Removing and installing timing chain cover	67
2 Chain drive	68
3 Cylinder head	69
3.1 Assembly overview - cylinder head	69
3.2 Assembly overview - cylinder head cover	69
3.3 Removing and installing cylinder head	69
3.4 Removing and installing cylinder head cover	69
3.5 Removing and installing seals for injectors	72
3.6 Checking compression	72
4 Valve gear	73
5 Inlet and exhaust valves	74
<b>17 - Lubrication</b>	<b>75</b>
1 Sump/oil pump	75



1.1	Assembly overview - sump/oil pump	75
1.2	Engine oil	75
1.3	Removing and installing lower part of sump	75
1.4	Removing and installing upper part of sump	75
1.5	Removing and installing oil pump	76
1.6	Removing and installing oil level and oil temperature sender G266	76
<b>2</b>	<b>Engine oil cooler</b>	<b>77</b>
<b>3</b>	<b>Crankcase breather</b>	<b>78</b>
<b>4</b>	<b>Oil filter/oil pressure switches</b>	<b>79</b>
4.1	Assembly overview - oil filter	79
4.2	Assembly overview - oil pressure switches/oil pressure control	79
4.3	Removing and installing oil filter housing	79
4.4	Removing and installing oil pressure switch F22	80
4.5	Removing and installing oil temperature sender G8	80
4.6	Removing and installing oil pressure sender G10	80
4.7	Checking oil pressure	80
4.8	Removing and installing valve for oil pressure control N428	81
4.9	Removing and installing oil temperature sender 2 G664	81
<b>19</b>	<b>- Cooling</b>	<b>83</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>83</b>
1.1	Connection diagram - coolant hoses	83
1.2	Checking cooling system for leaks	87
1.3	Draining and filling cooling system	87
<b>2</b>	<b>Coolant pump/thermostat assembly</b>	<b>95</b>
2.1	Assembly overview - coolant pump	95
2.2	Assembly overview - electric coolant pump	95
2.3	Assembly overview - thermostat	97
2.4	Assembly overview - coolant temperature senders	97
2.5	Assembly overview - coolant valves	98
2.6	Removing and installing electric coolant pump	99
2.7	Removing and installing coolant pump	103
2.8	Removing and installing thermostat	103
2.9	Removing and installing coolant temperature sender G62	103
2.10	Removing and installing temperature sender for engine temperature regulation G694	103
2.11	Removing and installing coolant valves	104
<b>3</b>	<b>Coolant pipes</b>	<b>107</b>
3.1	Assembly overview - coolant pipes	107
3.2	Removing and installing coolant pipes	111
<b>4</b>	<b>Radiator/radiator fan</b>	<b>126</b>
4.1	Assembly overview - radiator/radiator fan	126
4.2	Removing and installing radiator	129
4.3	Removing and installing radiator cowl	134
4.4	Removing and installing radiator fan V7	137
<b>21</b>	<b>- Turbocharging/supercharging</b>	<b>139</b>
<b>1</b>	<b>Turbocharger</b>	<b>139</b>
1.1	Assembly overview - turbocharger	139
1.2	Removing and installing turbocharger	139
<b>2</b>	<b>Charge air system</b>	<b>140</b>
2.1	Assembly overview - charge air system	140
2.2	Assembly overview - hose connections for charge air system	142
2.3	Removing and installing charge air cooler	142
2.4	Removing and installing charge pressure sender G31	143
2.5	Removing and installing charge air temperature sender after charge air cooler G811	144

2.6	Checking charge air system for leaks	145
<b>23</b>	<b>Mixture preparation - injection</b>	<b>146</b>
<b>1</b>	<b>Injection system</b>	<b>146</b>
1.1	Overview - fuel system	146
1.2	Overview of fitting locations - injection system	146
1.3	Filling and bleeding fuel system	155
1.4	Checking fuel system for leaks	155
<b>2</b>	<b>Vacuum system</b>	<b>156</b>
<b>3</b>	<b>Air filter</b>	<b>157</b>
3.1	Assembly overview - air filter housing	157
3.2	Removing and installing air filter housing	158
<b>4</b>	<b>Intake manifold</b>	<b>160</b>
4.1	Assembly overview - intake manifold	160
4.2	Removing and installing upper part of intake manifold	160
4.3	Removing and installing lower part of intake manifold	161
4.4	Removing and installing intake manifold flap motor V157	161
4.5	Removing and installing throttle valve module J338	161
<b>5</b>	<b>Injectors/high-pressure reservoir (rail)</b>	<b>163</b>
5.1	Assembly overview - injectors	163
5.2	Checking injectors	163
5.3	Performing adaption of correction values for injectors	163
5.4	Checking for injectors sticking open	163
5.5	Checking return flow rate of injectors with engine running	163
5.6	Checking return flow rate of injectors at starter cranking speed	163
5.7	Checking restrictor in fuel return line	163
5.8	Removing and installing injectors	164
5.9	Removing and installing high-pressure pipes	165
5.10	Removing and installing high-pressure reservoir (rail)	165
<b>6</b>	<b>Senders and sensors</b>	<b>167</b>
6.1	Removing and installing air mass meter G70	167
6.2	Removing and installing fuel temperature sender G81	168
6.3	Removing and installing fuel pressure sender G247	168
6.4	Removing and installing fuel pressure sender for low pressure G410	168
6.5	Checking fuel pressure regulating valve N276	169
6.6	Removing and installing fuel pressure regulating valve N276	171
6.7	Removing and installing pressure differential sender	171
<b>7</b>	<b>High-pressure pump</b>	<b>175</b>
<b>8</b>	<b>Lambda probe</b>	<b>176</b>
8.1	Assembly overview - Lambda probe	176
8.2	Removing and installing Lambda probe	177
8.3	Removing and installing NOx senders	177
8.4	Removing and installing particulate sensor G784	180
<b>9</b>	<b>Engine control unit</b>	<b>183</b>
9.1	Assembly overview - engine control unit	183
9.2	Removing and installing engine control unit J623	183
<b>26</b>	<b>Exhaust system</b>	<b>185</b>
<b>1</b>	<b>Exhaust pipes/silencer</b>	<b>185</b>
1.1	Assembly overview - silencer	185
1.2	Removing and installing front exhaust pipe	187
1.3	Removing and installing silencer	190
1.4	Stress-free alignment of exhaust system	192
1.5	Checking exhaust system for leaks	193



<b>2</b>	<b>Emission control system</b> .....	<b>194</b>
2.1	Assembly overview - emission control system .....	194
2.2	Removing and installing emission control module .....	194
2.3	Removing and installing ammonia trap .....	198
2.4	Removing and installing exhaust flap control unit J883 .....	198
<b>3</b>	<b>SCR (selective catalytic reduction) system</b> .....	<b>199</b>
3.1	Assembly overview - reducing agent tank .....	199
3.2	Assembly overview - delivery unit .....	201
3.3	Assembly overview - reducing agent supply line .....	203
3.4	Releasing pressure in SCR system .....	203
3.5	Draining reducing agent tank .....	203
3.6	Removing and installing reducing agent tank .....	206
3.7	Removing and installing injector for reducing agent N474 .....	208
3.8	Removing and installing control unit for reducing agent metering system J880 .....	208
3.9	Removing and installing pump for reducing agent V437 .....	209
3.10	Removing and installing pressure sender for reducing agent metering system G686 .....	213
3.11	Removing and installing connection for SCR supply line .....	217
<b>4</b>	<b>Exhaust gas temperature regulation</b> .....	<b>221</b>
<b>5</b>	<b>Exhaust gas recirculation</b> .....	<b>222</b>
5.1	Assembly overview - exhaust gas recirculation system .....	222
5.2	Removing and installing exhaust gas recirculation cooler .....	224
5.3	Removing and installing exhaust gas recirculation valve 2 GX6 .....	227
5.4	Removing and installing exhaust gas recirculation temperature sensor G98 .....	228
<b>6</b>	<b>Exhaust manifolds</b> .....	<b>229</b>
6.1	Assembly overview - exhaust manifold .....	229
6.2	Removing and installing exhaust manifolds .....	229
<b>28</b>	<b>Glow plug system</b> .....	<b>235</b>
1	<b>Glow plug system</b> .....	<b>235</b>