

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on the high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on the fuel system	2
1.4 Safety precautions when working on vehicles with start/stop system	3
1.5 Safety precautions when using testers and measuring instruments during a road test	3
1.6 Safety precautions when working on the SCR system	4
2 Repair instructions	5
2.1 Identification plates	5
2.2 Use of impact wrenches	5
2.3 Rules for cleanliness	6
2.4 Test conditions	6
2.5 Contact corrosion	6
2.6 Routing and attachment of pipes, hoses and wiring	7
2.7 Nuts, bolts	7
2.8 Checking fuel system for leaks	7
20 - Fuel supply system	9
1 Safety information	9
2 Fuel tank	10
2.1 Assembly overview - fuel tank	10
2.2 Draining fuel tank	18
2.3 Removing and installing fuel tank	26
2.4 Removing and installing misfuelling prevention device	46
2.5 Deactivating misfuelling prevention device	50
2.6 Removing and installing cover flap	50
3 Fuel delivery unit/fuel gauge senders	53
3.1 Assembly overview - fuel delivery unit/fuel gauge senders	53
3.2 Removing and installing fuel delivery unit/fuel gauge sender	57
3.3 Bleeding fuel line for metering pump	72
3.4 Removing and installing fuel gauge sender G	73
4 Plug-in connectors	75
4.1 Disconnecting plug-in connectors	75
5 Fuel filter	80
5.1 Assembly overview - fuel filter	80
5.2 Assembly overview - water separator	81
5.3 Removing and installing water separator	85
6 Activated charcoal filter system	90
6.1 Connection diagram - activated charcoal filter system	90
6.2 Assembly overview - activated charcoal filter system	93
6.3 Checking fuel system for leaks	96
6.4 Removing and installing activated charcoal filter	103
6.5 Removing and installing vent line with filter	105
6.6 Removing and installing fuel tank leak detection module GX36	105
6.7 Operation of activated charcoal filter system	108
6.8 Operation of fuel tank leak detection	108
7 Accelerator mechanism	110
7.1 Assembly overview - accelerator pedal module	110
7.2 Removing and installing accelerator pedal module GX2	112
8 Fuel pump	116
8.1 Checking fuel system pressurisation pump G6	116



8.2	Removing and installing suction-jet pump	140
8.3	Removing and installing fuel pump control unit J538	141