

## Contents

<b>01 - Self-diagnosis, Electrical check . . . . .</b>	<b>1</b>
<b>1 Basic notes on self-diagnosis . . . . .</b>	<b>1</b>
1.1 Basic notes on self-diagnosis . . . . .	1
1.2 Connecting fault reader V.A.G 1551 and selecting address word . . . . .	2
1.3 Selecting functions . . . . .	4
1.4 Function of CAN-Bus . . . . .	6
1.5 Checking a "two-line bus system" . . . . .	6
1.6 Steps required after connecting battery terminals: . . . . .	10
<b>2 ABS/EDL Bosch 5.0 and ABS/EDL/TCS Bosch 5.0, for FWD, from MY 1994 to MY 1997 ABS/EDS Bosch 5.0, for 4WD, from MY 1994 to MY 1996 . . . . .</b>	<b>11</b>
2.1 ABS/EDL Bosch 5.0 and ABS/EDL/TCS Bosch 5.0, for FWD, from MY 1994 to MY 1997 ABS/EDS Bosch 5.0, for 4WD, from MY 1994 to MY 1996 . . . . .	11
2.2 Safety measures and basic rules for fault finding . . . . .	11
2.3 Technical publications required . . . . .	13
2.4 Function of Bosch ABS 5.0 Series . . . . .	14
2.5 Table of warning lamp functions . . . . .	15
2.6 Function of self- diagnosis . . . . .	17
2.7 Interrogate control unit version . . . . .	18
2.8 Interrogate fault memory . . . . .	20
2.9 Encode control unit . . . . .	27
2.10 Read measured value block . . . . .	29
2.11 Electrical testing . . . . .	32
<b>3 Bosch ABS/EDL 5.3 for 4WD vehicles from MY 1997 onwards Bosch ABS/EDL/TCS 5.3 for FWD vehicles from MY 1998 onwards . . . . .</b>	<b>45</b>
3.1 Bosch ABS/EDL 5.3 for 4WD vehicles from MY 1997 onwards Bosch ABS/EDL/TCS 5.3 for FWD vehicles from MY 1998 onwards . . . . .	45
3.2 Safety measures and basic rules for fault finding . . . . .	46
3.3 Technical publications required . . . . .	48
3.4 Function of Bosch ABS 5.3 Series . . . . .	48
3.5 Table of warning lamp functions . . . . .	50
3.6 Function of self- diagnosis . . . . .	52
3.7 Interrogate control unit version . . . . .	53
3.8 Interrogate fault memory . . . . .	55
3.9 Final control diagnosis . . . . .	64
3.10 Encode control unit . . . . .	73
3.11 Read measured value block . . . . .	74
3.12 Electrical testing . . . . .	77
<b>4 Electronic Stability Program (ESP) . . . . .</b>	<b>86</b>
4.1 Electronic Stability Program (ESP) . . . . .	86
4.2 Safety measures and basic rules for fault finding . . . . .	87
4.3 Technical publications required . . . . .	89
4.4 Function of ESP . . . . .	90
4.5 Table of warning lamp functions . . . . .	96
4.6 Function of self-diagnosis . . . . .	100
4.7 Interrogate control unit version . . . . .	101
4.8 Interrogating fault memory, fault table, fault codes 00000 to 655535 . . . . .	102
4.9 Fault table; fault codes 00000 to 00526 . . . . .	102
<b>5 Fault table; fault codes 00532 to 01421 . . . . .</b>	<b>108</b>
5.1 Fault table; fault codes 00532 to 01421 . . . . .	108
5.2 Fault table; fault codes 01422 to 01425 . . . . .	113
5.3 Fault table; fault codes 01435 to 01542 . . . . .	121
5.4 Fault table; fault codes 18031 to 65535 . . . . .	126
<b>6 Basic setting . . . . .</b>	<b>131</b>
6.1 Basic setting . . . . .	131

6.2	Zero position compensation for steering angle sender -G85 . . . . .	132
6.3	Final control diagnosis . . . . .	135
6.4	Encode control unit . . . . .	145
6.5	Read measured value block . . . . .	146
6.6	Login-procedure . . . . .	154
<b>7</b>	<b>Electrical check . . . . .</b>	<b>154</b>
7.1	Electrical check . . . . .	154
<b>8</b>	<b>Self-diagnosis of tyre pressure control system . . . . .</b>	<b>175</b>
8.1	Self-diagnosis of tyre pressure control system . . . . .	175
8.2	Safety precautions . . . . .	175
8.3	Interrogate control unit version . . . . .	177
8.4	Interrogate fault memory . . . . .	177
8.5	Fault table for tyre pressure monitoring . . . . .	178
8.6	Encode control unit . . . . .	182
8.7	Read measured value block . . . . .	184
8.8	Adaption . . . . .	191
<b>9</b>	<b>Operating the tyre pressure monitoring system for the first time . . . . .</b>	<b>192</b>
9.1	Operating the tyre pressure monitoring system for the first time . . . . .	192