

## Contents

<b>01 - Self-diagnosis . . . . .</b>	<b>1</b>
<b>1 Self-diagnosis of dash panel insert . . . . .</b>	<b>1</b>
1.1 Self-diagnosis of dash panel insert . . . . .	1
1.2 General information . . . . .	1
1.3 Performing self-diagnosis of dash panel insert . . . . .	2
1.4 Interrogating fault memory . . . . .	3
1.5 Fault table for dash panel insert . . . . .	4
1.6 Final control diagnosis . . . . .	5
1.7 Erasing fault memory . . . . .	7
1.8 End output . . . . .	8
1.9 Code control unit . . . . .	8
1.10 Reading measured value block . . . . .	10
1.11 Adaption . . . . .	12
1.12 Input values when replacing dash panel insert . . . . .	23
<b>2 Self-diagnosis of immobiliser - fixed code version . . . . .</b>	<b>24</b>
2.1 Self-diagnosis of immobiliser - fixed code version . . . . .	24
2.2 General information . . . . .	24
2.3 Starting self-diagnosis of immobiliser . . . . .	25
2.4 Interrogating control unit version . . . . .	26
2.5 Interrogating fault memory . . . . .	27
2.6 Fault table for immobiliser . . . . .	28
2.7 Erasing fault memory . . . . .	29
2.8 End output . . . . .	30
2.9 Reading measured value block . . . . .	30
2.10 Adaption . . . . .	31
2.11 Matching the vehicle keys . . . . .	32
2.12 Lost key procedure . . . . .	36
2.13 Adaption procedure after replacing engine control unit . . . . .	36
2.14 Adaption procedure after replacing immobiliser control unit . . . . .	37
2.15 Emergency starting with V.A.G 1551 . . . . .	38
2.16 Emergency starting without V.A.G 1551 . . . . .	39
<b>3 Self-diagnosis of immobiliser - variable code version . . . . .</b>	<b>40</b>
3.1 Self-diagnosis of immobiliser - variable code version . . . . .	40
3.2 General information . . . . .	41
3.3 Starting self-diagnosis of immobiliser . . . . .	42
3.4 Interrogating control unit version . . . . .	43
3.5 Interrogating fault memory . . . . .	43
3.6 Fault table for immobiliser . . . . .	44
3.7 Erasing fault memory . . . . .	45
3.8 End output . . . . .	46
3.9 Reading measured value block . . . . .	46
3.10 Adaption . . . . .	48
3.11 Matching vehicle keys . . . . .	48
3.12 Lost key procedure . . . . .	51
3.13 Adaption procedure after replacing engine control unit . . . . .	51
3.14 Adaption procedure after replacing immobiliser control unit . . . . .	52
3.15 Emergency starting with V.A.G 1551 . . . . .	53
<b>4 Self-diagnosis of Cruise Control System (CCS) . . . . .</b>	<b>54</b>
4.1 Self-diagnosis of Cruise Control System (CCS) . . . . .	54
4.2 -Diesel engine- . . . . .	54
4.3 Wiring and component testing with test box V.A.G 1598/30 . . . . .	56
<b>5 Self-diagnosis of parking aid . . . . .</b>	<b>58</b>
5.1 Self-diagnosis of parking aid . . . . .	58
5.2 General information . . . . .	58

5.3	Performing self-diagnosis of parking aid . . . . .	58
5.4	Interrogating fault memory . . . . .	60
5.5	Fault table for parking aid . . . . .	61
5.6	Erasing fault memory . . . . .	62
5.7	End output . . . . .	63
5.8	Code control unit . . . . .	63
5.9	Reading measured value block . . . . .	64
5.10	Adaption . . . . .	66
<b>6</b>	<b>Self-diagnosis of automatic headlamp range control . . . . .</b>	<b>68</b>
6.1	Self-diagnosis of automatic headlamp range control . . . . .	68
6.2	General information . . . . .	68
6.3	Performing self-diagnosis of automatic headlamp range control . . . . .	69
6.4	Interrogating fault memory . . . . .	70
6.5	Fault table for automatic headlamp range control . . . . .	71
6.6	Final control diagnosis . . . . .	72
6.7	Basic setting . . . . .	73
6.8	Erasing fault memory . . . . .	74
6.9	End output . . . . .	75
6.10	Code control unit . . . . .	75
6.11	Reading measured value block . . . . .	76
<b>7</b>	<b>Connecting fault reader V.A.G 1551 . . . . .</b>	<b>78</b>
7.1	Connecting fault reader V.A.G 1551 . . . . .	78
<b>27 - Starter, Current supply . . . . .</b>		<b>80</b>
<b>1</b>	<b>Battery . . . . .</b>	<b>80</b>
1.1	Battery . . . . .	80
1.2	Notes on handling batteries . . . . .	81
1.3	Removing and installing battery . . . . .	81
1.4	Visual check . . . . .	83
1.5	Checking electrolyte level . . . . .	83
1.6	No load voltage measurement . . . . .	84
1.7	Checking relative density of electrolyte in all cells . . . . .	85
1.8	Checking voltage under load . . . . .	87
1.9	Charging battery . . . . .	89
1.10	Quick charging/startling boost . . . . .	90
<b>2</b>	<b>Removing and installing alternator . . . . .</b>	<b>90</b>
2.1	Removing and installing alternator . . . . .	90
<b>3</b>	<b>Removing and installing starter . . . . .</b>	<b>96</b>
3.1	Removing and installing starter . . . . .	96
<b>4</b>	<b>Removing and installing Cruise Control System (CCS) . . . . .</b>	<b>102</b>
4.1	Removing and installing Cruise Control System (CCS) . . . . .	102
4.2	Cruise Control System for vehicles with diesel engine . . . . .	102
4.3	Cruise Control System (CCS) for vehicles with 6 or 8-cylinder petrol engine . . . . .	102
4.4	Removing and installing control unit . . . . .	103
4.5	Adjusting rods on positioning element . . . . .	103
4.6	Removing positioning element . . . . .	104
4.7	Removing and installing vacuum pump . . . . .	104
4.8	Removing and installing steering column switch with control switch for CCS => Page . . . . .	105
4.9	Removing and installing vent valves . . . . .	105
4.10	Checking vacuum system for leaks . . . . .	105
<b>90 - Gauges, Instruments . . . . .</b>		<b>106</b>
<b>1</b>	<b>Dash panel insert . . . . .</b>	<b>106</b>
1.1	Dash panel insert . . . . .	106
1.2	Fault message "dEF" on trip recorder display . . . . .	106
1.3	Removing and installing dash panel insert . . . . .	106

1.4	Contact assignment on connectors in dash panel insert (vehicles 1995 > ) . . . . .	108
1.5	Bulb layout on dash panel insert (vehicles 1995 > ) . . . . .	108
1.6	Bulb layout on dash panel insert (vehicles 1997 > ) . . . . .	112
1.7	Contact assignment on connectors in dash panel insert (vehicles 1997 > ) . . . . .	113
1.8	Servicing radio clock . . . . .	117
1.9	Testing speed signal . . . . .	118
1.10	Testing signal from fuel gauge sender -G . . . . .	118
1.11	Checking consumption signal . . . . .	119
1.12	Checking coolant temperature sender . . . . .	119
<b>92 - Windscreen wipe and wash system</b>	.....	<b>121</b>
<b>1</b>	<b>Windscreen wiper system</b> . . . . .	<b>121</b>
1.1	Windscreen wiper system . . . . .	121
1.2	Removing and installing windscreen wiper system . . . . .	121
1.3	Setting wiper blade park position . . . . .	125
1.4	Eliminating wiper judder . . . . .	125
<b>2</b>	<b>Servicing windscreen washer system</b> . . . . .	<b>126</b>
2.1	Servicing windscreen washer system . . . . .	126
2.2	Overview . . . . .	127
2.3	Removing and installing washer fluid container . . . . .	128
2.4	Removing and installing jets . . . . .	130
2.5	Adjusting jets . . . . .	131
<b>3</b>	<b>Servicing headlamp washer system</b> . . . . .	<b>131</b>
3.1	Servicing headlamp washer system . . . . .	131
3.2	Removing and installing headlamp washer system jets . . . . .	132
3.3	Adjusting jets . . . . .	132
3.4	Removing and installing washer fluid container . . . . .	133
<b>94 - Lights, Lamps, Switches - exterior</b>	.....	<b>134</b>
<b>1</b>	<b>Servicing headlamps</b> . . . . .	<b>134</b>
1.1	Servicing headlamps . . . . .	134
1.2	General overview- halogen headlamps . . . . .	134
1.3	General overview-gas-discharge headlamps . . . . .	136
1.4	Removing and installing headlamps . . . . .	142
1.5	Changing bulbs in headlamps . . . . .	143
1.6	Adjusting headlamps . . . . .	144
1.7	Installing repair kit for headlamp housing . . . . .	144
1.8	Converting headlamp connector on wiring harness . . . . .	145
<b>2</b>	<b>Servicing front turn-signal indicators</b> . . . . .	<b>146</b>
2.1	Servicing front turn-signal indicators . . . . .	146
2.2	Removing and installing turn-signal indicators . . . . .	147
2.3	Removing and installing turn-signal indicator bulb . . . . .	147
<b>3</b>	<b>Side mounted turn signals</b> . . . . .	<b>148</b>
3.1	Side mounted turn signals . . . . .	148
3.2	Removing and installing side mounted turn signals . . . . .	148
<b>4</b>	<b>Servicing rear lights</b> . . . . .	<b>149</b>
4.1	Servicing rear lights . . . . .	149
4.2	Removing and installing bulb carrier in side panel . . . . .	149
4.3	Removing and installing rear light in side panel . . . . .	150
4.4	Removing and installing rear light bulbs in boot lid . . . . .	150
4.5	Removing and installing rear light in boot lid . . . . .	151
<b>5</b>	<b>Removing and installing high-level brake light</b> . . . . .	<b>152</b>
5.1	Removing and installing high-level brake light . . . . .	152
<b>6</b>	<b>Servicing steering column switches</b> . . . . .	<b>154</b>
6.1	Servicing steering column switches . . . . .	154
6.2	Removing and installing steering column switch . . . . .	154

6.3	Wiring connections on steering column switch . . . . .	157
<b>7</b>	<b>Servicing lock cylinder and ignition/starter switch . . . . .</b>	<b>159</b>
7.1	Servicing lock cylinder and ignition/starter switch . . . . .	159
7.2	Removing and installing lock cylinder . . . . .	159
7.3	Removing and installing ignition/starter switch . . . . .	160
7.4	Wiring connections on ignition/starter switch . . . . .	161
<b>8</b>	<b>General overview of automatic headlamp range control . . . . .</b>	<b>162</b>
8.1	General overview of automatic headlamp range control . . . . .	162
8.2	Removing and installing control unit for automatic headlamp range control -J431 . . . . .	163
8.3	Removing and installing gas-discharge headlamps . . . . .	164
8.4	Removing and installing headlamp range control positioning motor -V48/V49 . . . . .	164
8.5	Removing and installing vehicle levelling sender, front left -G78 . . . . .	164
8.6	Removing and installing vehicle levelling sender, rear left -G76 . . . . .	165
<b>9</b>	<b>General overview of parking aid . . . . .</b>	<b>166</b>
9.1	General overview of parking aid . . . . .	166
9.2	Removing and installing parking aid control unit -J446 . . . . .	167
9.3	Removing and installing parking aid warning buzzer -H15 . . . . .	168
9.4	Removing and installing parking aid senders . . . . .	168
<b>96 - Lights, Lamps, Switches - interior . . . . .</b>	<b>170</b>	
<b>1</b>	<b>Servicing switches . . . . .</b>	<b>170</b>
1.1	Servicing switches . . . . .	170
1.2	Removing and installing switches in centre console . . . . .	170
1.3	Removing and installing rear-seat heating switch . . . . .	171
1.4	Removing and installing mirror adjuster switch . . . . .	172
1.5	Removing and installing front window lifter switches . . . . .	172
1.6	Removing and installing rear window lifter switches . . . . .	173
1.7	Removing and installing sunroof switch . . . . .	173
1.8	Removing and installing luggage compartment unlocking switch . . . . .	174
1.9	Removing and installing electric steering column adjustment switch . . . . .	175
1.10	Removing and installing driver's seat memory buttons . . . . .	178
1.11	Removing and installing safety central locking switch . . . . .	178
1.12	Removing and installing door contact switch . . . . .	179
1.13	Removing and installing bonnet contact switch . . . . .	179
1.14	Removing and installing boot lid/tailgate contact switch . . . . .	179
<b>2</b>	<b>Servicing immobiliser . . . . .</b>	<b>180</b>
2.1	Servicing immobiliser . . . . .	180
2.2	Defective transponder and/or lost keys . . . . .	181
2.3	Replace reader coil . . . . .	181
2.4	Procedure when replacing lock set or immobiliser control unit . . . . .	181
2.5	Testing system . . . . .	182
<b>3</b>	<b>Servicing interior lights . . . . .</b>	<b>183</b>
3.1	Servicing interior lights . . . . .	183
3.2	Removing and installing front interior light . . . . .	183
3.3	Removing and installing rear interior light . . . . .	184
3.4	Removing and installing luggage compartment lights . . . . .	184
3.5	Removing and installing sill courtesy lights and door reflectors . . . . .	185
<b>4</b>	<b>Servicing lock cylinder heating . . . . .</b>	<b>185</b>
4.1	Servicing lock cylinder heating . . . . .	185
4.2	Removing and installing control unit for lock cylinder heating . . . . .	185
<b>5</b>	<b>Cruise Control System (CCS) . . . . .</b>	<b>186</b>
5.1	Cruise Control System (CCS) . . . . .	186
5.2	Design of Cruise Control System: . . . . .	186
5.3	Removing and installing control unit . . . . .	186
5.4	Removing and installing vacuum pump . . . . .	187
<b>6</b>	<b>Servicing horn . . . . .</b>	<b>187</b>

6.1	Servicing horn . . . . .	187
6.2	Removing and installing horn . . . . .	188
<b>7</b>	<b>Heated steering wheel . . . . .</b>	<b>188</b>
7.1	Heated steering wheel . . . . .	188
7.2	Servicing heated steering wheel . . . . .	189
<b>97 - Wiring . . . . .</b>		<b>190</b>
<b>1</b>	<b>Relay carrier, fuse carrier . . . . .</b>	<b>190</b>
1.1	Relay carrier, fuse carrier . . . . .	190
1.2	Electronics box in engine compartment . . . . .	190
1.3	Electronics box in passenger's footwell . . . . .	191
1.4	Fuse carrier on right in passenger's footwell . . . . .	192
1.5	Auxiliary relay carrier on left in driver's footwell . . . . .	193
1.6	Auxiliary relay carrier on left in luggage compartment . . . . .	193
<b>2</b>	<b>Fitting locations of control units . . . . .</b>	<b>194</b>
2.1	Fitting locations of control units . . . . .	194
<b>3</b>	<b>Repairing wiring and plug connectors . . . . .</b>	<b>197</b>
3.1	Repairing wiring and plug connectors . . . . .	197
3.2	General notes . . . . .	197
3.3	Repairing 0.35 mm <sup>2</sup> wiring . . . . .	198
3.4	Safety precautions when repairing wiring and plug connectors . . . . .	199