

Contents

91 - Radio, 2-way radio, Telephone	1
1 Radio systems	1
1.1 Radio systems	1
1.2 General information	1
1.3 Block diagram of radio system (vehicles > 1997)	2
1.4 Block diagram of radio system (vehicles 1998 >)	8
1.5 Connectors on back of symphony radio	22
1.6 Rear window radio aerial connection points	23
1.7 Exploded view of "gamma", "delta" and "chorus" radio systems, as well as "concert" up to MY 01	26
1.8 Exploded view of delta radio with BOSE sound system and concert radio with BOSE sound system up to MY 01	29
1.9 Exploded view of "symphony" and as of MY 02 "concert" radio systems	32
1.10 Removing and installing radio set	36
1.11 Removing and installing "symphony" radio set	37
1.12 Removing and installing speakers	38
1.13 Removing and installing aerial	40
1.14 Removing and installing CD changer	41
1.15 Removing and installing BOSE power amplifier	42
1.16 Removing and installing radio aerial amplifier	43
1.17 Removing and installing radio aerial amplifier ("symphony" and, as of MY 02, "concert")	43
1.18 Removing and installing aerial selection control unit -J515	45
2 Telephone system	45
2.1 Telephone system	45
2.2 General information	45
2.3 Permanently installed telephone	46
2.4 Mobile phone and, as of MY 02, pre-fitted components for mobile phone installation	49
2.5 Pre-fitted components for mobile phone installation (up to 6/98)	51
2.6 Pre-fitted components for mobile phone installation (as of 7/98)	52
2.7 Removing and installing handset cradle	55
2.8 Removing and installing handset with holder in centre console	55
2.9 Removing and installing handset with holder in centre armrest	56
2.10 Removing and installing mobile phone with holder in centre console	57
2.11 Removing and installing mobile phone with holder in centre armrest	59
2.12 Removing and installing transmitter/receiver unit up to MY 98	59
2.13 Removing and installing transmitter/receiver unit as of MY 99	60
2.14 Removing and installing amplifier for mobile phone (compensor)	60
2.15 Removing and installing operating electronics control unit/telephone (interface)	61
2.16 Removing and installing interface for multi-function steering wheel up to MY 99	61
2.17 Removing and installing hands-free microphone up to MY 99	62
2.18 Removing and installing hands-free microphone as of MY 00	63
2.19 Removing and installing hands-free loudspeaker	63
2.20 Removing and installing aerial	64
2.21 Service installation of aerial	64
2.22 Pre-fitted components for telephone installation	65
3 Navigation system I (destination finding system) (up to week 26/99)	65
3.1 Navigation system I (destination finding system) (up to week 26/99)	65
3.2 General information	65
3.3 General information on navigation system I	66
3.4 Block diagram	67
3.5 Exploded view of navigation system I	72
3.6 Service information on navigation system I	74
3.7 Customer consultation in the event of complaints	75
3.8 Action to be taken on navigation system I following service work or tyre change	77

3.9	Calling up technical service software	78
3.10	Automatic checking of current parameters	79
3.11	Wheel calibration after changing tyre or replacing control unit	80
3.12	Wiring test on navigation system I	87
3.13	Test drive (basic calibration of navigation system I)	91
3.14	System test on navigation system I	97
3.15	Starting navigation system	107
3.16	Entering location	108
3.17	Interrogating navigation system I software version	110
3.18	Notes on replacing navigation system components	111
3.19	Removing and installing navigation system with CD drive control unit -J401	111
3.20	Removing and installing navigation system operating unit -E199	112
3.21	Removing and installing operating electronics control unit, navigation -J402	113
3.22	Removing and installing navigation aerial (GPS) -R50	113
3.23	Removing and installing magnetic field sender (electronic compass) -G197	114
3.24	Removing and installing heated rear window measuring resistor -N219	115
4	Navigation system II (navigation system Plus) (up to week 47/99)	116
4.1	Navigation system II (navigation system Plus) (up to week 47/99)	116
4.2	General information	116
4.3	General description	116
4.4	Block diagram of navigation system II (navigation system Plus)	118
4.5	Block diagram of navigation system II (navigation system Plus) with BOSE sound system	121
4.6	Connectors on back of operating electronics control unit, navigation -J402	124
4.7	Connectors on back of navigation/TV tuner -J415	129
4.8	Rear window aerial connection points	132
4.9	Exploded view of navigation system II	133
4.10	Block diagram of navigation system II with BOSE sound system	136
4.11	Removing and installing operating electronics control unit, navigation -J402	139
4.12	Removing and installing navigation/TV tuner -J415	141
4.13	Removing and installing radio aerial amplifier	142
4.14	Removing and installing TV aerial amplifier	143
4.15	Checking operation of individual TV aerial amplifiers	144
5	Navigation system II-D (navigation system Plus) RNS 4.1 (as of week 48/99)	146
5.1	Navigation system II-D (navigation system Plus) RNS 4.1 (as of week 48/99)	146
5.2	General information	146
5.3	General description	146
5.4	On-screen fault messages	147
5.5	Block diagram of navigation system II-D	149
5.6	Block diagram of navigation system II-D with BOSE sound system	151
5.7	Connectors on back of operating electronics control unit, navigation -J402	153
5.8	Connectors on back of navigation/TV tuner -J415 (up to MY 01)	158
5.9	Rear window aerial connection points	161
5.10	Connectors at navigation system interface -R94	162
5.11	Connectors on back of navigation/TV tuner -J415 as of MY 02	163
5.12	Connectors at aerial selection control unit -J515	165
5.13	Exploded view of navigation system II-D	167
5.14	Exploded view of navigation system II-D with BOSE sound system	170
5.15	Removing and installing navigation system interface -R94	173
5.16	Removing and installing rear window aerial amplifiers	173
5.17	Checking operation of individual aerial amplifiers	175
6	Navigation system III (destination finding system) (as of week 27/99)	176
6.1	Navigation system III (destination finding system) (as of week 27/99)	176
6.2	General information	176
6.3	General description	176
6.4	Block diagram of navigation system III	177
6.5	Connectors on back of navigation system with CD drive control unit -J401	178

6.6	Exploded view of navigation system III	179
6.7	Removing and installing function selection switch II -E272	181
6.8	Removing and installing navigation system with CD drive control unit -J401	181
7	Rear Seat Entertainment system (RSE)	182
7.1	Rear Seat Entertainment system (RSE)	182
7.2	General information	182
7.3	Operating conditions	183
7.4	Exploded view of Rear Seat Entertainment system	183
7.5	Exploded view of fitting locations - DVD console	188
7.6	Removing and installing DVD console	190
7.7	Dismantling DVD console	193
7.8	Fault table	194
8	Navigation system Nav 4 (BNS 4.0) as of week 04/01	197
8.1	Navigation system Nav 4 (BNS 4.0) as of week 04/01	197
8.2	General information	197
8.3	General description	197
8.4	Block diagram of navigation system BNS 4.0	198
8.5	Connectors and contact assignments	198
8.6	Exploded view of BNS 4.0	198
9	Multi-function steering wheel	198
9.1	Multi-function steering wheel	198
9.2	General information	198
9.3	General description	198
9.4	Block diagram of multi-function steering wheel (up to MY 01)	199
9.5	Block diagram of multi-function steering wheel (as of MY 02)	201
9.6	Button assignment on multi-function steering wheels	203
9.7	Removing and installing multi-function steering wheel switches	208
9.8	Removing and installing multi-function steering wheel control unit -J453	209
10	Telematics	209
10.1	Telematics	209
10.2	General information	209
10.3	General description	210
10.4	Block diagram of telematics system	210
10.5	Connectors at telephone/telematics control unit -J526	213
10.6	Exploded view of telematics system	215
10.7	Removing and installing telephone/telematics control unit -J526	219
10.8	Replacing telematics SIM cards	220
10.9	Initialising telephone/telematics control unit -J526	221
10.10	Removing and installing GPS aerial filter -R87	222
10.11	Removing and installing emergency call button -E276 and breakdown help button -E275	223
10.12	Removing and installing hands-free microphone	223
10.13	Removing and installing telematics back-up battery	224
10.14	Removing and installing additional loudspeaker for telematics -R91 (emergency loudspeaker)	225
10.15	Removing and installing additional aerial for telematics -R90 (emergency aerial)	225
11	Voice control system	226
11.1	Voice control system	226
11.2	General description	226
11.3	Block diagram of voice control system	227
11.4	Connectors at language input control unit -J507	228
11.5	Exploded view of voice control system	230
11.6	Removing and installing language input control unit -J507	232
12	Electronic logbook	233
12.1	Electronic logbook	233
12.2	Function:	233
12.3	Block diagram of electronic logbook	233

12.4	Fault message	234
12.5	Removing and installing chip-card reader	234
13	CAN bus systems	235
13.1	CAN bus systems	235
13.2	General description	235
13.3	Block diagram of display CAN bus	236