

Contents

50 - Body front	1
1 Contact corrosion	1
1.1 Contact corrosion	1
2 Body, front	2
2.1 Body, front	2
2.2 Removing and installing radiator and headlight surrounds	2
2.3 Removing and installing left and right support bracket	6
2.4 Removing and installing wing	8
2.5 Removing and installing noise insulation	10
55 - Bonnet, Flaps	12
1 Contact corrosion	12
1.1 Contact corrosion	12
2 Bonnet	13
2.1 Bonnet	13
2.2 Bonnet, lock pin and arrester release mechanism	13
2.3 Adjusting bonnet	18
2.4 Removing and installing radiator grille	19
2.5 Removing and installing bonnet lock cable	20
3 Boot lid	22
3.1 Boot lid	22
3.2 Removing and installing boot lid	22
3.3 Adjusting boot lid	27
3.4 Removing and installing lock cylinder for boot lid lock	29
3.5 Dismantling and assembling lock cylinder	31
3.6 Installing boot lid seal	34
57 - Front doors/Door components/Central locking system	35
1 Contact corrosion	35
1.1 Contact corrosion	35
2 Front door	36
2.1 Front door	36
2.2 Removing and installing door shell and door subframe	36
2.3 Removing and installing front door window	40
2.4 Removing and installing front window lifter	44
2.5 Removing and installing front door lock for profile key with operating elements	47
2.6 Removing and installing front door handle	52
2.7 Removing and installing front door lock for inner face key with operating elements	56
2.8 Removing and installing cover for door lock	58
2.9 Removing and installing operating rods for front door lock	60
2.10 Front door handle Assembly overview	62
2.11 Removing door handle	65
2.12 Front door handle pre-assembly	67
3 Adjusting door - adjustment sequence	70
3.1 Adjusting door - adjustment sequence	70
3.2 I - Adjusting door shell	70
3.3 II - Adjusting door subframe	72
4 Central locking	74
4.1 Central locking	74
4.2 Central locking system - exploded view	75
58 - Rear doors/Door components	81
1 Contact corrosion	81



1.1	Contact corrosion	81
2	Rear door	82
2.1	Rear door	82
2.2	Removing and installing door shell and door component carrier	82
2.3	Removing and installing rear door window	87
2.4	Removing and installing rear window lifter	91
2.5	Removing and installing rear door lock with operating elements	94
2.6	Removing and installing rear door handle (vehicles with profile lock)	98
2.7	Removing and installing rear door handle (vehicles with inner face lock)	101
2.8	Removing and installing operating rods for rear door lock	103
2.9	Rear door handle pre-assembly	105
3	Adjusting door - adjustment sequence	105
3.1	Adjusting door - adjustment sequence	105
3.2	I - Adjusting door shell	105
3.3	II - Adjusting door subframe	108
60 - Sliding/tilting roof		110
1	Contact corrosion	110
1.1	Contact corrosion	110
2	Sun roof	111
2.1	Sun roof	111
2.2	Sun roof: Exploded view	111
2.3	Removing and installing sun roof panel - aluminium and solar panel	114
2.4	Removing and installing sun roof headliner - aluminium and solar panel	114
2.5	Removing and installing sun roof panel - glass panel	116
2.6	Removing and installing sun roof headliner - glass panel	117
2.7	Removing and installing wind deflector	118
2.8	Removing and installing seal for sun roof panel	119
2.9	Removing and installing sun roof motor	121
2.10	Adjusting zero setting of motor	122
2.11	Removing and installing guide plate with cable	123
2.12	Removing rear guide from guide plate / installing	124
2.13	Testing and adjusting guide plate zero-setting	124
2.14	Adjusting height of sun roof panel	125
3	Cleaning water drain hoses	127
3.1	Cleaning water drain hoses	127
63 - Bumpers		128
1	Contact corrosion	128
1.1	Contact corrosion	128
2	Front bumper	129
2.1	Front bumper	129
2.2	Single-piece front bumper(without foglamps)- Exploded view	129
2.3	Removing and installing front bumper	131
2.4	Adjusting front bumper	132
2.5	Removing and installing front bumper cover	133
2.6	Two-piece front bumper(with foglamps) - Exploded view	135
2.7	Removing and installing front bumper	138
2.8	Adjusting front bumper	139
2.9	Front trim strip and spoiler Assembly overview	141
2.10	Remove front trim strip	143
2.11	Installing front trim strip	144
3	Rear bumper	145
3.1	Rear bumper	145
3.2	Single-piece rear bumper- Exploded view	145
3.3	Removing and installing rear bumper	148

3.4	Adjusting rear bumper	148
3.5	Removing and installing rear bumper cover	149
3.6	Two-piece rear bumper- Exploded view	151
3.7	Rear trim strip and spoiler Assembly overview	154
3.8	Installing rear bumper	157
3.9	Adjusting rear bumper	158
4	Checking impact absorber	159
4.1	Checking impact absorber	159
64 - Glazing		162
1	Contact corrosion	162
1.1	Contact corrosion	162
2	Flush-bonded windows	163
2.1	Flush-bonded windows	163
2.2	Removing and installing flush-bonded windows - general	163
2.3	Repair work using special tool VAS 1993	165
2.4	Materials	165
2.5	Minimum setting times.	166
2.6	Touching up windows with sealant	166
3	Removing and installing windscreen: Exploded view	167
3.1	Removing and installing windscreen: Exploded view	167
3.2	Removing	170
3.3	Installing	173
4	Removing and installing rear window - exploded view	177
4.1	Removing and installing rear window - exploded view	177
4.2	Removing	178
4.3	Installing	183
5	Removing and installing side window	186
5.1	Removing and installing side window	186
66 - Exterior equipment		189
1	Contact corrosion	189
1.1	Contact corrosion	189
2	Roof trim strip	190
2.1	Roof trim strip	190
2.2	Removing and installing front roof trim strip	190
2.3	Removing and installing rear roof trim strip	194
3	Protective strips	197
3.1	Protective strips	197
3.2	Removing and installing protective rubber strip for wing	197
3.3	Removing and installing protective rubber strip for front and rear door	197
3.4	Removing and installing protective rubber strip for rear side panel	198
3.5	Removing and installing trim cover for side member	198
3.6	Removing and installing outer sill panel trim	201
4	Removing and installing outer trim	205
4.1	Removing and installing outer trim	205
4.2	Removing and installing A-pillar trim	205
4.3	Removing and installing B-pillar trim	205
5	Exterior mirror	206
5.1	Exterior mirror	206
5.2	Removing and installing exterior mirror	206
5.3	Removing and installing exterior mirror glass	207
5.4	Removing and installing housing for exterior mirror	208
5.5	Renewing electric adjuster	208
6	Emblem	210



6.1	Emblem	210
6.2	Removing and installing Audi emblem	210
7	Protective foil	211
7.1	Protective foil	211
7.2	Bonding protective foil onto side panel	211
8	Wheel housing liners	212
8.1	Wheel housing liners	212
8.2	Removing and installing front wheel housing liner	212
8.3	Removing and installing rear wheel housing liner	214
9	Underbody cover panels	215
9.1	Underbody cover panels	215
9.2	Removing and installing cover panel	215