

## Contents

<b>00 - Materials</b> .....	<b>1</b>
<b>1 Qualification</b> .....	<b>1</b>
<b>2 Safety precautions</b> .....	<b>2</b>
2.1 Safety precautions .....	2
2.2 Safety precautions when working on the cooling system .....	4
2.3 Safety precautions when using testers and measuring instruments during a road test .....	4
<b>3 Repair instructions</b> .....	<b>5</b>
3.1 Important notes .....	5
3.2 General notes .....	5
3.3 Information on handling fine dust, aluminium dust and steel dust .....	6
3.4 Routing and attachment of pipes, hoses and wiring .....	6
3.5 Contact corrosion .....	7
3.6 Bonding surfaces for adhesive strips .....	7
3.7 Self-locking bolts .....	7
3.8 Identification plates .....	7
3.9 Impact wrenches .....	7
3.10 Matching the surface contour .....	8
<b>4 Extraction systems for steel/aluminium body repair station ("multi-material-mix" workplace)</b> .....	<b>9</b>
<b>5 Processing body structure adhesive D 180 004 M2</b> .....	<b>11</b>
5.1 Preparing bonding surfaces .....	12
<b>6 Tools</b> .....	<b>26</b>
6.1 Using edge milling unit -VAS 882 005- .....	30
6.2 Helicoil plus Twinert .....	61
<b>50 - Body - front</b> .....	<b>71</b>
<b>1 Safety precautions</b> .....	<b>71</b>
<b>2 Wing mounting flange - Renewal</b> .....	<b>72</b>
2.1 Procedure .....	72
<b>3 Front wheel housing - Renewal</b> .....	<b>74</b>
3.1 Procedure .....	74
<b>4 Front longitudinal member - Renewal</b> .....	<b>78</b>
4.1 Procedure .....	78
<b>5 Closure plate for suspension strut mounting</b> .....	<b>82</b>
5.1 Procedure .....	82
<b>6 Longitudinal member (front section) - Renewal</b> .....	<b>84</b>
6.1 Procedure .....	84
<b>51 - Body - centre</b> .....	<b>87</b>
<b>1 Safety precautions</b> .....	<b>87</b>
<b>2 Roof - Renewal</b> .....	<b>88</b>
2.1 Procedure .....	88
<b>3 A-pillar trim - Renewal</b> .....	<b>92</b>
3.1 Procedure .....	92
<b>4 A-pillar - Renewal</b> .....	<b>95</b>
4.1 Procedure .....	95
<b>5 Outer B-pillar - Renewal</b> .....	<b>96</b>
5.1 Procedure .....	96
<b>6 Inner B-pillar - Renewal</b> .....	<b>99</b>
6.1 Procedure .....	99



<b>7</b>	<b>Outer side member - Renewal</b> .....	<b>104</b>
7.1	Procedure .....	104
<b>8</b>	<b>Inner side member - Partial renewal</b> .....	<b>108</b>
8.1	Procedure .....	108
<b>9</b>	<b>Top part of cross panel - Renewal</b> .....	<b>112</b>
9.1	Procedure .....	112
<b>53 - Body - rear</b> .....		<b>116</b>
<b>1</b>	<b>Safety precautions</b> .....	<b>116</b>
<b>2</b>	<b>Rear cross panel - Renewal</b> .....	<b>117</b>
2.1	Procedure .....	117
<b>3</b>	<b>Rear cross panel/side panel - Partial renewal</b> .....	<b>120</b>
3.1	Procedure .....	120
<b>4</b>	<b>Luggage compartment floor/side panel - Renewal</b> .....	<b>123</b>
4.1	Procedure .....	123
<b>5</b>	<b>Rear longitudinal member - Partial renewal</b> .....	<b>126</b>
5.1	Procedure .....	126
<b>6</b>	<b>Side panel - Renewal</b> .....	<b>128</b>
6.1	Procedure .....	128
<b>7</b>	<b>Drip rail - Renewal</b> .....	<b>135</b>
7.1	Procedure .....	135