

## Contents

<b>01 - Self-diagnosis</b> .....	<b>1</b>
<b>1 Connecting fault reader V.A.G 1551</b> .....	<b>1</b>
1.1 Connecting fault reader V.A.G 1551 .....	1
<b>2 Self-diagnosis of airbag system</b> .....	<b>3</b>
2.1 Self-diagnosis of airbag system .....	3
2.2 General notes .....	3
2.3 Starting airbag system self-diagnosis .....	5
2.4 Interrogating fault memory .....	6
2.5 Erase fault memory .....	7
2.6 Fault table .....	7
2.7 Final control diagnosis up to CW 18.99 .....	22
2.8 Final control diagnosis as of week 18.99 .....	23
2.9 Encoding control unit .....	24
2.10 Reading measured value block > 10.98 .....	27
2.11 Read measured value block, Airbag 8 (merging from 10.98) .....	31
2.12 Airbag 8 (introduced as of 10.98) .....	31
2.13 Adaption: Activate and deactivate passenger's airbag unit (vehicles 1997 only >) .....	34
<b>3 Central locking system self-diagnosis 07.96 ä</b> .....	<b>37</b>
3.1 Central locking system self-diagnosis 07.96 ä .....	37
3.2 Initiating self-diagnosis of the central locking system .....	38
3.3 Interrogating fault memory .....	39
3.4 Erase fault memory .....	40
3.5 Fault table .....	41
3.6 Final control diagnosis .....	45
3.7 Encoding control unit .....	47
3.8 Standard coding for vehicles > 06.97 .....	47
3.9 Standard coding for vehicles 07.97 ä .....	47
3.10 Standard coding for vehicles 18.00 ä .....	48
3.11 Reading measured value block .....	50
3.12 Measured value block overview .....	50
3.13 Matching or deleting vehicle key for radio remote control .....	54
<b>4 Servicing ultrasonic interior scanning system &gt; 06.97</b> .....	<b>56</b>
4.1 Servicing ultrasonic interior scanning system > 06.97 .....	56
4.2 Functional test of interior monitor .....	56
4.3 Interior scanning system diagnosis .....	57
4.4 Diagnosis table .....	57
4.5 Fault remedy .....	58
4.6 Removing and installing ultrasonic sensors for interior scanning system .....	59
4.7 Removing and installing control unit for interior scanning system .....	59
4.8 Checking momentary contact deactivation switch .....	61
<b>5 Ultrasonic interior scanning system self-diagnosis 07.97 ä</b> .....	<b>62</b>
5.1 Ultrasonic interior scanning system self-diagnosis 07.97 ä .....	62
5.2 Initiating self-diagnosis of the interior monitor .....	62
5.3 Interrogating fault memory .....	64
5.4 Erase fault memory .....	64
5.5 Fault table .....	65
5.6 Final control diagnosis (vehicles without head airbag) .....	68
5.7 Final control diagnosis (vehicles with head airbag) .....	70
5.8 Encoding the control unit (vehicles without head airbag) .....	71
5.9 Encoding the control unit (vehicles with head airbag) .....	71
5.10 Reading measured value block .....	72
5.11 Measured value block overview .....	73
5.12 Adaption .....	73