

## Contents

<b>01 - Self-diagnosis, Electrical check</b> .....	<b>1</b>
<b>1 Self-diagnosis of air conditioner</b> .....	<b>1</b>
1.1 Self-diagnosis of air conditioner .....	1
1.2 Assignment of operating and display unit -E87 .....	1
1.3 Technical data regarding self-diagnosis .....	2
1.4 Functional description .....	2
1.5 Fault detection .....	2
1.6 Safety precautions .....	4
1.7 Connecting fault reader V.A.G 1551 and selecting air conditioner/heater electronics .....	4
<b>2 Interrogating fault memory</b> .....	<b>6</b>
2.1 Interrogating fault memory .....	6
2.2 Notes on fault table .....	8
2.3 Fault table up to fault code 00800 .....	9
2.4 Fault table from fault code 00801 onwards .....	20
<b>3 Final control diagnosis</b> .....	<b>26</b>
3.1 Final control diagnosis .....	26
<b>4 Basic setting</b> .....	<b>37</b>
4.1 Basic setting .....	37
<b>5 Erasing fault memory, ending output</b> .....	<b>38</b>
5.1 Erasing fault memory, ending output .....	38
<b>6 Encoding operating and display unit-E87-</b> .....	<b>39</b>
6.1 Encoding operating and display unit-E87- .....	39
6.2 Code table up to part No. index "H" .....	41
6.3 Code table from part No. index "J" onwards .....	42
<b>7 Reading measured value block</b> .....	<b>42</b>
7.1 Reading measured value block .....	42
7.2 Measured value blocks up to display group 009 .....	47
7.3 Measured value blocks from display group 010 onwards .....	57
<b>8 Electrical testing</b> .....	<b>69</b>
8.1 Electrical testing .....	69
8.2 Wiring and component test with test box V.A.G 1598/19 .....	69
8.3 Electrical test up to test step 5 .....	71
8.4 Electrical test from test step 6 onwards .....	77
8.5 Functional description of solar roof .....	82
8.6 Checking wiring of diagnostic connector .....	84
<b>9 Checking bus system</b> .....	<b>86</b>
9.1 Checking bus system .....	86
9.2 Functional description of bus system .....	86
9.3 Checking bus system if "Drive train data bus defective" fault occurs .....	87
9.4 Checking bus system if "No communication" fault occurs .....	88
<b>10 Electrical test on heated rear window</b> .....	<b>89</b>
10.1 Electrical test on heated rear window .....	89
<b>11 Heated windscreen</b> .....	<b>91</b>
11.1 Heated windscreen .....	91
11.2 Functional description of heated windscreen .....	91
11.3 Disabling heated windscreen .....	92
<b>87 - Air conditioning</b> .....	<b>93</b>
<b>1 Safety measures when working on vehicles with air conditioner and for handling refrigerant</b> .....	<b>93</b>
1.1 Safety measures when working on vehicles with air conditioner and for handling refrigerant .....	93



<b>2</b>	<b>Notes on general repairs</b> . . . . .	<b>95</b>
2.1	Notes on general repairs . . . . .	95
2.2	Contact corrosion . . . . .	95
<b>3</b>	<b>Servicing work on refrigerant circuit</b> . . . . .	<b>96</b>
3.1	Servicing work on refrigerant circuit . . . . .	96
3.2	High-pressure switch for air conditioner -F23 and for magnetic coupling -F118 . . . . .	101
3.3	Air conditioner pressure switch -F129 . . . . .	102
3.4	Low-pressure switch for air conditioner -F73 . . . . .	104
3.5	O-rings for refrigerant circuit . . . . .	105
<b>4</b>	<b>Detaching and reattaching compressor from/to bracket, removing and installing compressor bracket</b> . . . . .	<b>105</b>
4.1	Detaching and reattaching compressor from/to bracket, removing and installing compressor bracket . . . . .	105
4.2	6-cylinder petrol engines . . . . .	106
4.3	6-cylinder TDI engines . . . . .	109
4.4	8-cylinder engines . . . . .	109
4.5	12-cylinder engine . . . . .	111
<b>5</b>	<b>Servicing magnetic coupling -N25</b> . . . . .	<b>112</b>
5.1	Servicing magnetic coupling -N25 . . . . .	112
5.2	Zexel compressor . . . . .	113
5.3	Denso compressor . . . . .	117
<b>6</b>	<b>Components used to control and regulate air conditioner (in engine compartment)</b> . . . . .	<b>120</b>
6.1	Components used to control and regulate air conditioner (in engine compartment) . . . . .	120
6.2	Removing and installing air flow flap control motor -V71 with potentiometer -G113 . . . . .	128
6.3	Removing and installing intake housing with air flow flap . . . . .	130
6.4	Removing and installing fresh air blower -V2 . . . . .	131
6.5	Removing and installing fresh air intake duct temperature sensor -G89 . . . . .	132
6.6	Removing and installing air recirculation flap control motor -V113 . . . . .	132
6.7	Removing and installing fresh air blower control unit -J126 . . . . .	134
6.8	Removing and installing pump/valve unit . . . . .	135
6.9	Removing and installing reinforcing panel (plenum chamber) . . . . .	138
6.10	Removing and installing dust and pollen filter . . . . .	138
6.11	Dust and pollen filter with activated charcoal filter insert . . . . .	138
6.12	Functioning of air quality sensor -G238 . . . . .	139
6.13	Testing air quality sensor -G238 . . . . .	140
6.14	Removing and installing air quality sensor -G238 . . . . .	144
<b>7</b>	<b>Components used to control and regulate air conditioner (in passenger compartment)</b> . . . . .	<b>144</b>
7.1	Components used to control and regulate air conditioner (in passenger compartment) . . . . .	144
7.2	Removing and installing operating and display unit -E87 . . . . .	152
7.3	Replacing bulbs of operating and display unit -E87 . . . . .	157
7.4	Removing and installing centre dash panel vents . . . . .	157
7.5	Removing and installing top left/top right dash panel vents . . . . .	158
7.6	Removing and installing left/right side window defroster vents . . . . .	158
7.7	Removing and installing bottom left/bottom right dash panel vents . . . . .	159
7.8	Removing and installing rear centre footwell vents . . . . .	159
7.9	Checking, removing and installing condensation drainage hose with valve . . . . .	160
7.10	Removing and installing centre vents control motors (-V102, -V110 and -V111) . . . . .	162
7.11	Removing and installing defrost flap control motor -V107 . . . . .	164
7.12	Removing and installing left footwell flap control motor -V108 and rear footwell vent control motor -V112 . . . . .	166
7.13	Removing and installing temperature flap control motor -V68 and right footwell flap control motor -V109 . . . . .	167
7.14	Removing and installing sunlight penetration photosensor -G107 . . . . .	168
7.15	Removing and installing dash panel temperature sensor -G56 . . . . .	168
7.16	Removing and installing vent temperature senders . . . . .	169
7.17	Removing and installing dash panel temperature sensor blower -V42 . . . . .	169
<b>8</b>	<b>Removing and installing heat exchangers for air conditioner unit</b> . . . . .	<b>170</b>

8.1	Removing and installing heat exchangers for air conditioner unit . . . . .	170
8.2	Removing and installing right heat exchanger (front passenger's side) . . . . .	171
8.3	Removing and installing left heat exchanger (driver's side) . . . . .	177
<b>9</b>	<b>Air distribution diagram . . . . .</b>	<b>181</b>
9.1	Air distribution diagram . . . . .	181
<b>10</b>	<b>Testing cooling capacity of air conditioner . . . . .</b>	<b>185</b>
10.1	Testing cooling capacity of air conditioner . . . . .	185
<b>11</b>	<b>Testing heating capacity of air conditioner and checking functioning of pump/valve unit . .</b>	<b>189</b>
11.1	Testing heating capacity of air conditioner and checking functioning of pump/valve unit . .	189
<b>12</b>	<b>Servicing work on refrigerant circuit . . . . .</b>	<b>190</b>
12.1	Servicing work on refrigerant circuit . . . . .	190
12.2	Removing and installing reservoir . . . . .	201
12.3	Removing and installing condenser . . . . .	204
12.4	Removing and installing restrictor . . . . .	205
12.5	Detaching and reattaching refrigerant pipes from/to Nippondenso compressor . . . . .	206
12.6	Removing and installing air conditioner compressor speed sender -G111 . . . . .	206
12.7	Removing and installing compressor . . . . .	207
12.8	Removing and installing evaporator . . . . .	207
12.9	Capacities . . . . .	211
12.10	Removing and installing air conditioner unit . . . . .	212
<b>13</b>	<b>Dismantling and assembling air conditioner unit . . . . .</b>	<b>215</b>
13.1	Dismantling and assembling air conditioner unit . . . . .	215
13.2	Removing and installing cover grille, fresh air blower, evaporator and covers in plenum chamber . . . . .	216
13.3	Dismantling and assembling bottom section of housing and air distributor housing . . . . .	224
13.4	Dismantling and assembling air distributor housing . . . . .	228