

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Gearbox identification</b> .....	<b>1</b>
1.1 Gearbox identification .....	1
1.2 Code letters, gearbox allocation, ratios, capacities .....	2
<b>2 Transmission layout</b> .....	<b>4</b>
2.1 Transmission layout .....	4
<b>3 Calculations</b> .....	<b>6</b>
3.1 Calculations .....	6
3.2 Calculating transmission ratios "i" .....	6
<b>4 Repair instructions</b> .....	<b>6</b>
4.1 Repair instructions .....	6
4.2 Contact corrosion .....	6
4.3 General repair instructions .....	7
<b>30 - Clutch</b> .....	<b>10</b>
<b>1 Servicing clutch mechanism</b> .....	<b>10</b>
1.1 Servicing clutch mechanism .....	10
1.2 Assembly overview, pedal cluster .....	11
1.3 Removing and installing clutch pedal and coil spring .....	16
1.4 Hydraulic system - general layout .....	17
1.5 Removing and installing master cylinder .....	20
1.6 Bleeding clutch system .....	22
<b>2 Servicing clutch release mechanism</b> .....	<b>23</b>
2.1 Servicing clutch release mechanism .....	23
<b>3 Servicing clutch</b> .....	<b>27</b>
3.1 Servicing clutch .....	27
<b>34 - Controls, Housing</b> .....	<b>34</b>
<b>1 Servicing selector mechanism</b> .....	<b>34</b>
1.1 Servicing selector mechanism .....	34
1.2 Standard-travel selector mechanism .....	34
1.3 Removing and installing standard-travel selector mechanism .....	39
1.4 Adjusting standard-travel selector mechanism .....	39
1.5 Checking gear stick adjustment .....	41
1.6 Servicing short-travel selector mechanism .....	42
1.7 Removing and installing short-travel selector mechanism .....	50
1.8 Adjusting short-travel selector mechanism .....	50
1.9 Checking gear stick adjustment .....	53
<b>2 Removing and installing gearbox</b> .....	<b>54</b>
2.1 Removing and installing gearbox .....	54
2.2 Removing .....	54
2.3 Securing gearbox to repair stand .....	60
2.4 Transporting the gearbox .....	61
2.5 Installing .....	62
<b>3 Checking oil level in gearbox</b> .....	<b>64</b>
3.1 Checking oil level in gearbox .....	64
<b>4 Dismantling and assembling gearbox</b> .....	<b>65</b>
4.1 Dismantling and assembling gearbox .....	65
4.2 Overview .....	66
4.3 Assembly overview .....	67
4.4 Removing and installing input shaft ball bearing and multi-function sender .....	68
4.5 Removing and installing input shaft, pinion shaft, selector rods and gearbox cover .....	72



4.6	Removing and installing input shaft ball bearing, multi-function sender, input shaft, pinion shaft, selector rods and gearbox cover . . . . .	75
<b>5</b>	<b>Dismantling and assembling selector mechanism in gearbox . . . . .</b>	<b>84</b>
5.1	Dismantling and assembling selector mechanism in gearbox . . . . .	84
<b>35 - Gears, Shafts . . . . .</b>		<b>92</b>
<b>1</b>	<b>Dismantling and assembling input shaft . . . . .</b>	<b>92</b>
1.1	Dismantling and assembling input shaft . . . . .	92
<b>2</b>	<b>Adjusting input shaft . . . . .</b>	<b>107</b>
2.1	Adjusting input shaft . . . . .	107
<b>3</b>	<b>Dismantling and assembling pinion shaft . . . . .</b>	<b>109</b>
3.1	Dismantling and assembling pinion shaft . . . . .	109
<b>4</b>	<b>Removing and installing reverse gear wheel . . . . .</b>	<b>131</b>
4.1	Removing and installing reverse gear wheel . . . . .	131
<b>39 - Final drive, Differential . . . . .</b>		<b>133</b>
<b>1</b>	<b>Renewing seal for flange shaft . . . . .</b>	<b>133</b>
1.1	Renewing seal for flange shaft . . . . .	133
<b>2</b>	<b>Removing and installing speedometer sender and drive wheel . . . . .</b>	<b>136</b>
2.1	Removing and installing speedometer sender and drive wheel . . . . .	136
2.2	Removing and installing speedometer sender -G22 . . . . .	136
2.3	Removing and installing speedometer drive wheel . . . . .	137
<b>3</b>	<b>Removing and installing differential . . . . .</b>	<b>138</b>
3.1	Removing and installing differential . . . . .	138
<b>4</b>	<b>Dismantling and assembling differential . . . . .</b>	<b>143</b>
4.1	Dismantling and assembling differential . . . . .	143
<b>5</b>	<b>Adjusting pinion shaft and crown wheel . . . . .</b>	<b>153</b>
5.1	Adjusting pinion shaft and crown wheel . . . . .	153
5.2	Adjusting and marking of gear sets . . . . .	153
5.3	Position of shims . . . . .	155
5.4	Adjustment overview . . . . .	156
5.5	Sequence for readjusting final drive set . . . . .	156
5.6	Adjusting pinion shaft . . . . .	157
5.7	Re-determining "S4" shim when fitting new gearbox cover . . . . .	166
5.8	Adjusting crown wheel . . . . .	168