

Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
1.2 Code letters, allocation, ratios and capacities	2
2 Transmission layout	3
2.1 Transmission layout	3
3 Calculating transmission ratios "i"	4
3.1 Calculating transmission ratios "i"	4
4 Repair instructions	5
4.1 Repair instructions	5
30 - Clutch	8
1 Servicing clutch mechanism	8
1.1 Servicing clutch mechanism	8
1.2 Assembly overview, pedal cluster	8
1.3 Removing and installing clutch pedal and coil spring	14
1.4 Removing and installing master cylinder	14
1.5 Assembly overview, hydraulics	16
1.6 Bleeding clutch system	20
2 Servicing clutch release mechanism	21
2.1 Servicing clutch release mechanism	21
3 Servicing clutch	26
3.1 Servicing clutch	26
34 - Controls, Housing	33
1 Servicing selector	33
1.1 Servicing selector	33
1.2 Servicing selector mechanism	33
1.3 Dismantling and assembling selector mechanism	34
1.4 Servicing selector rod and front push rod	35
1.5 Servicing gear stick and rear push rod	38
1.6 Removing and installing front and rear selector rods	42
1.7 Removing and installing front and rear push rods	43
1.8 Removing and installing boot	44
1.9 Renewing shaft seal for selector shaft	45
2 Adjusting and checking selector mechanism	46
2.1 Adjusting and checking selector mechanism	46
2.2 Basic adjustment (adjustment instructions)	46
2.3 Checking gear stick adjustment	48
2.4 Fine adjustment instructions	49
3 Removing and installing gearbox	49
3.1 Removing and installing gearbox	49
3.2 Contact corrosion	49
4 Checking gearbox oil level	55
4.1 Checking gearbox oil level	55
5 Dismantling and assembling gearbox	56
5.1 Dismantling and assembling gearbox	56
5.2 Removing and installing gear cluster/bearing plate and end cover	57
5.3 Removing and installing 5th and 6th gears	60
5.4 Removing and installing input shaft, drive pinion and internal selector mechanism from bearing plate	62
6 Removing and installing end cover, input shaft and drive pinion - work sequence	65



6.1	Removing and installing end cover, input shaft and drive pinion - work sequence	65
6.2	Removing	65
6.3	Installing	72
7	Servicing end cover	83
7.1	Servicing end cover	83
8	Servicing bearing plate	90
8.1	Servicing bearing plate	90
8.2	Re-determining shim "S4"	96
9	Servicing gearbox housing	101
9.1	Servicing gearbox housing	101
9.2	Dismantling and assembling selector shaft complete	115
35 - Gears, Shafts		118
1	Dismantling and assembling input shaft	118
1.1	Dismantling and assembling input shaft	118
2	Dismantling and assembling drive pinion	129
2.1	Dismantling and assembling drive pinion	129
39 - Final drive, Differential		142
1	Renewing seal for flange shaft	142
1.1	Renewing seal for flange shaft	142
2	Removing and installing speedometer sender -G22 and drive wheel for speedometer sender	143
2.1	Removing and installing speedometer sender -G22 and drive wheel for speedometer sender	143
3	Removing and installing differential	144
3.1	Removing and installing differential	144
4	Dismantling and assembling differential	146
4.1	Dismantling and assembling differential	146
5	Adjusting drive pinion and crown wheel	156
5.1	Adjusting drive pinion and crown wheel	156
5.2	Adjustment and markings of final drive set	157
5.3	Recommended sequence for readjusting final drive set	157
5.4	Adjustment overview	158
5.5	Position of shims	159
6	Adjusting drive pinion	159
6.1	Adjusting drive pinion	159
7	Adjusting crown wheel	165
7.1	Adjusting crown wheel	165