

Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
2 Code letters, allocation, ratios, capacities	2
2.1 Code letters, allocation, ratios, capacities	2
3 Identification of rear final drive	3
3.1 Identification of rear final drive	3
4 Code letters, allocation, ratios, capacities	3
4.1 Code letters, allocation, ratios, capacities	3
5 Transmission layout	4
5.1 Transmission layout	4
6 Calculations	7
6.1 Calculations	7
6.2 Calculating transmission ratios "i"	7
6.3 Calculating speed "V"	7
7 Notes regarding engine output test, brake test, tow-starting and towing	7
7.1 Notes regarding engine output test, brake test, tow-starting and towing	7
8 Repair instructions	8
8.1 Repair instructions	8
30 - Clutch	11
1 Servicing clutch mechanism	11
1.1 Servicing clutch mechanism	11
1.2 Assembly overview, pedal cluster	11
1.3 Removing and installing clutch pedal and coil spring	17
1.4 Removing and installing master cylinder	17
1.5 Assembly overview, hydraulics	19
1.6 Bleeding clutch system	22
2 Servicing clutch release mechanism	24
2.1 Servicing clutch release mechanism	24
3 Servicing clutch	29
3.1 Servicing clutch	29
34 - Controls, Housing	34
1 Servicing selector mechanism	34
1.1 Servicing selector mechanism	34
1.2 Dismantling and assembling selector mechanism	35
1.3 Servicing selector rod and front push rod	36
1.4 Servicing gear stick and rear push rod	39
1.5 Removing and installing rear selector rod and front selector rod	43
1.6 Removing and installing rear push rod and front push rod	44
1.7 Removing and installing boot	45
1.8 Renewing shaft seal for selector shaft	46
2 Adjusting and checking selector mechanism	47
2.1 Adjusting and checking selector mechanism	47
2.2 Basic adjustment (adjustment instructions)	47
2.3 Checking gear stick adjustment	49
2.4 Fine adjustment instructions	50
3 Removing and installing gearbox	50
3.1 Removing and installing gearbox	50
3.2 Contact corrosion	50
3.3 Removing gearbox	50



3.4	Installing	53
4	Removing and installing oil pressure pipes/hoses	55
4.1	Removing and installing oil pressure pipes/hoses	55
4.2	Removing and installing oil pump	57
5	Checking oil level in gearbox	60
5.1	Checking oil level in gearbox	60
6	Dismantling and assembling gearbox	61
6.1	Dismantling and assembling gearbox	61
6.2	Removing and installing bearing housing, Torsen differential and end cover	62
6.3	Removing and installing gearbox and selector shaft	64
6.4	Removing and installing 5th and 6th gear	67
6.5	Removing and installing input shaft, drive pinion, hollow shaft and internal selector mechanism from bearing plate	71
7	Removing and installing bearing housing, Torsen differential, end cover, internal selector mechanism, input shaft, drive pinion and hollow shaft -Sequence	74
7.1	Removing and installing bearing housing, Torsen differential, end cover, internal selector mechanism, input shaft, drive pinion and hollow shaft -Sequence	74
7.2	Removing	74
7.3	Installing	83
8	Dismantling and assembling bearing housing	96
8.1	Dismantling and assembling bearing housing	96
9	Servicing bearings for Torsen differential	101
9.1	Servicing bearings for Torsen differential	101
10	Servicing end cover	105
10.1	Servicing end cover	105
11	Servicing bearing plate	110
11.1	Servicing bearing plate	110
11.2	Re-determining shim "S4"	117
12	Servicing gearbox housing	121
12.1	Servicing gearbox housing	121
12.2	Dismantling and assembling selector shaft complete	136
35 - Gears, Shafts		139
1	Dismantling and assembling input shaft	139
1.1	Dismantling and assembling input shaft	139
2	Dismantling and assembling drive pinion and hollow shaft	149
2.1	Dismantling and assembling drive pinion and hollow shaft	149
39 - Final drive, Differential rear		163
1	Renewing seal for flange shaft	163
1.1	Renewing seal for flange shaft	163
2	Removing and installing speedometer sender -G22 and drive wheel for speedometer sender	164
2.1	Removing and installing speedometer sender -G22 and drive wheel for speedometer sender	164
3	Renewing seal and grooved ball bearing for flange for propshaft on gearbox	165
3.1	Renewing seal and grooved ball bearing for flange for propshaft on gearbox	165
4	Removing and installing differential	170
4.1	Removing and installing differential	170
5	Dismantling and assembling differential	172
5.1	Dismantling and assembling differential	172
6	Adjusting drive pinion and crown wheel	182
6.1	Adjusting drive pinion and crown wheel	182
6.2	Adjustment and markings of final drive set	183
6.3	Recommended sequence for readjusting final drive set	183

6.4	Adjustment overview	184
6.5	Position of shims	185
7	Adjusting drive pinion	186
7.1	Adjusting drive pinion	186
8	Adjusting crown wheel	192
8.1	Adjusting crown wheel	192
9	Servicing propshaft	198
9.1	Servicing propshaft	198
9.2	Removing and installing propshaft	202
9.3	Adjusting propshaft	205
10	Checking oil level in rear final drive	207
10.1	Checking oil level in rear final drive	207
11	Removing and installing rear final drive	208
11.1	Removing and installing rear final drive	208
12	Removing and installing oil seals for flanged shafts	212
12.1	Removing and installing oil seals for flanged shafts	212
13	Renewing seal for propshaft flange	213
13.1	Renewing seal for propshaft flange	213
13.2	Measuring radial run-out at propshaft flange and marking	218
14	Dismantling and assembling rear final drive	219
14.1	Dismantling and assembling rear final drive	219
14.2	Assembly overview	219
14.3	Removing and installing differential	221
14.4	Dismantling and assembling differential	228
14.5	Removing and installing drive pinion	238
15	Adjusting drive pinion and crown wheel	247
15.1	Adjusting drive pinion and crown wheel	247
15.2	Adjustment and markings of final drive set	248
15.3	Recommended sequence for readjusting final drive set	248
15.4	Adjustment overview	249
15.5	Position of shims	250
16	Adjusting drive pinion	250
16.1	Adjusting drive pinion	250
17	Adjusting crown wheel	256
17.1	Adjusting crown wheel	256