

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification of gearbox</b> .....	<b>1</b>
1.1 Identification of gearbox .....	1
<b>2 Code letters, assembly allocation, ratios and equipment</b> .....	<b>2</b>
2.1 Code letters, assembly allocation, ratios and equipment .....	2
<b>3 Capacities</b> .....	<b>2</b>
3.1 Capacities .....	2
<b>4 Repair instructions</b> .....	<b>3</b>
4.1 Repair instructions .....	3
4.2 Contact corrosion .....	3
4.3 General repair instructions .....	4
<b>32 - Torque converter</b> .....	<b>6</b>
<b>1 Torque converter</b> .....	<b>6</b>
1.1 Torque converter .....	6
1.2 Identification of torque converter .....	6
1.3 Checking torque converter .....	7
1.4 Draining torque converter .....	7
1.5 Renewing oil seal for torque converter .....	8
1.6 Installing torque converter .....	9
<b>37 - Controls, Housing</b> .....	<b>11</b>
<b>1 Servicing shift mechanism</b> .....	<b>11</b>
1.1 Servicing shift mechanism .....	11
1.2 Checking ignition key removal lock .....	11
1.3 Checking shift mechanism .....	11
1.4 Dismantling and assembling shift mechanism .....	12
1.5 Removing and installing selector lever cable .....	21
1.6 Checking and adjusting selector lever cable .....	22
1.7 Removing and installing locking cable .....	24
<b>2 Checking gearbox</b> .....	<b>29</b>
2.1 Checking gearbox .....	29
<b>3 Removing and installing gearbox</b> .....	<b>30</b>
3.1 Removing and installing gearbox .....	30
3.2 Transporting the automatic gearbox .....	44
3.3 Securing gearbox to repair stand .....	45
3.4 Removing and installing left gearbox support .....	46
<b>4 Checking ATF level; changing ATF</b> .....	<b>47</b>
4.1 Checking ATF level; changing ATF .....	47
4.2 Checking ATF level .....	47
4.3 Changing ATF or filling up after repairs .....	50
<b>5 Gearbox with shift elements</b> .....	<b>52</b>
5.1 Gearbox with shift elements .....	52
5.2 Gearbox schematic diagram .....	52
5.3 Position of shift elements .....	54
<b>6 Dismantling and assembling gearbox</b> .....	<b>55</b>
6.1 Dismantling and assembling gearbox .....	55
6.2 Rules for cleanliness when working on automatic gearbox .....	55
6.3 Removing and installing ATF pipes .....	56
6.4 Cleaning ATF pipes and ATF cooler .....	58
6.5 Removing and installing multi-function switch -F125 .....	59
6.6 Adjusting multi-function switch -F125 .....	59



<b>38 - Gears, Hydraulic controls</b> . . . . .	<b>63</b>
<b>1 Removing and installing oil pan, ATF screen and valve body</b> . . . . .	<b>63</b>
1.1 Removing and installing oil pan, ATF screen and valve body . . . . .	63
1.2 Removing and installing oil pan . . . . .	63
1.3 Removing and installing ATF screen . . . . .	64
1.4 Removing and installing valve body . . . . .	65
1.5 Removing and installing wiring harness in gearbox . . . . .	67
1.6 Renewing internal oil pipe . . . . .	68
<b>2 Removing and installing ATF pump</b> . . . . .	<b>70</b>
2.1 Removing and installing ATF pump . . . . .	70
<b>39 - Final drive, Differential front</b> . . . . .	<b>86</b>
<b>1 Removing and installing speedometer sender -G22 and drive wheel for speedometer sender</b> . . . . .	<b>86</b>
1.1 Removing and installing speedometer sender -G22 and drive wheel for speedometer sender . . . . .	86
<b>2 Gear oil in front final drive</b> . . . . .	<b>87</b>
2.1 Gear oil in front final drive . . . . .	87
2.2 Checking oil level in front final drive . . . . .	87
2.3 Changing gear oil in front final drive or filling after repairs . . . . .	88
<b>3 Servicing front final drive</b> . . . . .	<b>88</b>
3.1 Servicing front final drive . . . . .	88
3.2 Renewing oil seals for flange shafts. . . . .	98
3.3 Renewing oil seal for right flange shaft . . . . .	100
3.4 Renewing oil seal (right) for input shaft . . . . .	102
3.5 Renewing oil seal (left) for input shaft and oil seal for left flange shaft . . . . .	105
3.6 Removing and installing intermediate sleeve for drive pinion shaft. . . . .	110
<b>4 Servicing intermediate drive</b> . . . . .	<b>114</b>
4.1 Servicing intermediate drive . . . . .	114
4.2 Removing and installing intermediate drive . . . . .	114
4.3 Dismantling intermediate drive . . . . .	116
4.4 Renewing ATF breather . . . . .	118