

## Contents

<b>00 - Technical data</b>	<b>1</b>
1 Gearbox identification	1
2 Gearbox - code letters, gearbox allocation, ratios, equipment	2
3 Identification of rear final drive	7
4 Rear final drive - code letters, ratios	8
5 Capacities	9
6 Safety precautions	10
7 Notes on tow-starting and towing	11
8 Transmission layout	12
9 Repair instructions	14
9.1 Contact corrosion!	14
9.2 General repair instructions	14
10 Rules for cleanliness when working on the automatic gearbox	17
<b>32 - Torque converter</b>	<b>18</b>
1 Exploded view - torque converter	18
1.1 Renewing oil seal for torque converter	19
1.2 Draining torque converter	19
1.3 Checking torque converter	19
1.4 Installing torque converter	19
<b>37 - Controls, housing</b>	<b>21</b>
1 Exploded view - selector mechanism	21
1.1 Checking selector mechanism	27
1.2 Removing and installing selector lever cable	29
1.3 Checking and adjusting selector lever cable	32
1.4 Removing and installing locking cable	35
1.5 Adjusting locking cable	36
2 Removing and installing gearbox - vehicles with 8-cylinder petrol engine	38
3 Removing and installing gearbox - vehicles with 8-cylinder TDI engine	53
4 Removing and installing gearbox - vehicles with 12-cylinder engine	54
5 Removing and installing gearbox support (left and right)	55
6 Transporting automatic gearbox	57
7 Securing gearbox to engine and gearbox support	58
8 Exploded view - ATF drain plug, inspection plug and filler plug	59
8.1 Checking and topping up ATF level in planetary gearbox	59
8.2 Draining ATF and filling up after repairs	63
9 Exploded view - ATF lines	66
9.1 Cleaning ATF lines and ATF cooler	66
<b>38 - Gears, control</b>	<b>68</b>
1 Exploded view - ATF oil pan, ATF strainer and valve body	68
1.1 Removing and installing ATF oil pan	71
1.2 Removing and installing ATF strainer	73
1.3 Removing and installing valve body	73
1.4 Removing and installing gearbox input speed sender G182	73
1.5 Removing and installing wiring harness in gearbox	73
1.6 Removing and installing gearbox oil temperature sender G93	74
1.7 Removing and installing gearbox output speed sender G195	74
1.8 Removing and installing speedometer sender G22	74



1.9	Removing and installing multifunction switch F125	75
1.10	Renewing oil seal for selector shaft	76
<b>39</b>	<b>Final drive - rear differential</b>	<b>78</b>
<b>1</b>	<b>Overview - gear oil in rear final drive</b>	<b>78</b>
1.1	Checking gear oil in rear final drive and topping up	78
<b>2</b>	<b>Exploded view - rear final drive</b>	<b>80</b>
2.1	Renewing oil seal on flange for propshaft	83
2.2	Measuring and marking radial run-out at flange for propshaft	89
2.3	Removing and installing rear final drive	90
2.4	Securing rear final drive to engine and gearbox support	94
2.5	Removing and installing flange shafts	95
2.6	Renewing oil seals for flange shafts	95
<b>3</b>	<b>Exploded view - differential</b>	<b>97</b>
3.1	Removing and installing differential	98
3.2	Dismantling and assembling differential	99
<b>4</b>	<b>Exploded view - pinion shaft</b>	<b>106</b>
4.1	Dismantling and assembling pinion shaft	107
<b>5</b>	<b>Adjusting pinion shaft and crown wheel</b>	<b>115</b>
5.1	Adjusting pinion shaft	118
5.2	Adjusting crown wheel	123
<b>39</b>	<b>Final drive - front differential</b>	<b>130</b>
<b>1</b>	<b>Overview - gear oil in front final drive</b>	<b>130</b>
1.1	Checking and topping up gear oil in front final drive	130
1.2	Filling up gear oil in front final drive after repairs	131
<b>2</b>	<b>Exploded view - front final drive</b>	<b>133</b>
2.1	Removing and installing flange shaft (left-side)	135
2.2	Renewing oil seal for flange shaft (left-side)	137
2.3	Removing and installing drive wheel for speedometer sender G22	137
2.4	Renewing ball bearing for flange shaft (left-side)	137
2.5	Removing and installing flange shaft (right-side)	137
2.6	Renewing oil seal for flange shaft (right-side)	139
2.7	Renewing O-ring on cover for final drive	139
<b>3</b>	<b>Overview - oil drain plug and inspection plug for gear oil in transfer box</b>	<b>141</b>
3.1	Checking gear oil level in transfer box and topping up	141
3.2	Changing gear oil in transfer box and filling up after repairs	142
<b>4</b>	<b>Exploded view - transfer box</b>	<b>144</b>
4.1	Removing and installing flange shaft (rear)	147
4.2	Renewing oil seal for flange shaft (rear)	148
4.3	Removing and installing transfer box	148
4.4	Removing and installing intermediate flange for front axle drive	148
4.5	Renewing twin-lip oil seal in intermediate flange for front axle drive	149
4.6	Renewing twin-lip oil seal in input pinion	149
4.7	Renewing needle bearing for spur gear 2	149
<b>5</b>	<b>Exploded view - servicing propshaft</b>	<b>150</b>
5.1	Removing and installing propshaft	152
5.2	Adjusting propshaft	156