

Contents

00 - Technical data	1
1 Gearbox, front final drive, transfer box	1
1.1 Gearbox identification	1
1.2 Notes on 5-speed automatic gearbox 01V	1
1.3 Gearbox (front-wheel drive) - code letters, gearbox allocation, ratios, equipment	2
1.4 Gearbox (four-wheel drive) - code letters, gearbox allocation, ratios, equipment	4
2 Rear final drive	8
2.1 Rear final drive identification	8
2.2 Code letters, ratios	8
3 Capacities	10
3.1 Planetary gearbox	10
3.2 Front final drive	10
3.3 Transfer box	10
3.4 Rear final drive	11
4 Notes on tow-starting and towing	12
5 Transmission layout	13
5.1 Gearbox diagram for vehicles with front-wheel drive	13
5.2 Gearbox diagram for vehicles with four-wheel drive	14
5.3 Actuation of selector elements	14
6 Repair instructions	16
6.1 Contact corrosion!	16
6.2 General repair instructions	16
7 Rules for cleanliness when working on the automatic gearbox	19
32 - Torque converter	20
1 Torque converter	20
1.1 Identification of torque converter	21
1.2 Draining torque converter	21
1.3 Renewing oil seal for torque converter	21
1.4 Checking torque converter	23
1.5 Installing torque converter	23
37 - Controls, housing	25
1 Servicing selector mechanism	25
1.1 Checking ignition key removal lock	25
1.2 Checking selector mechanism	25
1.3 Dismantling and assembling selector mechanism	26
1.4 Removing and installing selector lever cable	32
1.5 Checking and adjusting selector lever cable	35
1.6 Removing and installing locking cable	37
1.7 Adjusting locking cable	38
2 Removing and installing gearbox	40
2.1 Removing gearbox - vehicles with 6-cylinder petrol engine	40
2.2 Removing gearbox - vehicles with 8-cylinder engine	48
2.3 Removing gearbox - vehicles with 6-cylinder TDI engine	58
2.4 Installing gearbox - all vehicles	67
2.5 Transporting the automatic gearbox	70
2.6 Securing gearbox to assembly stand	71
2.7 Removing and installing gearbox support (left and right)	73
3 ATF in planetary gearbox	76
3.1 Checking and topping up ATF level in planetary gearbox	76
3.2 Checking ATF level - vehicles with auxiliary ATF cooler	80



3.3	Draining ATF and filling up after repairs	83
4	ATF pipes and auxiliary ATF cooler	87
4.1	ATF pipes (6-cylinder petrol engines) - exploded view of components	87
4.2	ATF pipes (8-cylinder engines) - exploded view of components	88
4.3	ATF pipes (6-cylinder TDI engines) - exploded view of components	89
4.4	Auxiliary ATF cooler - exploded view of components	90
4.5	Removing and installing ATF pipes	90
4.6	Cleaning ATF pipes and ATF cooler	91
38	- Gears, control	93
1	Removing and installing ATF oil pan, ATF strainer and valve body	93
1.1	Different hydraulic control systems	93
1.2	Gearbox with hydraulic control type "E17" - exploded view of components	93
1.3	Gearbox with hydraulic control type "E18/2" - exploded view of components	96
1.4	Removing and installing ATF oil pan	98
1.5	Removing and installing ATF strainer	100
1.6	Removing and installing valve body	100
1.7	Removing and installing internal oil pipe	100
1.8	Removing and installing multi-function switch F125	101
1.9	Removing and installing gearbox speed sender G38 / gearbox output speed sender G195	101
1.10	Removing and installing speedometer sender G22	102
1.11	Removing and installing gearbox input speed sender G182	102
1.12	Removing and installing wiring harness in gearbox	102
1.13	Removing and installing gearbox oil temperature sender G93	103
1.14	Renewing oil seal for selector shaft	103
1.15	Removing and installing housing for ATF supply unit (gearbox not dismantled)	104
39	- Final drive - rear differential	105
1	Gear oil in rear final drive	105
1.1	Checking gear oil in rear final drive	105
2	Servicing rear final drive	106
2.1	Renewing oil seal on flange for propshaft	106
2.2	Measuring and marking radial run-out at flange for propshaft	111
2.3	Removing and installing rear final drive	112
2.4	Securing rear final drive to assembly stand	116
2.5	Renewing oil seals for flange shafts	117
3	Dismantling and assembling rear final drive	119
3.1	Rear final drive - overview of components	119
3.2	Differential - exploded view of components	120
3.3	Dismantling and assembling differential	122
3.4	Removing and installing pinion shaft; dismantling and assembling pinion shaft	131
3.5	Adjusting pinion shaft and crown wheel	140
3.6	Adjusting pinion shaft	143
3.7	Adjusting crown wheel	148
39	- Final drive - front differential	155
1	Gear oil in front final drive	155
1.1	Checking gear oil level in front final drive	155
1.2	Filling up gear oil in front final drive after repairs	156
2	Servicing front final drive	158
2.1	Front final drive - exploded view of components	158
2.2	Removing and installing flange shaft (left-side)	159
2.3	Removing and installing flange shaft (right-side)	161
2.4	Renewing oil seal and grooved ball bearing for flange shaft (left-side)	162

2.5	Renewing oil seal for flange shaft (right-side)	166
2.6	Removing and installing cover for front axle drive	167
2.7	Removing and installing intermediate flange for front axle drive	169
2.8	Renewing twin-lip oil seal between final drive and gearbox housing	171
2.9	Removing and installing cover for final drive	174
3	Gear oil in transfer box	177
3.1	Checking gear oil level in transfer box	177
3.2	Changing gear oil in transfer box and filling up after repairs	178
4	Servicing front axle drive and transfer box	181
4.1	Removing and installing transfer box with Torsen differential	181
4.2	Dismantling and assembling front axle drive and transfer box	182
4.3	Renewing oil seal for output flange for propshaft	182
4.4	Renewing oil seal in intermediate flange for front axle drive	184
4.5	Renewing oil seal in input pinion	184
4.6	Renewing needle bearing for spur gear 2	184
5	Servicing propshaft	185
5.1	Propshaft - exploded view of components	185
5.2	Removing and installing propshaft	186
5.3	Adjusting propshaft	190