

Contents

01 - Self-diagnosis, Electrical test	1
1 Self-diagnosis function	1
1.1 Self-diagnosis function	1
1.2 Technical data for self-diagnosis	2
2 Electrical/electronic	3
2.1 Electrical/electronic	3
2.2 Electrical/electronic components and fitting locations	3
2.3 Removing and installing automatic gearbox control unit -J217	9
3 Performing self-diagnosis	11
3.1 Performing self-diagnosis	11
3.2 Safety precautions	11
3.3 Connecting vehicle diagnostic, testing and information system VAS 5051 or fault reader V.A.G 1551 and selecting functions	12
3.4 Listof selectable functions	14
4 Interrogating fault memory	15
4.1 Interrogating fault memory	15
4.2 Fault table	16
5 Final control diagnosis	22
5.1 Final control diagnosis	22
6 Erasing fault memory	24
6.1 Erasing fault memory	24
7 Reading measured value block	25
7.1 Reading measured value block	25
7.2 Display group overview	26
8 Electrical test	32
8.1 Electrical test	32
8.2 Connecting test box V.A.G 1598 A	33
8.3 Test table	34
8.4 Testing wiring connection between automatic gearbox control unit -J217 and gearbox	41
9 Checking wiring of diagnostic connector	44
9.1 Checking wiring of diagnostic connector	44