

## Contents

<b>01 - Self-diagnosis, electrical checks</b>	<b>1</b>
<b>1 Self-diagnosis</b>	<b>1</b>
1.1 Self-diagnosis function	1
1.2 Safety functions of gearbox control unit	2
<b>2 Electrical/electronic components and fitting locations</b>	<b>3</b>
2.1 Removing and installing automatic gearbox control unit J217	10
<b>3 Performing self-diagnosis</b>	<b>11</b>
3.1 Safety precautions	11
3.2 Connecting vehicle diagnostic, testing and information system VAS 5051 and selecting functions	11
3.3 List of selectable functions	13
<b>4 Interrogating fault memory</b>	<b>14</b>
4.1 Interrogating fault memory	14
4.2 Fault tables	15
4.3 Fault tables: Fault code 16987 / P0603 up to fault code 17968 / P1560	15
4.4 Fault tables: Fault code 18112 / P1704 up to fault code 18269 / P1861	28
<b>5 Final control diagnosis</b>	<b>42</b>
<b>6 Erasing fault memory</b>	<b>47</b>
<b>7 Ending output</b>	<b>48</b>
<b>8 Resetting adaption values for gearbox control unit (basic setting)</b>	<b>49</b>
<b>9 Coding control unit</b>	<b>50</b>
<b>10 Measured value block</b>	<b>52</b>
10.1 Reading measured value block	52
10.2 Overview of selectable display groups	52
10.3 Test table	54
<b>11 Electrical check</b>	<b>66</b>
11.1 Connecting adapter V.A.G 1598/20 (test box) to automatic gearbox control unit J217	67
11.2 Test table	69
11.3 Checking wiring between automatic gearbox control unit J217 and gearbox	80
11.4 Checking multi-function switch F125 with 8-pin connector	82
11.5 Checking multi-function switch F125 with 10-pin connector	85
<b>12 CAN bus</b>	<b>89</b>
12.1 Checking a “two-wire bus system”	89
12.2 Two control units communicating via a “two-wire bus system”	90
12.3 Three or more control units communicating via a “two-wire bus system”	91