

## Contents

<b>01 - Self-diagnosis, electrical checks</b> .....	<b>1</b>
<b>1 Self-diagnosis</b> .....	<b>1</b>
1.1 Self-diagnosis function .....	1
1.2 Safety functions of gearbox control unit .....	2
<b>2 Electrical/electronic components and fitting locations</b> .....	<b>3</b>
2.1 Removing and installing automatic gearbox control unit J217 .....	10
<b>3 Performing self-diagnosis</b> .....	<b>12</b>
3.1 Safety precautions .....	12
3.2 Connecting vehicle diagnostic, testing and information system VAS 5051 and selecting functions .....	12
3.3 List of selectable functions .....	15
<b>4 Interrogating fault memory</b> .....	<b>16</b>
4.1 Interrogating fault memory .....	16
4.2 Fault tables .....	17
4.3 Fault tables: Fault code 00258 / P0753 up to fault code 01236 / P1760 .....	17
4.4 Fault tables: Fault code 16987 / P0603 up to fault code 18160 / P1752 .....	37
4.5 Fault tables: Fault code 18161 / P1753 up to fault code 65535 .....	62
<b>5 Final control diagnosis - gearbox with hydraulic control "Type E17"</b> .....	<b>78</b>
<b>6 Final control diagnosis - gearbox with hydraulic control "Type E18/2"</b> .....	<b>83</b>
<b>7 Erasing fault memory</b> .....	<b>88</b>
<b>8 Ending output</b> .....	<b>89</b>
<b>9 Resetting adaption values for gearbox control unit (basic setting)</b> .....	<b>90</b>
<b>10 Coding control unit</b> .....	<b>91</b>
<b>11 Measured value block - gearbox with hydraulic control "Type E17"</b> .....	<b>94</b>
11.1 Overview of selectable display groups - gearbox with hydraulic control "Type E17" .....	94
11.2 Test table - gearbox with hydraulic control "Type E17" .....	96
<b>12 Measured value block - gearbox with hydraulic control "Type E18/2"</b> .....	<b>107</b>
12.1 Overview of selectable display groups - gearbox with hydraulic control "Type E18/2" .....	107
12.2 Test table - gearbox with hydraulic control "Type E18/2" .....	109
<b>13 Electrical check</b> .....	<b>121</b>
13.1 Connecting adapter V.A.G 1598/20 (test box) to automatic gearbox control unit J217 ..	122
13.2 Test table .....	125
13.3 Checking wiring between automatic gearbox control unit J217 and gearbox .....	137
13.4 Checking multi-function switch F125 with 8-pin connector .....	139
13.5 Checking multi-function switch F125 with 10-pin connector .....	142
<b>14 CAN bus</b> .....	<b>146</b>
14.1 Checking a "two-wire bus system" .....	146
14.2 Two control units communicating via a "two-wire bus system" .....	147
14.3 Three or more control units communicating via a "two-wire bus system" .....	148