



Contents

00 - Technical data	1
1 Transmission layout	1
2 Repair instructions	3
2.1 General repair instructions	3
2.2 Special tools	4
3 Rules for cleanliness when working on the automatic gearbox	6
4 Common faults	7
4.1 No power transmission in reverse gear	7
4.2 Gearshift jolts, power transmission problems in 4th and 5th gear	7
4.3 Power transmission problems in 4th and 5th gear, ATF pump noisy	8
4.4 No power transmitted in any gear	8
4.5 Power transmission delay (approx. 5 ... 6 seconds) after engaging reverse gear	9
32 - Torque converter	10
1 Exploded view - torque converter	10
1.1 Checking friction lining of torque converter clutch	11
1.2 Draining torque converter	11
1.3 Renewing oil seal for torque converter	12
1.4 Checking torque converter	13
1.5 Installing torque converter	13
37 - Controls, housing	15
1 Transporting automatic gearbox	15
2 Securing gearbox to engine and gearbox support	17
3 Dismantling and assembling planetary gearbox; notes and preparations	19
3.1 Planetary gearbox - exploded view	20
3.2 Dismantling and assembling planetary gearbox	21
4 Dismantling and assembling clutch "F" with freewheel	41
4.1 Clutch "F" with freewheel - exploded view	41
4.2 Dismantling clutch "F"	42
4.3 Dismantling freewheel	43
4.4 Assembling freewheel	45
4.5 Assembling clutch "F"	46
5 Dismantling and assembling body "I"	50
5.1 Clutch "C" with sun shaft - exploded view	50
5.2 Dismantling and assembling clutch "C" with sun shaft	51
5.3 Clutch "D" - exploded view	56
5.4 Clutch "E" - exploded view	58
5.5 Dismantling and assembling clutch "D/E"	59
5.6 Planetary drive - exploded view	68
5.7 Dismantling and assembling planetary drive	69
5.8 Assembling body "I"	73
6 Dismantling and assembling body "II"	76
6.1 Body "II" - exploded view	76
6.2 Dismantling body "II"	77
6.3 Clutch "A" - exploded view	79
6.4 Dismantling and assembling clutch "A"	80
6.5 Clutch "B" - exploded view	85
6.6 Dismantling and assembling clutch "B"	86
6.7 Assembling body "II"	91
7 Removing and installing selector shaft	94



38 - Gears, control	98
1 Exploded view - ATF oil pan, ATF strainer and valve body	98
1.1 Removing and installing ATF oil pan	102
1.2 Removing and installing ATF strainer	104
1.3 Removing and installing valve body	105
1.4 Removing and installing gearbox input speed sender G182	108
1.5 Removing and installing wiring harness in gearbox	108
1.6 Removing and installing gearbox oil temperature sender G93	109
1.7 Removing and installing gearbox output speed sender G195	109
1.8 Removing and installing speedometer sender G22	110
1.9 Removing and installing multifunction switch F125	110
1.10 Renewing oil seal for selector shaft	111
39 - Final drive - front differential	114
1 Exploded view - ATF supply unit	114
1.1 Dismantling and assembling ATF supply unit	115
1.2 Removing and installing stator shaft	118
1.3 Checking flow control valve in ATF supply unit	118
2 Removing and installing ATF/oil pipes	120
2.1 Removing and installing ATF pipes	120
2.2 Removing and installing oil pipe for final drive	121
3 Exploded view - front final drive	122
3.1 Removing and installing flange shaft (left-side)	124
3.2 Renewing oil seal for flange shaft (left-side)	125
3.3 Removing and installing drive wheel for speedometer sender G22	128
3.4 Renewing ball bearing for flange shaft (left-side)	131
3.5 Removing and installing flange shaft (right-side)	132
3.6 Renewing oil seal for flange shaft (right-side)	133
3.7 Removing and installing cover for final drive	134
4 Overview - oil drain plug and inspection plug for gear oil in transfer box	137
4.1 Checking gear oil level in transfer box and topping up	137
4.2 Draining and filling up gear oil in transfer box	137
5 Exploded view - transfer box	139
5.1 Removing and installing flange shaft (rear)	142
5.2 Renewing oil seal for flange shaft (rear)	143
5.3 Removing and installing transfer box	144
5.4 Removing and installing intermediate flange for front axle drive	146
5.5 Renewing twin-lip oil seal in intermediate flange for front axle drive	148
5.6 Renewing twin-lip oil seal in input pinion	149
5.7 Renewing needle bearing for spur gear 2	152
6 Assessing wear on gearbox components	157
6.1 Assessment of wear by checking ATF for colour and contamination	157
6.2 Clutch "F" with freewheel	157
6.3 Clutch "C" with sun shaft	160
6.4 Clutch "D"	162
6.5 Clutch "E"	164
6.6 Planetary drive	166
6.7 Clutch "A"	169
6.8 Clutch "B"	171
6.9 ATF supply unit	173