

Contents

01 - Self-diagnosis	1
1 Self-diagnosis of Motronic system	1
1.1 Self-diagnosis of Motronic system	1
1.2 Technical data for self-diagnosis	1
1.3 Connecting vehicle diagnostic, testing and information system VAS 5051 or fault reader V.A.G 1551 and selecting functions	2
2 Interrogating and erasing fault memory	4
2.1 Interrogating and erasing fault memory	4
2.2 Fault table	5
3 Final control diagnosis	15
3.1 Final control diagnosis	15
4 Basic setting	17
4.1 Basic setting	17
5 Coding control unit	19
5.1 Coding control unit	19
6 Reading measured value block	21
6.1 Reading measured value block	21
24 - Mixture preparation, Injection	22
1 Servicing Motronic injection system	22
1.1 Servicing Motronic injection system	22
1.2 Safety precautions	22
1.3 Rules for cleanliness	22
1.4 Technical data	23
1.5 Fitting locations overview	23
1.6 Dismantling and assembling fuel rail with injectors	28
1.7 Removing and installing parts of intake manifold change-over	29
1.8 Wiring and component check with test box V.A.G 1598/31	30
1.9 Renewing engine control unit -J220	31
1.10 Testing idling speed	33
1.11 Checking fuel pressure regulator and holding pressure	34
1.12 Checking injectors	36
1.13 Testing injection quantity, leak-tightness and spray pattern of injectors	40
1.14 Testing fuel pump relay -J17 and relay activation	42
1.15 Testing air mass meter -G70	45
1.16 Checking intake air system for leaks (unmetered air)	48
1.17 Testing intake air temperature sender -G42	49
1.18 Testing coolant temperature sender-G62	51
2 Testing lambda control	52
2.1 Testing lambda control	52
2.2 Operation of lambda control	52
2.3 Testing lambda probe and lambda control	53
2.4 Testing lambda probe heating	57
2.5 Testing lambda probe signal wiring and activation	60
2.6 Removing and installing lambda probe	63
3 Testing intake manifold change-over function	63
3.1 Testing intake manifold change-over function	63
3.2 Testing operation	63
3.3 Testing intake manifold change-over valve -N156	64
3.4 Testing vacuum system	67
4 Testing secondary air system	68
4.1 Testing secondary air system	68
4.2 Testing secondary air inlet valve	68



4.3	Testing secondary air pump relay -J299	70
5	Testing fuel tank breather system	72
5.1	Testing fuel tank breather system	72
5.2	Testing solenoid valve 1 for activated charcoal filter -N80	72
6	Testing electronic engine power control (electronic throttle)	76
6.1	Testing electronic engine power control (electronic throttle)	76
6.2	Operation of electronic throttle system	76
6.3	Testing throttle valve control part -J338	76
6.4	Performing adaption of throttle valve control part	76
6.5	Testing angle senders for throttle valve drive	79
6.6	Notes on EPC warning lamp (fault warning lamp for electronic throttle) in dash panel insert	80
7	Checking accelerator position senders-G79 and -G185	81
7.1	Checking accelerator position senders-G79 and -G185	81
7.2	Checking brake light switch -F and brake pedal switch -F47	83
7.3	Testing clutch pedal switch -F36	85
8	Testing auxiliary signals	88
8.1	Testing auxiliary signals	88
8.2	Checking engine speed signal	88
8.3	Testing air conditioner compressor shut-off	88
8.4	Testing data exchange between control units	90
28 - Ignition system		94
1	Testing ignition system	94
1.1	Testing ignition system	94
1.2	General notes on ignition system	94
1.3	Safety precautions	94
1.4	Technical data for ignition system	94
1.5	Removing and installing parts of the ignition system	95
1.6	Testing ignition coils	97
1.7	Testing engine speed sender -G28	101
1.8	Checking control unit voltage supply	102
1.9	Testing knock sensor control limit	104
1.10	Testing knock sensors-G61and-G66	104
1.11	Testing Hall senders-G40and-G163	106