

Contents

| | |
|--|-----------|
| 01 - Self-diagnosis | 1 |
| 1 Self-diagnosis for Motronic system | 1 |
| 1.1 Self-diagnosis for Motronic system | 1 |
| 1.2 Technical data of self-diagnosis | 1 |
| 1.3 Safety precautions | 1 |
| 1.4 Connecting fault reader V.A.G 1551 and selecting engine electronics control unit | 1 |
| 2 Interrogating and erasing fault memory | 4 |
| 2.1 Interrogating and erasing fault memory | 4 |
| 2.2 Fault table | 5 |
| 2.3 Fault codes 00282 - 16507 | 5 |
| 2.4 Fault codes 16514 - 18259 | 16 |
| 3 Final control diagnosis | 28 |
| 3.1 Final control diagnosis | 28 |
| 4 Basic setting | 31 |
| 4.1 Basic setting | 31 |
| 5 Encoding control unit | 32 |
| 5.1 Encoding control unit | 32 |
| 5.2 Encoding table | 33 |
| 6 Reading measured value block | 34 |
| 6.1 Reading measured value block | 34 |
| 6.2 Display groups | 35 |
| 6.3 Reading measured value block: Display Groups 001 to 010 | 39 |
| 6.4 Reading measured value block: Display groups 011 to 099 | 49 |
| 24 - Mixture preparation, Injection | 57 |
| 1 Servicing Motronic injection system | 57 |
| 1.1 Servicing Motronic injection system | 57 |
| 1.2 Safety precautions | 57 |
| 1.3 Rules for cleanliness | 57 |
| 1.4 Technical data | 58 |
| 1.5 Fitting locations overview | 59 |
| 1.6 Removing and installing injection system components | 63 |
| 1.7 Dismantling and assembling air cleaner | 68 |
| 1.8 Dismantling and assembling fuel manifold with injectors | 70 |
| 1.9 Removing and installing intake manifold changeover system components | 71 |
| 1.10 Removing and installing throttle valve control unit | 73 |
| 1.11 Vacuum connections | 75 |
| 1.12 Wiring and component test with test box V.A.G 1598/22 | 78 |
| 1.13 Renewing engine control unit | 78 |
| 1.14 Checking idling speed | 80 |
| 1.15 Checking system pressure, fuel pressure regulator and holding pressure | 82 |
| 1.16 Checking injectors | 85 |
| 1.17 Checking injection quantity, leak tightness and spray pattern of injectors | 90 |
| 1.18 Checking fuel pump relay -J17 and actuation | 93 |
| 1.19 Checking air mass meter -G70 | 98 |
| 2 Checking intake manifold changeover system | 100 |
| 2.1 Checking intake manifold changeover system | 100 |
| 2.2 Checking function | 100 |
| 2.3 Checking vacuum system for leaks | 101 |
| 2.4 Checking intake manifold changeover valve | 103 |
| 3 Checking lambda control | 107 |
| 3.1 Checking lambda control | 107 |
| 3.2 Engine running problems after cold start | 107 |

| | | |
|---------------------------------------|---|------------|
| 3.3 | Checking function of lambda probes | 109 |
| 3.4 | Checking lambda probe heating | 111 |
| 3.5 | Checking lambda probe signal wiring and activation | 114 |
| 3.6 | Removing and installing lambda probe | 116 |
| 4 | Checking secondary air system | 117 |
| 4.1 | Checking secondary air system | 117 |
| 4.2 | Checking secondary air inlet valve | 117 |
| 4.3 | Checking secondary air pump relay | 122 |
| 5 | Checking fuel tank breather | 125 |
| 5.1 | Checking fuel tank breather | 125 |
| 5.2 | Checking function | 126 |
| 5.3 | Checking activated charcoal filter system solenoid valve 1 -N80 | 127 |
| 6 | Checking throttle valve control unit | 131 |
| 6.1 | Checking throttle valve control unit | 131 |
| 6.2 | Checking learning demand display | 131 |
| 6.3 | Performing adaptation of throttle valve control unit | 132 |
| 6.4 | Checking idling switch -F60 | 134 |
| 6.5 | Checking throttle valve potentiometer -G69 | 136 |
| 6.6 | Checking throttle valve positioner sender -G127 | 138 |
| 6.7 | Checking throttle valve positioner -V60 | 140 |
| 7 | Checking auxiliary signals | 142 |
| 7.1 | Checking auxiliary signals | 142 |
| 7.2 | Checking signals from / to air conditioning system | 142 |
| 7.3 | Checking engine speed signal | 144 |
| 7.4 | Checking vehicle speed signal | 145 |
| 7.5 | Checking consumption signal for vehicle computer | 147 |
| 7.6 | Checking output signal for throttle valve position | 147 |
| 7.7 | Checking engine actual torque signal | 149 |
| 7.8 | Checking engine specified torque signal from ABS/ASR control unit | 149 |
| 7.9 | Checking gear signal | 150 |
| 7.10 | Checking ignition timing retardation on changing gear | 152 |
| 7.11 | Checking change up/changedown signal | 154 |
| 7.12 | Checking CAN bus | 155 |
| 28 - Ignition system | 157 | |
| 1 | Checking ignition system | 157 |
| 1.1 | Checking ignition system | 157 |
| 1.2 | Safety precautions | 157 |
| 1.3 | Removing and installing ignition system components | 158 |
| 1.4 | Technical data | 161 |
| 1.5 | Checking ignition coils | 161 |
| 1.6 | Checking intake air temperature sender | 166 |
| 1.7 | Checking engine speed sender -G28 | 168 |
| 1.8 | Checking coolant temperature sender -G62 | 172 |
| 1.9 | Checking control unit power supply | 174 |
| 1.10 | Checking knock sensors | 176 |
| 1.11 | Checking Hall sensor | 178 |
| 2 | Checking camshaft timing control | 181 |
| 2.1 | Checking camshaft timing control | 181 |
| 2.2 | Checking camshaft timing control function | 181 |
| 2.3 | Checking camshaft adjustment solenoid valves | 183 |