

Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine	3
1.2 Removing	4
1.3 Attaching engine to repair stand	19
1.4 Installing	19
1.5 Tightening torques	22
13 - Crankshaft group	24
1 Dismantling and assembling engine	24
1.1 Dismantling and assembling engine	24
1.2 Ribbed belt drive for vane pump, alternator and air conditioner	24
1.3 Removing and installing viscous fan	29
1.4 Removing and installing ribbed belt	30
1.5 Removing and installing vibration damper	33
1.6 Toothed belt drive	34
1.7 Removing and installing toothed belt	39
2 Removing and installing sealing flange and flywheel/drive plate	44
2.1 Removing and installing sealing flange and flywheel/drive plate	44
2.2 Renewing crankshaft oil seal - pulley end	50
2.3 Removing and installing dual mass flywheel/ drive plate	52
2.4 Removing and installing needle bearing in dual-mass flywheel	55
2.5 Adjusting engine speed sender bracket	56
3 Removing and installing crankshaft	58
3.1 Removing and installing crankshaft	58
3.2 Crankshaft dimensions	62
3.3 Measuring axial and radial clearance	62
4 Dismantling and assembling pistons and conrods	64
4.1 Dismantling and assembling pistons and conrods	64
4.2 Piston and cylinder dimensions	69
4.3 Checking radial clearance of conrods	69
15 - Cylinder head, Valve gear	71
1 Removing and installing cylinder head	71
1.1 Removing and installing cylinder head	71
1.2 Removing and installing intake manifold (with change-over function)	77
1.3 Removing and installing left cylinder head cover	81
1.4 Removing and installing right cylinder head cover	83
1.5 Removing left cylinder head	84
1.6 Removing right cylinder head	86
1.7 Installing cylinder head	88
1.8 Checking compressions	91
2 Servicing valve gear	93
2.1 Servicing valve gear	93
2.2 Checking camshaft axial clearance	100
2.3 Renewing front camshaft oil seals	101
2.4 Renewing rear oil seal for left camshaft	103



2.5	Removing and installing camshafts	105
2.6	Checking hydraulic bucket tappets	106
2.7	Renewing valve stem seals	108
2.8	Checking valve guides	111
2.9	Checking valves	111
2.10	Replacing valve guides	112
2.11	Reworking valve seats	113
17	- Lubrication	116
1	Removing and installing parts of lubrication system	116
1.1	Removing and installing parts of lubrication system	116
1.2	Different oil circuits	116
1.3	Vehicles up to VIN 4D S_ 000 496	117
1.4	Vehicles from VIN 4D S_ 000 497 onwards	123
1.5	Removing and installing lower section of sump	128
1.6	Removing and installing upper section of sump	129
1.7	Removing and installing oil pump	136
1.8	Renewing oil retention valves	139
1.9	Testing oil pressure and oil pressure switch	141
1.10	Engine oil	143
1.11	Checking oil level	144
19	- Cooling system	145
1	Removing and installing parts of cooling system	145
1.1	Removing and installing parts of cooling system	145
1.2	Coolant pump and coolant thermostat	146
1.3	Draining and filling cooling system	147
1.4	Removing and installing coolant pump	152
1.5	Removing and installing, checking coolant thermostat	153
1.6	Coolant pipes - overview	155
1.7	Removing and installing small coolant pipe	157
1.8	Removing and installing large coolant pipe	157
1.9	Removing and installing radiator	159
1.10	Checking cooling system for leaks	163
26	- Exhaust system	165
1	Removing and installing parts of exhaust system	165
1.1	Removing and installing parts of exhaust system	165
1.2	Separating centre and rear silencers	175
1.3	Removing and installing front exhaust pipe with catalytic converter (left side)	176
1.4	Removing and installing front exhaust pipe with catalytic converter (right side)	178
1.5	Removing and installing exhaust manifold (left side)	180
1.6	Removing and installing exhaust manifold (right side)	181
1.7	Stress-free alignment of exhaust system	182
1.8	Checking exhaust system for leaks	184