

Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Distinguishing features of "engine generations II" and "III"	1
1.3 Engine features	1
2 Safety precautions	3
2.1 Working on the cooling system	3
2.2 Using testers and measuring instruments during a road test	3
2.3 Working on the exhaust system	3
3 General repair instructions	4
3.1 Rules for cleanliness when working on fuel supply system, injection system and turbocharger	4
3.2 Checking fuel system for leaks	4
3.3 Foreign particles in engine	4
3.4 Contact corrosion!	4
3.5 Routing and attachment of pipes, hoses and wiring	5
3.6 Checking vacuum system	5
3.7 Installing radiators, condensers and charge air coolers	6
10 - Removing and installing engine	7
1 Contact corrosion	7
2 Removing and installing engine	8
2.1 Removing engine	9
2.2 Attaching engine to repair stand	22
2.3 Installing engine	22
2.4 Vacuum connections	26
13 - Crankshaft group	29
1 Servicing work on pulley end	29
1.1 Exploded view of poly V-belt drive for power steering pump, alternator, viscous fan and air conditioner	29
1.2 Removing and installing poly V-belt	30
1.3 Removing and installing vibration damper	32
1.4 Exploded view of toothed belt drive	32
1.5 Removing and installing toothed belt	35
2 Servicing work on flywheel end	40
2.1 Exploded view of sealing flange and dual-mass flywheel/drive plate	40
2.2 Replacing crankshaft oil seal on pulley end	42
2.3 Removing and installing front sealing flange - "engine generation III"	43
2.4 Removing and installing dual-mass flywheel	49
2.5 Removing and installing drive plate	51
2.6 Extracting needle bearing from dual-mass flywheel and driving in	52
3 Removing and installing crankshaft	54
3.1 Exploded view of crankshaft	54
3.2 Crankshaft dimensions	56
3.3 Measuring crankshaft axial clearance	57
3.4 Measuring crankshaft radial clearance	57
3.5 Removing and installing chain sprocket - "engine generation III"	58
4 Dismantling and assembling pistons and conrods	60
4.1 Different conrods and conrod bolts	60
4.2 Exploded view of sawn conrods	60
4.3 Exploded view of cracked conrods	62

4.4	Piston and cylinder dimensions	65
4.5	Checking radial clearance of conrods	65
15 - Cylinder head, valve gear	67
1	Removing and installing cylinder head	67
1.1	Different cylinder heads	67
1.2	Exploded view of cylinder head	67
1.3	Removing and installing left cylinder head cover	70
1.4	Removing and installing right cylinder head cover	72
1.5	Removing left cylinder head	74
1.6	Removing right cylinder head	77
1.7	Installing cylinder head	80
1.8	Removing and installing intake manifold	83
1.9	Checking compression	87
2	Servicing valve gear	90
2.1	Exploded view of valve gear	90
2.2	Checking axial clearance of camshafts	93
2.3	Replacing oil seals for camshafts	94
2.4	Replacing oil seal for Hall sender and sealing cap - left cylinder head	96
2.5	Replacing oil seal for Hall sender - right cylinder head	97
2.6	Removing and installing camshafts and camshaft adjuster	100
2.7	Checking hydraulic bucket tappets	104
2.8	Replacing valve stem seals	105
2.9	Valve dimensions	109
2.10	Checking valve guides	109
2.11	Reworking valve seats	110
2.12	Checking valves	112
3	Checking camshaft timing control	113
3.1	Checking camshaft timing control function	113
3.2	Checking camshaft adjustment solenoid valves	117
17 - Lubrication	121
1	Removing and installing lubrication system components	121
1.1	Different oil circuits	121
1.2	Exploded view of lubrication system "engine generation II"	121
1.3	Exploded view of lubrication system "engine generation III"	124
1.4	Removing bottom part of sump	126
1.5	Installing bottom part of sump - engines with moulded gasket	127
1.6	Installing bottom part of sump - engines with liquid gasket	128
1.7	Removing top part of sump	129
1.8	Installing top part of sump - "engine generation II"	138
1.9	Installing top part of sump - "engine generation III"	139
1.10	Removing and installing oil pump - "engine generation II"	140
1.11	Removing and installing oil pump - "engine generation III"	143
1.12	Checking chain tensioner - "engine generation III"	145
1.13	Removing and installing chain/chain tensioner for oil pump - "engine generation III"	145
1.14	Replacing oil retention valves	146
1.15	Checking oil pressure and oil pressure switch	146
1.16	Engine oil	149
1.17	Checking oil level	149
19 - Cooling	151
1	Removing and installing cooling system components	151
1.1	Connection diagram for coolant hoses	151
1.2	Draining and replenishing coolant	153
1.3	Exploded view of coolant pump and thermostat	159

1.4	Removing and installing coolant pump	160
1.5	Removing, installing and checking thermostat	162
1.6	Exploded view of coolant pipes	165
1.7	Removing and installing front coolant pipe	166
1.8	Removing and installing small coolant pipe	168
1.9	Removing and installing rear coolant pipe	169
1.10	Removing and installing pulley for viscous fan	171
1.11	Removing and installing viscous fan	171
1.12	Removing and installing radiator	172
1.13	Checking cooling system for leaks	175
26 - Exhaust system	177
1	Removing and installing exhaust system components	177
1.1	Exploded view of exhaust system	177
1.2	Separating centre and rear silencer	181
1.3	Removing and installing left front exhaust pipe with catalytic converter	182
1.4	Removing and installing right front exhaust pipe with catalytic converter	184
1.5	Removing and installing left exhaust manifold	186
1.6	Removing and installing right exhaust manifold	188
1.7	Stress-free alignment of exhaust system	191
1.8	Checking exhaust system for leaks	192
2	Secondary air system	193
2.1	Principle and operation	193
2.2	Checking secondary air inlet valve N112	194
2.3	Checking secondary air pump relay J299 and actuation	198
2.4	Checking secondary air combination valve for proper operation and leakage	203
2.5	Exploded view of secondary air system components	204
2.6	Removing and installing left combination valve for secondary air	205
2.7	Removing and installing right combination valve for secondary air	206