

Contents

| | |
|---|-----------|
| 00 - Technical data | 1 |
| 1 Technical data | 1 |
| 1.1 Technical data | 1 |
| 1.2 Engine number | 1 |
| 1.3 Engine data | 1 |
| 10 - Removing and installing engine | 3 |
| 1 Removing and installing engine, engine code ABZ, AEW, AKG, AKJ | 3 |
| 1.1 Removing and installing engine, engine code ABZ, AEW, AKG, AKJ | 3 |
| 1.2 Removing | 3 |
| 1.3 Stripping down engine | 12 |
| 1.4 Attaching engine to repair stand | 15 |
| 1.5 Installing | 15 |
| 1.6 Tightening torques, engine codes ABZ, AEW, AKG and AKJ | 16 |
| 2 Removing and installing engine, engine codes AHC and AKH | 17 |
| 2.1 Removing and installing engine, engine codes AHC and AKH | 17 |
| 2.2 Removing | 17 |
| 2.3 Attaching engine to engine stand | 26 |
| 2.4 Installing | 26 |
| 2.5 Tightening torques, engine codes AHC and AKH | 27 |
| 13 - Crankshaft group | 29 |
| 1 Belt drive | 29 |
| 1.1 Belt drive | 29 |
| 1.2 Removing and installing ribbed belt | 29 |
| 1.3 Removing and installing toothed belt | 32 |
| 2 Dismantling and assembling engine | 40 |
| 2.1 Dismantling and assembling engine | 40 |
| 2.2 Servicing flywheel | 41 |
| 2.3 Removing and installing needle bearing bush | 42 |
| 2.4 Drive plate | 43 |
| 2.5 Replacing crankshaft seal | 44 |
| 2.6 Replacing seal for oil pump drive | 44 |
| 15 - Cylinder head, Valve gear | 46 |
| 1 Removing and installing cylinder head | 46 |
| 1.1 Removing and installing cylinder head | 46 |
| 1.2 Installing cylinder head bolts | 51 |
| 1.3 Checking compression | 52 |
| 2 Servicing valve gear | 53 |
| 2.1 Servicing valve gear | 53 |
| 2.2 Removing and installing camshafts | 63 |
| 2.3 Renewing valve stem seals | 66 |
| 2.4 Checking valve guides | 68 |
| 2.5 Renewing valve guides | 68 |
| 2.6 Reworking valve seats | 70 |
| 2.7 Renewing camshaft oil seals | 71 |
| 17 - Lubrication | 74 |
| 1 Removing and installing parts of the lubrication system | 74 |
| 1.1 Removing and installing parts of the lubrication system | 74 |
| 1.2 Oil sump/oil pump, engine codes ABZ, AKG, AHC and AKH | 75 |
| 1.3 Oil sump/oil pump, engine codes AEW and AKJ | 78 |



| | | |
|-----------|---|------------|
| 1.4 | Oil filter/oil cooler | 81 |
| 1.5 | Oil pump drive | 84 |
| 1.6 | Removing oil pump | 86 |
| 1.7 | Replacing oil retention valves | 86 |
| 1.8 | Checking oil pressure switch and oil pressure | 89 |
| 1.9 | Engine oil | 91 |
| 1.10 | Check oil level | 92 |
| 19 | - Cooling system | 93 |
| 1 | Removing and installing parts of the cooling system | 93 |
| 1.1 | Removing and installing parts of the cooling system | 93 |
| 1.2 | Removing and installing viscous fan | 96 |
| 1.3 | Coolant pump | 98 |
| 1.4 | Draining and filling cooling system | 99 |
| 1.5 | Checking cooling system for leaks | 102 |
| 1.6 | Checking relief valve in cap | 102 |
| 26 | - Exhaust system | 104 |
| 1 | Exhaust system, engine codes ABZ, AHC, AKG and AKH | 104 |
| 1.1 | Exhaust system, engine codes ABZ, AHC, AKG and AKH | 104 |
| 1.2 | Removing and installing exhaust system | 104 |
| 1.3 | Catalytic converter mounting | 108 |
| 1.4 | Flange connection between catalytic converter and exhaust pipe, front | 109 |
| 1.5 | Stress free alignment of exhaust system | 109 |
| 1.6 | Checking exhaust system for leaks | 111 |
| 2 | Exhaust system, engine codes AEW and AKJ | 112 |
| 2.1 | Exhaust system, engine codes AEW and AKJ | 112 |
| 2.2 | Removing and installing exhaust system | 112 |
| 2.3 | Stress free alignment of exhaust system | 117 |
| 2.4 | Checking exhaust system for leaks | 120 |