

Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
2 Safety precautions	3
2.1 Working on the cooling system	3
2.2 Using testers and measuring instruments during a road test	3
2.3 Working on the exhaust system	3
3 General repair instructions	4
3.1 Rules for cleanliness when working on fuel supply system, injection system and turbocharger	4
3.2 Checking fuel system for leaks	4
3.3 Foreign particles in engine	4
3.4 Contact corrosion!	4
3.5 Routing and attachment of pipes, hoses and wiring	5
3.6 Checking vacuum system	5
3.7 Installing radiators, condensers and charge air coolers	6
10 - Removing and installing engine	7
1 Removing and installing engine	7
1.1 Removing	8
1.2 Separating engine and gearbox	18
1.3 Attaching engine to engine stand	18
1.4 Installing	19
13 - Crankshaft group	21
1 Poly V-belt drive - exploded view	21
1.1 Removing and installing poly V-belt	23
1.2 Checking alignment of poly V-belt	25
1.3 Removing and installing vibration damper	27
2 Toothed belt drive - exploded view	29
2.1 Removing and installing toothed belt	31
2.2 Removing toothed belt from camshaft sprockets	40
3 Sealing flanges and drive plate - exploded view	46
3.1 Renewing crankshaft oil seal (pulley end)	47
3.2 Removing and installing sealing flange (front)	49
3.3 Removing and installing sealing flange (rear)	53
3.4 Removing and installing drive plate	55
4 Crankshaft - exploded view	58
4.1 Crankshaft dimensions	61
4.2 Measuring axial clearance	61
4.3 Measuring radial clearance	61
4.4 Removing and installing drive chain sprocket for oil pump	62
5 Pistons and conrods - exploded view	64
5.1 Piston and cylinder dimensions	67
5.2 Checking radial clearance of conrod bearings	67
15 - Cylinder head, valve gear	68
1 Removing and installing cylinder head	68
1.1 Removing and installing cylinder head cover (left-side)	68
1.2 Removing and installing cylinder head cover (right-side)	69
1.3 Removing cylinder head (left-side)	71



1.4	Removing cylinder head (right-side)	76
1.5	Installing cylinder head	81
2	Checking compression	85
3	Valve gear - exploded view	88
3.1	Checking axial clearance of camshafts	91
3.2	Renewing camshaft oil seals	92
3.3	Renewing oil seal at Hall sender	93
3.4	Removing and installing camshafts and camshaft adjuster - cylinder head (left-side)	97
3.5	Removing and installing camshafts and camshaft adjuster - cylinder head (right-side)	101
3.6	Removing and installing roller rocker fingers	106
3.7	Renewing valve stem oil seals	107
3.8	Checking valve guides	110
3.9	Checking valves	111
3.10	Machining valve seats	111
17	Lubrication	114
1	Removing and installing parts of lubrication system	114
1.1	Oil pump, sump (bottom section) - exploded view	114
1.2	Removing and installing oil level and oil temperature sender G266	115
1.3	Removing and installing sump (bottom section)	116
1.4	Removing and installing chain drive for oil pump	118
1.5	Removing and installing oil pump	119
1.6	Sump (top section) - exploded view	120
1.7	Removing and installing sump (top section)	122
1.8	Oil retention valves - exploded view	129
1.9	Renewing oil retention valves	130
1.10	Oil filter housing - exploded view	131
1.11	Checking oil pressure and oil pressure switch F1	133
1.12	Engine oil	134
1.13	Checking oil level	135
19	Cooling	136
1	Diagram of coolant hose connections	136
1.1	Draining and filling cooling system	137
1.2	Coolant pump and thermostat - exploded view	141
1.3	Removing and installing coolant pump	143
1.4	Removing, installing and checking thermostat	144
1.5	Checking thermostat	145
1.6	Checking cooling system for leaks	145
1.7	Checking pressure relief valve in filler cap	146
1.8	Oil cooler - exploded view	147
1.9	Removing and installing oil cooler	147
1.10	Removing and installing viscous fan	148
1.11	Removing and installing radiator	149
1.12	Removing and installing radiator fan V7	154
26	Exhaust system	156
1	Removing and installing parts of exhaust system	156
1.1	Silencers with mountings - exploded view	156
1.2	Removing and installing exhaust manifold	157
1.3	Removing and installing front exhaust pipe with catalytic converter (left-side)	158
1.4	Removing and installing front exhaust pipe with catalytic converter (right-side)	159
1.5	Stress-free alignment of exhaust system	161
1.6	Checking exhaust system for leaks	163