

Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	3
1 Contact corrosion!	3
2 Removing and installing engine	4
2.1 Removing and installing engine	4
2.2 Removing	5
2.3 Separating engine and gearbox	24
2.4 Securing engine to engine stand	31
2.5 Installing	32
2.6 Tightening torques	39
2.7 Wire routing on engine	40
13 - Crankshaft group	42
1 Lock carrier	42
1.1 Pulling lock carrier forwards	42
2 Servicing work on pulley end	48
2.1 Poly V-belt drive for power steering pump, alternator and air conditioner - exploded view of components	48
2.2 Removing and installing poly V-belt	50
2.3 Checking alignment of pulleys for power steering pump and air conditioner compressor ..	50
2.4 Removing and installing vibration damper	52
2.5 Renewing crankshaft oil seal (pulley end)	53
3 Servicing work on timing chain end	56
3.1 Removing and installing drive plate	56
3.2 Renewing crankshaft oil seal (on timing chain end)	57
3.3 Timing chain covers - exploded view of components	59
3.4 Renewing seals for studs	60
3.5 Removing and installing timing chain covers	61
3.6 Removing and installing timing chains for camshaft drive	68
3.7 Timing chains for camshaft drive - exploded view of components	68
3.8 Removing and installing camshaft timing chains	71
3.9 Drive chain - exploded view of components	79
3.10 Removing and installing drive chain	80
15 - Cylinder head, valve gear	84
1 Removing and installing cylinder head	84
1.1 Cylinder head - exploded view of components	84
1.2 Removing and installing cylinder head cover	85
1.3 Removing cylinder head	89
1.4 Installing cylinder head	89
2 Removing and installing intake manifold	92
2.1 Intake manifold - exploded view of components	92
2.2 Removing and installing left section of intake manifold	93
2.3 Removing and installing right section of intake manifold	95
2.4 Removing and installing top section of intake manifold	96
2.5 Removing and installing bottom section of intake manifold	99
2.6 Checking compression	100
3 Servicing valve gear	104



3.1	Camshafts - exploded view of components	104
3.2	Removing and installing camshaft adjuster	108
3.3	Removing and installing housing for variable valve timing	110
3.4	Removing and installing camshafts	111
3.5	Checking axial clearance of camshafts	117
3.6	Renewing valve stem oil seals	117
3.7	Checking valve guides	122
3.8	Machining valve seats	122
3.9	Checking valves	124
17	- Lubrication	125
1	Removing and installing parts of the lubrication system	125
1.1	Sump (bottom section) - exploded view of components	125
1.2	Removing and installing oil cooler	127
1.3	Removing and installing oil filter bracket	129
1.4	Removing and installing sump (bottom section)	130
1.5	Oil pump - exploded view of components	135
1.6	Removing and installing oil pump	136
1.7	Removing and installing sump (top section)	137
1.8	Renewing oil retention valves	140
1.9	Checking oil level	140
1.10	Filling up engine oil after repairs	143
1.11	Checking oil pressure and oil pressure switch	144
19	- Cooling	147
1	Removing and installing parts of the cooling system	147
1.1	Parts of cooling system	147
1.2	Draining and filling cooling system	150
1.3	Removing and installing coolant pump	156
1.4	Checking thermostat	157
1.5	Removing and installing thermostat	159
1.6	Removing and installing top coolant pipe (small)	160
1.7	Removing and installing top coolant pipe (large)	161
1.8	Removing and installing coolant pipe (left-side)	164
1.9	Removing and installing coolant pipe (top right)	167
1.10	Removing and installing coolant pipe (bottom right)	172
1.11	Removing and installing radiator	174
1.12	Checking cooling system for leaks	179
1.13	Hydraulic fan - exploded view of components	180
1.14	Removing and installing hydraulic fan	181
1.15	Checking radiator fan valve N313	183
1.16	Removing and installing pump for power steering and hydraulic fan	186
1.17	Checking electrical radiator fan V7 and activation	188
1.18	Removing and installing electrical radiator fan V7	191
26	- Exhaust system	193
1	Removing and installing parts of exhaust system	193
2	Removing and installing starter catalytic converters, intermediate pipes and main catalytic converters	194
2.1	Removing and installing starter catalytic converters, intermediate pipes and main catalytic converters	196
2.2	Removing and installing exhaust manifold	201
3	Removing and installing centre silencer and rear silencer	203
3.1	Stress-free alignment of exhaust system	205
4	Servicing exhaust flap	207
4.1	Checking exhaust flap	207

4.2	Checking vacuum unit for exhaust flap	208
4.3	Checking exhaust flap valve N321	208
5	Servicing secondary air system	212
5.1	Secondary air system	212
5.2	Exploded view of components	213
5.3	Checking secondary air system for leaks	215
5.4	Checking combination valves for secondary air for correct operation and leakage	215
5.5	Checking secondary air inlet valve N112 and secondary air inlet valve 2 N320	216
5.6	Checking secondary air pump relay J299 , secondary air pump relay 2 J545 and activation	220
5.7	Secondary air pump - exploded view of components	228
5.8	Cleaning air filter element for secondary air pump	229
5.9	Removing and installing secondary air pump	230
5.10	Removing and installing combination valve for secondary air system (left-side)	232
5.11	Removing and installing combination valve for secondary air system (right-side)	233