

Contents

01 - Self-diagnosis	1
1 Technical data of self-diagnosis	1
1.1 Features	1
1.2 Functions available under address word 01 or address word 11, engine electronics	1
1.3 Connecting fault reader and selecting engine electronics control units	2
1.4 Interrogating and erasing fault memory	3
1.5 Fault table	6
2 Final control diagnosis	19
3 Basic setting	22
4 Encoding engine control units 1 and 2	27
5 Reading measured value block	29
6 Idling speed and glow period adaption	46
23 - Mixture preparation - injection	47
1 Servicing diesel direct injection system	47
1.1 Safety precautions	47
1.2 Avoidance of injury and/or damage to the injection and glow plug system	47
1.3 Rules for cleanliness and instructions for working on fuel system	47
1.4 Exploded view of fitting locations	48
1.5 System layout	51
1.6 Connection diagram for charge pressure control	52
1.7 Connection diagram for exhaust gas recirculation	53
1.8 Exploded view of intake manifold	53
1.9 Removing and installing intake manifold	55
1.10 Removing and installing rear air pipe	62
1.11 Removing and installing engine cover	66
1.12 Removing and installing air cleaner (cleaning air intake duct)	66
1.13 Wiring and component check with test box V.A.G 1598/30;Adapter	68
1.14 Replacing diesel direct injection system control unit J248 (without protective housing)	69
1.15 Replacing diesel direct injection system control unit 2 J494	74
1.16 Activating/deactivating cruise control system	76
1.17 Checking injectors	77
1.18 Checking operation of injectors	80
1.19 Removing and installing injectors	85
1.20 Removing and installing high-pressure pump	94
1.21 Bleeding fuel system after installing high-pressure pump	96
1.22 Checking pre-supply pressure of fuel system	97
1.23 Checking terminal 30 voltage supply relay J317 (diesel direct injection system control unit J248)	98
1.24 Checking terminal 30 voltage supply relay (diesel direct injection system control unit 2 J494)	102
1.25 Checking engine speed sender G28	103
1.26 Checking coolant temperature sender G62	104
1.27 Checking intake air temperature sender G42	105
1.28 Checking oil temperature sender G8	106
1.29 Checking fuel temperature sender G81	106
1.30 Checking fuel pressure sender G247	107
1.31 Checking fuel pressure regulating valve N276	108
1.32 Checking fuel metering valve N290	109
1.33 Checking air mass meter G70 and air mass meter 2 G246	110
1.34 Electrical checking of air mass meter G70	111
1.35 Electrical checking of air mass meter 2 G246	113
1.36 Removing and installing air mass meter	115



1.37	Checking variable intake manifold flap changeover valve N239	117
1.38	Checking Hall sender G40	118
1.39	Checking brake light switch F and brake pedal switch F47	120
1.40	Checking crash signal	121
1.41	Checking air conditioner compressor shut-off	122
1.42	Checking air conditioner signal	123
1.43	Checking vehicle speed signal	123
1.44	Checking engine speed signal	124
1.45	Checking data exchange between diesel direct injection system control unit J248 and diesel direct injection system control unit 2 J494	125
1.46	Checking data exchange (CAN bus) between the connected control units	126
1.47	Checking "two-wire bus system"	128
28	- Glow plug system	131
1	Checking glow plug system	131
1.1	Checking operation	131
1.2	Checking glow plugs	131