

Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
3 Safety precautions	3
4 General repair instructions	4
4.1 Rules for cleanliness when working on fuel supply system, injection system and turbocharger	4
4.2 Checking for leaks in the fuel system	4
4.3 Contact corrosion!	4
4.4 Installing radiators, condensers and charge air coolers	5
4.5 Checking vacuum system	5
4.6 Routing and attachment of pipes, hoses and wiring	5
10 - Removing and installing engine	6
1 Removing engine	6
2 Securing engine to engine and gearbox support	22
3 Installing engine	24
13 - Crankshaft group	30
1 Cylinder block (pulley end)	30
1.1 Poly V-belt drive for power steering pump, alternator and viscous fan - exploded view ..	30
1.2 Removing and installing poly V-belt for power steering pump, alternator and viscous fan	31
1.3 Poly V-belt drive for air conditioner compressor - exploded view	34
1.4 Removing and installing poly V-belt for A/C compressor	35
1.5 Removing and installing vibration damper	38
1.6 Bracket for power steering pump and oil cooler - exploded view	38
1.7 Removing and installing bracket for power steering pump and oil cooler	40
1.8 Removing and installing mounting bushes on bracket for power steering pump and oil cooler	43
1.9 Toothed belt drive for camshafts - exploded view	49
1.10 Toothed belt drive for injection pump - exploded view	52
1.11 Removing toothed belt from camshaft sprockets	53
1.12 Removing and installing toothed belt	61
2 Sealing flanges and dual-mass flywheel/drive plate	72
2.1 Sealing flanges and dual-mass flywheel/drive plate - exploded view	72
2.2 Renewing crankshaft oil seal (pulley end)	74
2.3 Removing and installing sealing flange (pulley end)	75
2.4 Removing and installing dual-mass flywheel - vehicles with manual gearbox	78
2.5 Extracting and driving in needle bearing for dual-mass flywheel	79
2.6 Removing and installing drive plate - vehicles with automatic gearbox	80
3 Crankshaft	82
3.1 Crankshaft - exploded view	82
3.2 Crankshaft dimensions	84
3.3 Measuring axial clearance of crankshaft	84
3.4 Measuring radial clearance of crankshaft	85
3.5 Removing and installing chain sprocket	86
4 Dismantling and assembling pistons and conrods	87
4.1 Pistons and conrods - exploded view	87
4.2 Measuring piston projection at "TDC"	90
4.3 Piston and cylinder dimensions	92
4.4 Measuring radial clearance of conrods	93



15 - Cylinder head, valve gear	94
1 Cylinder head	94
1.1 Cylinder head - exploded view	94
1.2 Removing and installing intake manifold (front section)	97
1.3 Removing and installing intake manifold (left-side)	98
1.4 Removing and installing intake manifold (right-side)	100
1.5 Removing and installing cylinder head cover (left-side)	102
1.6 Removing and installing cylinder head cover (right-side)	104
1.7 Removing cylinder head (left-side)	108
1.8 Removing cylinder head (right-side)	110
1.9 Installing cylinder head	114
1.10 Checking compression	119
2 Valve gear	122
2.1 Valve gear - exploded view	122
2.2 Checking axial clearance of camshafts	124
2.3 Measuring radial clearance of camshafts	125
2.4 Renewing oil seals for camshafts	125
2.5 Removing and installing camshafts	126
2.6 Removing and installing outer camshaft bearing caps	130
2.7 Checking hydraulic valve compensation elements	131
2.8 Renewing valve stem oil seals with cylinder head installed	132
2.9 Renewing valve stem oil seals with cylinder head removed	136
2.10 Valve dimensions	139
2.11 Checking valve guides	139
2.12 Checking valves	140
17 - Lubrication	141
1 Sump (bottom section), oil pump, sump (top section)	141
1.1 Sump, oil pump - exploded view	141
1.2 Removing sump (bottom section)	144
1.3 Installing sump (bottom section) - engines with moulded gasket	145
1.4 Installing sump (bottom section) - engines with liquid gasket	146
1.5 Removing and installing oil pump	147
1.6 Removing sump (top section)	153
1.7 Installing sump (top section) - engines with moulded gasket	161
1.8 Installing sump (top section) - engines with liquid gasket	162
1.9 Oil filter bracket, oil filter - exploded view	165
1.10 Removing and installing connecting piece with oil separator	167
1.11 Removing and installing oil filter bracket	170
1.12 Renewing oil retention valves	171
1.13 Removing and installing oil cooler	171
2 Engine oil	174
2.1 Checking engine oil level	174
2.2 Checking oil pressure and oil pressure switch	174
19 - Cooling	176
1 Cooling system	176
1.1 Draining and filling cooling system	176
1.2 Coolant pump and thermostat - exploded view	181
1.3 Removing and installing coolant pump	182
1.4 Removing, installing and checking thermostat	183
1.5 Checking thermostat	189
1.6 Coolant pipes - exploded view	190
1.7 Removing and installing coolant pipe (front)	191
1.8 Removing and installing coolant pipe (left-side)	192

1.9	Removing and installing coolant pipe (right-side)	193
1.10	Removing and installing coolant pipe (centre)	195
1.11	Removing and installing viscous fan	195
1.12	Removing and installing radiator	196
1.13	Checking cooling system for leaks	200
21	Turbocharging/supercharging	202
1	Charge air system with turbocharger	202
1.1	Hose connection diagram for charge pressure control	202
1.2	Test requirements for checking turbocharging system	202
1.3	Effects of leaks in charge air system	203
1.4	Checking turbocharger and charge pressure control	203
1.5	Checking charge pressure control solenoid valve N75	206
1.6	Checking linkage and vacuum unit for charge pressure control at turbocharger	212
1.7	Checking intake manifold pressure sender G71	214
2	Turbocharger	219
2.1	Turbocharger - exploded view	219
2.2	Removing and installing turbocharger	220
2.3	Removing and installing intermediate flange for turbocharger	224
3	Charge air cooling	226
3.1	Removing and installing charge air cooler	226
26	Exhaust system	229
1	Removing and installing parts of exhaust system	229
1.1	Silencers - exploded view	229
1.2	Separating centre and rear silencers	234
1.3	Removing and installing front exhaust pipe with catalytic converter	235
1.4	Removing and installing starter catalytic converter - engine code letters AKE	237
1.5	Removing and installing front exhaust pipe with catalytic converter - engine code letters AKE	240
1.6	Stress-free alignment of exhaust system	242
1.7	Checking exhaust system for leaks	245
2	Exhaust manifold	246
2.1	Exhaust manifold with intermediate pipe - exploded view	246
2.2	Removing and installing exhaust manifold (left-side) with intermediate pipe - engine code letters AFB, AKN	247
2.3	Removing and installing exhaust manifold (left-side) with intermediate pipe - engine code letters AKE	250
2.4	Removing and installing exhaust manifold (right-side) with intermediate pipe	254
3	Exhaust gas recirculation system	261
3.1	Hose connection diagram for exhaust gas recirculation	261
3.2	Checking exhaust gas recirculation	261
3.3	Checking exhaust gas recirculation valve N18	263
3.4	Checking mechanical exhaust gas recirculation valve	267
3.5	Removing and installing mechanical exhaust gas recirculation valve	268