

Contents

20 - Fuel supply system	1
1 Notes for working on fuel supply system	1
1.1 Notes for working on fuel supply system	1
1.2 General repair instructions	1
1.3 Safety precautions when working on the fuel supply system	1
1.4 Rules for cleanliness	1
2 Fuel tank	2
2.1 Fuel tank	2
2.2 Draining fuel tank - with intact fuel delivery unit	4
2.3 Draining fuel tank - with defective fuel delivery unit	6
2.4 Removing and installing fuel tank with attachments	7
3 Fuel delivery unit -	14
3.1 Fuel delivery unit -	14
3.2 Fuel delivery unit - 6-cyl. and 8-cyl. engine	14
3.3 Function of fuel system	19
3.4 Testing fuel pump (electrical test)	21
3.5 Testing fuel pump delivery rate	27
3.6 Removing and installing fuel delivery unit	31
4 Fuel delivery unit -	44
4.1 Fuel delivery unit -	44
4.2 Fuel delivery unit - 12-cyl. engine	44
4.3 Function of fuel system	49
4.4 Testing fuel pump (electrical test)	51
4.5 Testing fuel pump delivery rate	56
4.6 Removing and installing fuel delivery unit	59
5 Fuel gauge sender	74
5.1 Fuel gauge sender	74
5.2 Testing fuel gauge sender	74
5.3 Removing and installing fuel gauge sender	77
5.4 Removing and installing fuel expansion chamber	83
5.5 Servicing fuel filter	87
6 Servicing components of activated charcoal filter system	90
6.1 Servicing components of activated charcoal filter system	90
7 Servicing throttle mechanism - vehicles with mechanical accelerator linkage	91
7.1 Servicing throttle mechanism - vehicles with mechanical accelerator linkage	91
7.2 Left-hand drive vehicles	91
7.3 Right-hand drive vehicles	92
7.4 Removing and installing throttle cable - vehicles with 6-cylinder engine	93
7.5 Adjusting throttle cable - vehicles with 6-cylinder engine	95
7.6 Removing and installing throttle cable - vehicles with 8-cylinder engine	95
7.7 Adjusting throttle cable - vehicles with 8-cylinder engine	97
7.8 Checking adjustment of throttle cable on vehicles with automatic gearbox (checking kickdown switch)	98
8 Servicing accelerator linkage - vehicles with electronic throttle system (electronic power control)	100
8.1 Servicing accelerator linkage - vehicles with electronic throttle system (electronic power control)	100
8.2 Left-hand drive vehicles	100
8.3 Right-hand drive vehicles	102
8.4 Adjusting accelerator position sender	104
8.5 Testing kickdown switch	106