

Contents

20	Fuel supply system	1
1	General repair instructions	1
1.1	Safety precautions	1
1.2	Rules for cleanliness	1
1.3	Test conditions	1
1.4	Contact corrosion!	2
2	Fuel tank	3
2.1	Fuel tank with attached components - exploded view	3
2.2	Draining fuel tank with intact fuel delivery unit	4
2.3	Draining fuel tank with defective fuel delivery unit	5
2.4	Removing and installing fuel tank with attached components	6
2.5	Fuel expansion chamber - exploded view	11
3	Fuel delivery unit and fuel gauge senders	14
3.1	Fuel delivery unit and fuel gauge senders - exploded view	14
3.2	Description of operation	16
3.3	Checking fuel pump relay J17 and activation - vehicles with 6-cylinder engine	17
3.4	Checking fuel pump relay J17 and activation - vehicles with 8-cylinder engine	22
3.5	Checking fuel system pressurisation pump G6 (electrical test) - vehicles with 6-cylinder or 8-cylinder engine	28
3.6	Removing and installing fuel delivery unit - vehicles with 6-cylinder and 8-cylinder engine	32
3.7	Checking fuel delivery unit for leaks - vehicles with 6-cylinder and 8-cylinder engines	40
3.8	Checking electric fuel pump 2 relay J49 and activation - vehicles with 8-cylinder engine ..	40
3.9	Checking fuel pump G23 (electrical test) - vehicles with 8-cylinder engine	46
3.10	Removing and installing fuel pump G23 - vehicles with 8-cylinder engine	49
3.11	Checking fuel cooling pump relay J445	50
3.12	Removing and installing fuel cooling pump V166 - vehicles with 8-cylinder engine	50
3.13	Checking fuel gauge senders	51
3.14	Removing and installing fuel gauge sender G	54
3.15	Removing and installing fuel gauge sender 2 G169 (left-side)	56
3.16	Checking low fuel level sender G210	58
4	Fuel filter	61
4.1	Fuel filter - exploded view	61
4.2	Removing and installing fuel filter	62
4.3	Bleeding fuel system	63
4.4	Checking fuel system for leaks - vehicles with 6-cylinder engine	63
4.5	Checking fuel system for leaks - vehicles with 8-cylinder engine	65
5	Accelerator mechanism	67
5.1	Accelerator mechanism on left-hand drive vehicles - exploded view	67
5.2	Accelerator mechanism on right-hand drive vehicles - exploded view	69
5.3	Checking accelerator position sender G79	70
5.4	Adjusting accelerator position sender G79	75