001 - Audi A8 4.2 I fuel injection engine (221 kW - multi-point injection 8-cylinder) engine code	1
ABZ, Model year 1994	
1. Audi A8 4.2 I fuel injection engine (221 kW - multi-point injection 8-cylinder) engine code ABZ,	1
Model year 1994	
2. Audi A8 4.2 I fuel injection engine (221 kW - multi-point injection 8-cylinder) engine code ABZ,	1
Model year 1994	_
3. Audi A8 4.2 I fuel injection engine (221 kW - multi-point injection 8-cylinder) engine code ABZ,	2
Model year 1994	0
4. Earth connections 5. Pottery, starter alternator, starter inhibitor and reversing light relay.	3 4
 Battery, starter, alternator, starter inhibitor and reversing light relay Motronic control unit, ignition coils, injectors, immobilizer relay 	5
7. Motronic control unit, ignition coils, injectors, infinobilizer relay	6
8. Motronic control unit, final output stage for ignition cons	7
Motronic control unit, Hall sender, engine speed sender	8
10. Motronic control unit, fuel pump relay, ignition coils	9
11. Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda	10
probes with heating	
12. Automatic gearbox control unit, Motronic control unit, lambda probe 2	11
13. Automatic gearbox control unit, vehicle speed sender, kick-down switch	12
14. Multi-function switch, automatic gearbox control unit, ABS with EDL control unit	13
15. Engine cooling	14
16. Reversing lights, Tiptronic switch, selector lever lock solenoid	15
17. Dash panel insert, fuel gauge, fuel pump, coolant and oil pressure control	16
18. Dash panel insert, rev. counter, gear indicator, warning lamps	17
19. Dash panel insert, digital clock	18
20. Dash panel insert, main beam warning lamp, doors closed warning lamp	19
21. Dash panel insert, coolant temperature gauge, speedometer, warning lamps	20 21
22. Ignition/starter switch, lighting switch, X contact relief relay23. Fuse carrier 1, bulb monitoring device, headlight, side light, turn signals	21
24. Fuse carrier 1, bulb monitoring device, headilght, side lights, number plate light	23
25. Turn signal switch, hazard warning light switch, hazard warning light relay	24
26. Front fog lights and rear fog lights	25
27. Intermittent wiper switch, windscreen washer/wiper system, headlight washer system	26
28. Heated rear window, heated washer jets, servotronic control unit	27
29. Horn, fresh air blower, Thermotronic control unit	28
30. Central locking motor	29
31. Central locking switch	30
32. Infrarot- Steuergerät- Diebstahlwarnanlage	31
33. Central locking, door contact switch	32
34. Interior lights, reading light, rear left, reading light, rear right	33
35. Footwell lights, entry lights, entry and footwell lighting relay	34
36. Door contact switch, luggage compartment lights, illuminated make-up mirrors	35
37. Cigarette lighter, cigarette lighter, rear, illumination glove box	36
38. Illumination for dash panel and rear vents	37
39. Headlight range control	38
002 - Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code	1-56
AAH, From May 1994	4.00
1. Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH,	1-38
From May 1994	20
 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, From May 1994 	39
3. Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH,	40
From May 1994	40
4. Earth connections	41
5. Battery, starter, alternator, starter inhibitor and reversing light relay	42
6. Multi-point injection control unit, ignition system, injectors, Hall sender, fuses	43
7. Multi-point injection control unit, throttle valve potentiometer, air mass meter, final output	44
stage for ignition coils	
8. Multi-point injection control unit, firing point sender, engine speed and coolant temperature	45
9. Multi-point injection control unit, fuel pump relay, lambda probes with heating	46
10. Multi-point injection control unit, diagnostic connector, fuel pump relay	47
11. Engine cooling	48
12. Automatic gearbox control unit, selector lever lock control unit, brake light switch	49
13. Automatic gearbox control unit, gearbox speed sender, kick-down switch	50
14. Automatic gearbox control unit, multi-function switch	51
15. Dash panel insert. fuel gauge sender. fuel pump. coolant and oil pressure control	52

	16. Dash panel insert, warning lamps, handbrake warning switch	53
	17. Dash panel insert, digital clock	54
	18. Dash panel insert, warning lamps	55
	19. Dash panel insert, warning lamps, speedometer sender	56
002		57-58
003	- Airbag seats driver's and front passenger's side	
	Airbag seats driver's and front passenger's side	57
	2. Airbag seats driver's and front passenger's side	58
004	- Anti-locking brake system	59-64
	1. Anti-locking brake system	59-60
	2. Anti-locking brake system	61
	3. Anti-locking brake system	62
	4. Anti-locking brake system	63
	5. Anti-locking brake system	64
005	- Radio Bose® sound system	65-69
	1. Radio Bose® sound system	65-66
	2. Radio Bose) sound system	67
	3. Radio Bose) sound system	68
	4. Radio Bose) sound system	69
000	, · · · · · · · · · · · · · · · · · · ·	
000	- Radio stereo system with passive loudspeakers	70-73
	Radio stereo system with passive loudspeakers	70-71
	Radio stereo system with passive loudspeakers	72
	3. Radio stereo system with passive loudspeakers	73
007	- Radio Bose® sound system with CD changer	74-79
001	Radio Bose® sound system with CD changer	74-75
	2. Radio Bose) sound system with CD changer	76
	3. Radio Bose) sound system with CD changer	77
	4. Radio Bose) sound system with CD changer	78
	5. Radio Bose) sound system with CD changer	79
008	- Telephone, AEG	80-83
000	1. Telephone, AEG	80-81
	·	
	2. Telephone, AEG	82
	3. Telephone, AEG	83
009	- Servotronic	84-86
	1. Servotronic	84-85
	2. Servotronic	86
010	- Electric sliding sunroof with automatic selection	87-88
010		
	1. Electric sliding sunroof with automatic selection	87
	2. Electric sliding sunroof with automatic selection	88
011	- Electrically operated rear roller blind	89-90
	Electrically operated rear roller blind	89
	2. Electrically operated rear roller blind	90
012	- Heated lock cylinder	91-92
012	· · · · · · · · · · · · · · · · · · ·	
	1. Heated lock cylinder	91
	2. Heated lock cylinder	92
013	- Trailer coupling	93-97
	1. Trailer coupling	93-94
	2. Trailer coupling	95
	3. Trailer coupling	96
044	4. Trailer coupling	97
014	- Tailgate/bootlid	98-99
	1. Tailgate/bootlid	98
	2. Tailgate/bootlid	99
015	- Electric window lifter with comfort setting	100-105
0.0	Electric window lifter with comfort setting	100-101
	· · · · · · · · · · · · · · · · · · ·	100-101
	2. Electric window lifter with comfort setting	
	3. Electric window lifter with comfort setting	103
	Electric window lifter with comfort setting	104
	5. Electric window lifter	105
016	- Cruise control system	106-108
0.0	Cruise control system	106
	·	
	2. Cruise control system	107
	3. Cruise control system	108
017	- Electrically adjustable and heated exterior mirrors, with folding function	109
	1. Electrically adjustable and heated exterior mirrors, with folding function	109-110
	Electrically adjustable mirrors, heated with retraction function	111
019	- Air conditioner with automatic control. From May 1994	1-120
010	- All Conditioner with automatic Control. TOTH Way 1334	1-120

1. Air conditioner with automatic control, From May 1994	
······································	1-111
2. Air conditioner	112
3. Air conditioner	113
4. Air conditioner	114
5. Air conditioner	115
6. Air conditioner	116
7. Air conditioner	117
8. Air conditioner	118
9. Air conditioner, engine cooling 6-cylinder engine	119
10. Air conditioner, engine cooling 8-cylinder engine	120
019 - Heated seats	121
1. Heated seats	121-122
2. Heated seat, driver's seat	123
3. Heated seat, front passenger's seat	124
4. Heated seats, rear seat	125
020 - Air conditioner with auxiliary heater, From May 1994	1
1. Air conditioner with auxiliary heater, From May 1994	1-125
2. Air conditioner with auxiliary heater, From May 1994	126
	127
3. Air conditioner with auxiliary heater	
4. Air conditioner with auxiliary heater	128
5. Air conditioner with auxiliary heater	129
6. Air conditioner with auxiliary heater	130
7. Air conditioner with auxiliary heater	131
8. Air conditioner with auxiliary heater	132
9. Air conditioner with auxiliary heater	133
10. Air conditioner with auxiliary heater	134
11. Air conditioner with auxiliary heater, engine cooling 2.8 l engine, 128 kW, 6-cylinder	135
12. Air conditioner with auxiliary heater, engine cooling 4.2 I engine, 221 kW, 8-cylinder	136
13. Air conditioner with auxiliary heater, engine cooling 2.8 I engine, 128 kW, 6-cylinder	137
	138
14. Air conditioner with auxiliary heater, engine cooling 4.2 I engine, 221 kW, 8-cylinder	
021 - Electric seat adjustment, From May 1994	1
1. Electric seat adjustment, From May 1994	1-138
2. Electric seat adjustment	139
3. Electric seat adjustment	140
Electric seat adjustment	141
022 - Electric adjustment of seats and mirrors with memory, From May 1994	1
1. Electric adjustment of seats and mirrors with memory, From May 1994	1-141
Electric adjustment of seats and mirrors with memory	142
3. Electric adjustment of seats and mirrors with memory	143
4. Electric adjustment of seats and mirrors with memory	144
•	145
5. Electric adjustment of seats and mirrors with memory	145 146
5. Electric adjustment of seats and mirrors with memory6. Electric adjustment of seats and mirrors with memory	146
5. Electric adjustment of seats and mirrors with memory6. Electric adjustment of seats and mirrors with memory7. Electric adjustment of seats and mirrors with memory	146 147
5. Electric adjustment of seats and mirrors with memory6. Electric adjustment of seats and mirrors with memory7. Electric adjustment of seats and mirrors with memory8. Electric adjustment of seats and mirrors with memory	146 147 148
 5. Electric adjustment of seats and mirrors with memory 6. Electric adjustment of seats and mirrors with memory 7. Electric adjustment of seats and mirrors with memory 8. Electric adjustment of seats and mirrors with memory 9. Electric adjustment of seats and mirrors with memory 	146 147 148 149
 5. Electric adjustment of seats and mirrors with memory 6. Electric adjustment of seats and mirrors with memory 7. Electric adjustment of seats and mirrors with memory 8. Electric adjustment of seats and mirrors with memory 9. Electric adjustment of seats and mirrors with memory 10. Electric adjustment of seats and mirrors with memory 	146 147 148 149 150
 5. Electric adjustment of seats and mirrors with memory 6. Electric adjustment of seats and mirrors with memory 7. Electric adjustment of seats and mirrors with memory 8. Electric adjustment of seats and mirrors with memory 9. Electric adjustment of seats and mirrors with memory 10. Electric adjustment of seats and mirrors with memory 11. Electric adjustment of seats and mirrors with memory 	146 147 148 149
 5. Electric adjustment of seats and mirrors with memory 6. Electric adjustment of seats and mirrors with memory 7. Electric adjustment of seats and mirrors with memory 8. Electric adjustment of seats and mirrors with memory 9. Electric adjustment of seats and mirrors with memory 10. Electric adjustment of seats and mirrors with memory 	146 147 148 149 150
 5. Electric adjustment of seats and mirrors with memory 6. Electric adjustment of seats and mirrors with memory 7. Electric adjustment of seats and mirrors with memory 8. Electric adjustment of seats and mirrors with memory 9. Electric adjustment of seats and mirrors with memory 10. Electric adjustment of seats and mirrors with memory 11. Electric adjustment of seats and mirrors with memory 	146 147 148 149 150 151
 5. Electric adjustment of seats and mirrors with memory 6. Electric adjustment of seats and mirrors with memory 7. Electric adjustment of seats and mirrors with memory 8. Electric adjustment of seats and mirrors with memory 9. Electric adjustment of seats and mirrors with memory 10. Electric adjustment of seats and mirrors with memory 11. Electric adjustment of seats and mirrors with memory 023 - Headlights with gas discharge lamps, From May 1994 1. Headlights with gas discharge lamps, From May 1994 	146 147 148 149 150 151 1
 5. Electric adjustment of seats and mirrors with memory 6. Electric adjustment of seats and mirrors with memory 7. Electric adjustment of seats and mirrors with memory 8. Electric adjustment of seats and mirrors with memory 9. Electric adjustment of seats and mirrors with memory 10. Electric adjustment of seats and mirrors with memory 11. Electric adjustment of seats and mirrors with memory 12. Headlights with gas discharge lamps, From May 1994 13. Headlights with gas discharge lamps, From May 1994 14. Headlights with gas discharge lamps, From May 1994 15. Headlights with gas discharge lamps, From May 1994 16. Headlights with gas discharge lamps, From May 1994 17. Headlights with gas discharge lamps, From May 1994 	146 147 148 149 150 151 1 1-151
 5. Electric adjustment of seats and mirrors with memory 6. Electric adjustment of seats and mirrors with memory 7. Electric adjustment of seats and mirrors with memory 8. Electric adjustment of seats and mirrors with memory 9. Electric adjustment of seats and mirrors with memory 10. Electric adjustment of seats and mirrors with memory 11. Electric adjustment of seats and mirrors with memory 12. Headlights with gas discharge lamps, From May 1994 1. Headlights with gas discharge lamps, From May 1994 2. Headlights with gas discharge lamps, From May 1994 3. Headlights with gas discharge lamps 	146 147 148 149 150 151 1 1-151 152
 5. Electric adjustment of seats and mirrors with memory 6. Electric adjustment of seats and mirrors with memory 7. Electric adjustment of seats and mirrors with memory 8. Electric adjustment of seats and mirrors with memory 9. Electric adjustment of seats and mirrors with memory 10. Electric adjustment of seats and mirrors with memory 11. Electric adjustment of seats and mirrors with memory 12. Headlights with gas discharge lamps, From May 1994 1. Headlights with gas discharge lamps, From May 1994 2. Headlights with gas discharge lamps 3. Headlights with gas discharge lamps 4. Headlights with gas discharge lamps 	146 147 148 149 150 151 1 1-151 152 153 154
 5. Electric adjustment of seats and mirrors with memory 6. Electric adjustment of seats and mirrors with memory 7. Electric adjustment of seats and mirrors with memory 8. Electric adjustment of seats and mirrors with memory 9. Electric adjustment of seats and mirrors with memory 10. Electric adjustment of seats and mirrors with memory 11. Electric adjustment of seats and mirrors with memory 12. Headlights with gas discharge lamps, From May 1994 1. Headlights with gas discharge lamps, From May 1994 2. Headlights with gas discharge lamps 3. Headlights with gas discharge lamps 4. Headlights with gas discharge lamps 5. Headlights with gas discharge lamps 5. Headlights with gas discharge lamps 	146 147 148 149 150 151 1 1-151 152 153 154
 5. Electric adjustment of seats and mirrors with memory 6. Electric adjustment of seats and mirrors with memory 7. Electric adjustment of seats and mirrors with memory 8. Electric adjustment of seats and mirrors with memory 9. Electric adjustment of seats and mirrors with memory 10. Electric adjustment of seats and mirrors with memory 11. Electric adjustment of seats and mirrors with memory 023 - Headlights with gas discharge lamps, From May 1994 1. Headlights with gas discharge lamps, From May 1994 2. Headlights with gas discharge lamps, From May 1994 3. Headlights with gas discharge lamps 4. Headlights with gas discharge lamps 5. Headlights with gas discharge lamps 5. Headlights with gas discharge lamps 6. Daytime driving lights with fog lights, From May 1994 	146 147 148 149 150 151 1 1-151 152 153 154 155 1-160
 Electric adjustment of seats and mirrors with memory Headlights with gas discharge lamps, From May 1994 Headlights with gas discharge lamps, From May 1994 Headlights with gas discharge lamps Headlights with gas discharge lamps Headlights with gas discharge lamps Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights, From May 1994 	146 147 148 149 150 151 1 1-151 152 153 154 155 1-160 1-155
 Electric adjustment of seats and mirrors with memory Headlights with gas discharge lamps, From May 1994 Headlights with gas discharge lamps, From May 1994 Headlights with gas discharge lamps Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights, From May 1994 	146 147 148 149 150 151 1 1-151 152 153 154 155 1-160 1-155
 Electric adjustment of seats and mirrors with memory Headlights with gas discharge lamps, From May 1994 Headlights with gas discharge lamps, From May 1994 Headlights with gas discharge lamps, From May 1994 Headlights with gas discharge lamps Headlights with gas discharge lamps Headlights with gas discharge lamps Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights, From May 1994 	146 147 148 149 150 151 1 1-151 152 153 154 155 1-160 1-155 156
 Electric adjustment of seats and mirrors with memory Headlights with gas discharge lamps, From May 1994 Headlights with gas discharge lamps, From May 1994 Headlights with gas discharge lamps, From May 1994 Headlights with gas discharge lamps Headlights with gas discharge lamps Headlights with gas discharge lamps Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights Daytime driving lights with fog lights 	146 147 148 149 150 151 1 1-151 152 153 154 155 1-160 1-155 156 157
 Electric adjustment of seats and mirrors with memory Headlights with gas discharge lamps, From May 1994 Headlights with gas discharge lamps, From May 1994 Headlights with gas discharge lamps Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights 	146 147 148 149 150 151 1 1-151 152 153 154 155 1-160 1-155 156 157 158
 Electric adjustment of seats and mirrors with memory Headlights with gas discharge lamps, From May 1994 Headlights with gas discharge lamps, From May 1994 Headlights with gas discharge lamps Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights 	146 147 148 149 150 151 1 1-151 152 153 154 155 1-160 1-155 156 157 158 159
 Electric adjustment of seats and mirrors with memory Headlights with gas discharge lamps, From May 1994 Headlights with gas discharge lamps, From May 1994 Headlights with gas discharge lamps Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights 	146 147 148 149 150 151 1 1-151 152 153 154 155 1-160 1-155 156 157 158
 Electric adjustment of seats and mirrors with memory Headlights with gas discharge lamps, From May 1994 Headlights with gas discharge lamps, From May 1994 Headlights with gas discharge lamps Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights 	146 147 148 149 150 151 1 1-151 152 153 154 155 1-160 1-155 156 157 158 159
 Electric adjustment of seats and mirrors with memory Headlights with gas discharge lamps, From May 1994 Headlights with gas discharge lamps, From May 1994 Headlights with gas discharge lamps Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights Radio Bose® sound system 	146 147 148 149 150 151 1 1-151 152 153 154 155 1-160 1-155 156 157 158 159 160
 Electric adjustment of seats and mirrors with memory Headlights with gas discharge lamps, From May 1994 Headlights with gas discharge lamps, From May 1994 Headlights with gas discharge lamps, From May 1994 Headlights with gas discharge lamps Headlights with gas discharge lamps Headlights with gas discharge lamps Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights, From May 1994 Daytime driving lights with fog lights Radio Bose® sound system Radio Bose® sound system 	146 147 148 149 150 151 1 1-151 152 153 154 155 1-160 1-155 156 157 158 159 160 161-165
5. Electric adjustment of seats and mirrors with memory 6. Electric adjustment of seats and mirrors with memory 7. Electric adjustment of seats and mirrors with memory 8. Electric adjustment of seats and mirrors with memory 9. Electric adjustment of seats and mirrors with memory 10. Electric adjustment of seats and mirrors with memory 11. Electric adjustment of seats and mirrors with memory 22. Headlights with gas discharge lamps, From May 1994 1. Headlights with gas discharge lamps, From May 1994 2. Headlights with gas discharge lamps 4. Headlights with gas discharge lamps 5. Headlights with gas discharge lamps 6. Headlights with gas discharge lamps 7. Headlights with gas discharge lamps 8. Headlights with fog lights, From May 1994 9. Daytime driving lights with fog lights, From May 1994 9. Daytime driving lights with fog lights, From May 1994 9. Daytime driving lights with fog lights 9. Radio Bose® sound system 9. Radio Bose® sound system 9. Radio Bose) sound system 9. Radio Bose) sound system 9. Radio Bose) sound system	146 147 148 149 150 151 1 1-151 152 153 154 155 1-160 1-155 156 157 158 159 160 161-165 161-162
5. Electric adjustment of seats and mirrors with memory 6. Electric adjustment of seats and mirrors with memory 7. Electric adjustment of seats and mirrors with memory 8. Electric adjustment of seats and mirrors with memory 9. Electric adjustment of seats and mirrors with memory 10. Electric adjustment of seats and mirrors with memory 11. Electric adjustment of seats and mirrors with memory 123 - Headlights with gas discharge lamps, From May 1994 1. Headlights with gas discharge lamps, From May 1994 2. Headlights with gas discharge lamps, From May 1994 3. Headlights with gas discharge lamps 4. Headlights with gas discharge lamps 5. Headlights with gas discharge lamps 6. Daytime driving lights with fog lights, From May 1994 1. Daytime driving lights with fog lights, From May 1994 2. Daytime driving lights with fog lights, From May 1994 3. Daytime driving lights with fog lights 4. Daytime driving lights with fog lights 5. Daytime driving lights with fog lights 6. Daytime driving lights with fog lights 7. Radio Bose® sound system 7. Radio Bose® sound system 7. Radio Bose® sound system 8. Radio Bose® sound system 9. Radio Bose® sound system	146 147 148 149 150 151 1 1-151 152 153 154 155 1-160 1-155 156 157 158 159 160 161-165 161-162

Radio stereo system with passive loudspeakers	166-167
2. Radio stereo system with passive loudspeakers	168
3. Radio stereo system with passive loudspeakers	169
027 - Telephone, AEG	170-173
1. Telephone, AEG	170-171
2. Telephone, AEG	172
3. Telephone, AEG	173
028 - Electrically operated rear roller blind	174-175
Electrically operated rear roller blind Electrically operated rear roller blind	174-173
·	175
Electrically operated rear roller blind	
029 - Heated lock cylinder	176-177
Heated lock cylinder	176
2. Heated lock cylinder	177
030 - Electric window lifter with comfort setting	178-183
Electric window lifter with comfort setting	178-179
Electric window lifter with comfort setting	180
Electric window lifter with comfort setting	181
Electric window lifter with comfort setting	182
5. Electric window lifter with comfort setting	183
031 - Cruise control system	184-186
1. Cruise control system	184
2. Cruise control system	185
3. Cruise control system	186
032 - Anti-locking brake system	187-192
1. Anti-locking brake system	187-188
Anti-locking brake system Anti-locking brake system	189
· · · · · · · · · · · · · · · · · · ·	190
3. Anti-locking brake system	
4. Anti-locking brake system	191
5. Anti-locking brake system	192
033 - Heated seats	193-197
1. Heated seats	193-194
2. Heated seat, driver's seat	195
3. Heated seat, front passenger's seat	196
4. Heated seats, rear seat	197
034 - Electric seat adjustment	198
Electric seat adjustment	198-199
2. Electric seat adjustment	200
3. Electric seat adjustment	201
4. Electric seat adjustment	202
035 - Electric seat, mirror, steering column and belt height adjustment with memory function, from	1
July 1994	
Electric seat, mirror, steering column and belt height adjustment with memory function, from July	1-202
1994	
Electric seat, mirror, steering column and belt height adjustment with memory function	203
Electric seat, mirror, steering column and belt height adjustment with memory function	204
4. Electric seat, mirror, steering column and belt height adjustment with memory function 4. Electric seat, mirror, steering column and belt height adjustment with memory function	205
5. Electric seat, mirror, steering column and belt height adjustment with memory function	
	206
6. Electric seat, mirror, steering column and belt height adjustment with memory function	207
7. Electric seat, mirror, steering column and belt height adjustment with memory function	208
8. Electric seat, mirror, steering column and belt height adjustment with memory function	209
Electric seat, mirror, steering column and belt height adjustment with memory function	210
10. Electric seat, mirror, steering column and belt height adjustment with memory function	211
11. Electric seat, mirror, steering column and belt height adjustment with memory function	212
036 - Audi A8 4.2 I fuel injection engine (221 kW - multi-point injection 8-cylinder) engine code	1
ABZ, from July 1994	
1. Audi A8 4.2 I fuel injection engine (221 kW - multi-point injection 8-cylinder) engine code ABZ,	1
from July 1994	
2. Audi A8 4.2 I fuel injection engine (221 kW - multi-point injection 8-cylinder) engine code ABZ,	1
from July 1994	
3. Audi A8 4.2 I fuel injection engine (221 kW - multi-point injection 8-cylinder) engine code ABZ,	1-212
from July 1994	-
Motronic control unit, ignition coils, injectors	213
Motronic control unit, ignition coils Motronic control unit, final output stage for ignition coils	214
6. Motronic control unit, final output stage for ignition coils	215
7. Motronic control unit, throttle valve potentionneter, all mass meter 7. Motronic control unit, Hall senders, engine speed sender, ignition coil fuses	216
8. Motronic control unit, fiall senders, engine speed sender, ignition con ruses	217
O. MOROTIO CONTROL WHILE INCLUDING TOTAY. MITHEUN COMO	411

9. Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda	218
probes with heating	219
 Automatic gearbox control unit, Motronic control unit, lambda probe 2, immobilizer Automatic gearbox control unit, solenoid valves, kick-down switch 	219
12. Multi-function switch, automatic gearbox control unit, ABS with EDL control unit	221
13. Engine cooling	222
14. Reversing lights, Tiptronic switch, selector lever lock switch	223
15. Dash panel insert, fuel gauge, fuel pump, coolant and oil pressure control	224
16. Dash panel insert, rev. counter, gear indicator, warning lamps	225
17. Dash panel insert, digital clock, brake pad/lining wear indicator	226
18. Dash panel insert, main beam warning lamp, doors closed warning lamp	227
19. Dash panel insert, coolant temperature gauge, speedometer, warning lamps	228
20. Ignition/starter switch, lighting switch, X contact relief relay	229
21. Fuse carrier 1, bulb monitoring device, headlight, side light, turn signals	230
22. Fuse carrier 1, bulb monitoring device, tail light, brake lights, number plate light	231
23. Turn signal switch, hazard warning light switch, hazard warning light relay	232
24. Front fog lights and rear fog lights	233
25. Intermittent wiper switch, windscreen wiper and washer system, headlight washer system	234 235
 Heated rear window, heated washer jets, servotronic control unit Horn, fresh air blower, Thermotronic control unit 	236
28. Central locking, luggage compartment release switch	237
29. Central locking, luggage compartment release switch	238
30. Anti-theft alarm system control unit, infra-red sensor	239
31. Central locking, door contact switch, interior monitoring control unit, ultra-sonic sensors	240
32. Interior light, reading light, rear left, reading light, rear right	241
33. Footwell lights, entry lights, entry and footwell lighting relay	242
34. Door contact switch, luggage compartment lights, illuminated make-up mirrors	243
35. Cigarette lighter, rear cigarette lighter	244
36. Illumination for dash panel and rear vents, glove box light	245
37. Headlight range control	246
38. Illumination for dash panel and rear vents, glove box light	247
39. Headlight range control	248
037 - Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code	1
AAH, from July 1994	
1. Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH,	1
from July 1994	4 040
Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, from July 1994	1-248
3. Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH,	249
from July 1994	249
4. Earth connections	250
5. Battery, starter, alternator, starter inhibitor and reversing light relay, reversing light switch	251
6. Multi-point injection control unit, ignition system, injectors, Hall sender, fuses	252
7. Multi-point injection control unit, throttle valve potentiometer, air mass meter, final output	253
stage for ignition coils	
8. Multi-point injection control unit, firing point sender, engine speed and coolant temperature	254
9. Multi-point injection control unit, lambda probe heater, immobilizer control unit and reading	255
coil	
10. Multi-point injection control unit, diagnostic connector, fuel pump relay	256
11. Engine cooling	257
12. Automatic gearbox control unit, selector lever lock control unit, brake light switch	258
13. Automatic gearbox control unit, gear speed sender, kick-down switch, solenoid valve, ABS with	259
EDL control unit	260
 Automatic gearbox control unit, multi-function switch Dash panel insert, fuel gauge sender, fuel pump, coolant and oil pressure control 	261
16. Dash panel insert, warning lamps, handbrake warning switch, gear indicator	262
17. Dash panel insert, digital clock, brake pad/lining wear indicator	263
18. Dash panel insert, warning lamps	264
19. Dash panel insert, warning lamps, speedometer sender	265
038 - Headlights with gas discharge lamps, from July 1994	1
1. Headlights with gas discharge lamps, from July 1994	1-265
2. Headlights with gas discharge lamps, from July 1994	266
3. Headlights with gas discharge lamps	267
4. Headlights with gas discharge lamps	268
5. Headlights with gas discharge lamps	269
039 - Davtime driving lights with fog lights. from July 1994	1-274

1. Daytime driving lights with fog lights, from July 1994 2. Daytime driving lights with fog lights 4. Daytime driving lights with fog lights 5. Daytime driving lights with fog lights 6. Paytime driving lights 6. Paytim	1-269 270 271 272 273 274 275 275-276 277 278 279 280 1 1-280 281 282 283 284 285 286 287 288 289 1-302 1-289 290 291 292 293 294 295 296 297 298 299 300 301 302 303-308 303-304 305 306 307 308 309-313 311 312 313 314 314-315 316
 Rear head restraint adjustment switch, rear head restraint adjustment switch, seat adjustment fuse Adjustable front passenger seat switch, adjustable rear seat switch, limit switch 	316 317
 4. Electric seat and head restraint adjustment rear seat, driver's side 5. Electric seat and head restraint adjustment rear seat, front passenger's side 6. Lumbar support adjustment, rear seats 046 - Audi A8 4.2 I fuel injection engine (221 kW - Motronic - 8-cylinder) engine code ABZ, Model 	318 319 320 1
year 1996 1. Audi A8 4.2 I fuel injection engine (221 kW - Motronic - 8-cylinder) engine code ABZ, Model year 1996	1
2. Audi A8 4.2 l fuel injection engine (221 kW - Motronic - 8-cylinder) engine code ABZ, Model year 1996	1
3. Audi A8 4.2 l fuel injection engine (221 kW - Motronic - 8-cylinder) engine code ABZ, Model year 1996	1-320
4. Earth connections	321

Battery, starter, alternator, starter inhibitor and reversing light relay	322
6. Motronic control unit, ignition coils, injectors	323
7. Motronic control unit, final output stage for ignition coils	324
8. Motronic control unit, throttle valve potentiometer, air mass meter	325
9. Motronic control unit, Hall senders, engine speed sender, ignition coil fuses	326
10. Motronic control unit, fuel pump relay, ignition coils	327
11. Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda	328
······································	320
probes with heating	200
12. Motronic control unit, automatic gearbox control unit, lambda probe 2, immobilizer	329
13. Engine cooling	330
14. Dash panel insert, fuel gauge, fuel pump, coolant and oil pressure control	331
15. Dash panel insert, rev. counter, gear indicator, warning lamps	332
16. Dash panel insert, digital clock, brake pad/lining wear indicator	333
17. Dash panel insert, main beam warning lamp, doors closed warning lamp	334
18. Dash panel insert, coolant temperature gauge, speedometer, warning lamps	335
19. Ignition/starter switch, lighting switch, X contact relief relay	336
20. Fuse carrier 1, bulb monitoring device, headlight, side light, turn signals	337
21. Fuse carrier 1, bulb monitoring device, tail light, brake lights, number plate light, high level	338
brake	000
22. Headlight range control, rear fog light	339
23. Turn signal switch, hazard warning light switch, hazard warning light relay	340
24. Intermittent wiper switch, windscreen wiper and washer system, headlight washer system	341
25. Heated rear window, heated washer jets, reversing lights	342
26. Horn, fresh air blower, Thermotronic control unit	343
27. Interior lights, reading light, rear left, reading light, rear right	344
28. Footwell lights, entry lights, entry and footwell lighting relay, door warning lamp	345
29. Door contact switch, luggage compartment light, illuminated make-up mirrors	346
30. Cigarette lighter, rear cigarette lighter, rear window lifter isolation switch	347
31. Illumination for dash panel and rear vents, glove box light	348
047 - Audi A8 3.7 I fuel injection engine (170 kW - Motronic - 8-cylinder) engine code AEW, Model	1
year 1996	
1. Audi A8 3.7 I fuel injection engine (170 kW - Motronic - 8-cylinder) engine code AEW, Model year	1
1996	·
2. Audi A8 3.7 I fuel injection engine (170 kW - Motronic - 8-cylinder) engine code AEW, Model year	1-348
	1 0 10
1996	
3. Battery, starter, alternator, starter inhibitor relay	349
3. Battery, starter, alternator, starter inhibitor relay4. Motronic control unit, ignition coils, injectors, ignition coil fuses	349 350
3. Battery, starter, alternator, starter inhibitor relay4. Motronic control unit, ignition coils, injectors, ignition coil fuses5. Motronic control unit, final output stage for ignition coils	349 350 351
 3. Battery, starter, alternator, starter inhibitor relay 4. Motronic control unit, ignition coils, injectors, ignition coil fuses 5. Motronic control unit, final output stage for ignition coils 6. Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors 	349 350 351 352
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse 	349 350 351 352 353
 3. Battery, starter, alternator, starter inhibitor relay 4. Motronic control unit, ignition coils, injectors, ignition coil fuses 5. Motronic control unit, final output stage for ignition coils 6. Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors 	349 350 351 352 353 354
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse 	349 350 351 352 353
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils 	349 350 351 352 353 354
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda probes with heating 	349 350 351 352 353 354 355
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda probes with heating Motronic control unit, lambda probes 2, immobilizer 	349 350 351 352 353 354 355
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda probes with heating Motronic control unit, lambda probes 2, immobilizer Engine cooling 	349 350 351 352 353 354 355 356 357
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda probes with heating Motronic control unit, lambda probes 2, immobilizer Engine cooling Dash panel insert, fuel gauge, fuel pump, coolant and oil pressure control 	349 350 351 352 353 354 355 356 357 358
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda probes with heating Motronic control unit, lambda probes 2, immobilizer Engine cooling Dash panel insert, fuel gauge, fuel pump, coolant and oil pressure control Dash panel insert, rev. counter, gear indicator, warning lamps 	349 350 351 352 353 354 355 356 357 358 359
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda probes with heating Motronic control unit, lambda probes 2, immobilizer Engine cooling Dash panel insert, fuel gauge, fuel pump, coolant and oil pressure control Dash panel insert, rev. counter, gear indicator, warning lamps Dash panel insert, speedometer 	349 350 351 352 353 354 355 356 357 358 359 360
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda probes with heating Motronic control unit, lambda probes 2, immobilizer Engine cooling Dash panel insert, fuel gauge, fuel pump, coolant and oil pressure control Dash panel insert, rev. counter, gear indicator, warning lamps Dash panel insert, speedometer Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code 	349 350 351 352 353 354 355 356 357 358 359
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda probes with heating Motronic control unit, lambda probes 2, immobilizer Engine cooling Dash panel insert, fuel gauge, fuel pump, coolant and oil pressure control Dash panel insert, rev. counter, gear indicator, warning lamps Dash panel insert, speedometer Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 	349 350 351 352 353 354 355 356 357 358 359 360 1
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda probes with heating Motronic control unit, lambda probes 2, immobilizer Engine cooling Dash panel insert, fuel gauge, fuel pump, coolant and oil pressure control Dash panel insert, rev. counter, gear indicator, warning lamps Dash panel insert, speedometer Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, 	349 350 351 352 353 354 355 356 357 358 359 360
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda probes with heating Motronic control unit, lambda probes 2, immobilizer Engine cooling Dash panel insert, fuel gauge, fuel pump, coolant and oil pressure control Dash panel insert, rev. counter, gear indicator, warning lamps Dash panel insert, speedometer Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 	349 350 351 352 353 354 355 356 357 358 359 360 1
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda probes with heating Motronic control unit, lambda probes 2, immobilizer Engine cooling Dash panel insert, fuel gauge, fuel pump, coolant and oil pressure control Dash panel insert, rev. counter, gear indicator, warning lamps Dash panel insert, speedometer Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, 	349 350 351 352 353 354 355 356 357 358 359 360 1
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda probes with heating Motronic control unit, lambda probes 2, immobilizer Engine cooling Dash panel insert, fuel gauge, fuel pump, coolant and oil pressure control Dash panel insert, rev. counter, gear indicator, warning lamps Dash panel insert, speedometer Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 	349 350 351 352 353 354 355 356 357 358 359 360 1
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda probes with heating Motronic control unit, lambda probes 2, immobilizer Engine cooling Dash panel insert, fuel gauge, fuel pump, coolant and oil pressure control Dash panel insert, rev. counter, gear indicator, warning lamps Dash panel insert, speedometer Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, 	349 350 351 352 353 354 355 356 357 358 359 360 1
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda probes with heating Motronic control unit, lambda probes 2, immobilizer Engine cooling Dash panel insert, fuel gauge, fuel pump, coolant and oil pressure control Dash panel insert, rev. counter, gear indicator, warning lamps Dash panel insert, speedometer Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 	349 350 351 352 353 354 355 356 357 358 359 360 1
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda probes with heating Motronic control unit, lambda probes 2, immobilizer Engine cooling Dash panel insert, fuel gauge, fuel pump, coolant and oil pressure control Dash panel insert, rev. counter, gear indicator, warning lamps Dash panel insert, speedometer Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 	349 350 351 352 353 354 355 356 357 358 359 360 1
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda probes with heating Motronic control unit, lambda probes 2, immobilizer Engine cooling Dash panel insert, fuel gauge, fuel pump, coolant and oil pressure control Dash panel insert, rev. counter, gear indicator, warning lamps Dash panel insert, speedometer Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Earth connections 	349 350 351 352 353 354 355 356 357 358 359 360 1 1 1 1-360 361
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda probes with heating Motronic control unit, lambda probes 2, immobilizer Engine cooling Dash panel insert, fuel gauge, fuel pump, coolant and oil pressure control Dash panel insert, rev. counter, gear indicator, warning lamps Dash panel insert, speedometer Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Earth connections Battery, starter, alternator, starter inhibitor and reversing light relay, reversing light switch 	349 350 351 352 353 354 355 356 357 358 359 360 1 1 1 1-360 361
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda probes with heating Motronic control unit, lambda probes 2, immobilizer Engine cooling Dash panel insert, fuel gauge, fuel pump, coolant and oil pressure control Dash panel insert, rev. counter, gear indicator, warning lamps Dash panel insert, speedometer Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Earth connections Battery, starter, alternator, starter inhibitor and reversing light relay, reversing light switch Multi-point injection control unit, ignition system, injectors, Hall sender, fuses 	349 350 351 352 353 354 355 356 357 358 359 360 1 1 1 1-360 361 362 363 364
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, thall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda probes with heating Motronic control unit, lambda probes 2, immobilizer Engine cooling Dash panel insert, fuel gauge, fuel pump, coolant and oil pressure control Dash panel insert, rev. counter, gear indicator, warning lamps Dash panel insert, speedometer Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Earth connections Battery, starter, alternator, starter inhibitor and reversing light relay, reversing light switch Multi-point injection control unit, ignition system, injectors, Hall sender, fuses Multi-point injection control unit, throttle valve potentiometer, air mass meter, final output 	349 350 351 352 353 354 355 356 357 358 359 360 1 1 1 1-360 361
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda probes with heating Motronic control unit, lambda probes 2, immobilizer Engine cooling Dash panel insert, fuel gauge, fuel pump, coolant and oil pressure control Dash panel insert, rev. counter, gear indicator, warning lamps Dash panel insert, speedometer Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Earth connections Battery, starter, alternator, starter inhibitor and reversing light relay, reversing light switch Multi-point injection control unit, ignition system, injectors, Hall sender, fuses Multi-point injection control unit, ignition system, injectors, Hall sender, fuses Multi-point injection control unit, throttle valve potentiometer, air mass meter, final output stage for ignition coils 	349 350 351 352 353 354 355 356 357 358 359 360 1 1 1-360 361 362 363 364 365
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda probes with heating Motronic control unit, lambda probes 2, immobilizer Engine cooling Dash panel insert, fuel gauge, fuel pump, coolant and oil pressure control Dash panel insert, rev. counter, gear indicator, warning lamps Dash panel insert, speedometer Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Earth connections Battery, starter, alternator, starter inhibitor and reversing light relay, reversing light switch Multi-point injection control unit, ignition system, injectors, Hall sender, fuses Multi-point injection control unit, throttle valve potentiometer, air mass meter, final output stage for ignition coils Multi-point injection control unit, firing point sender, engine speed and coolant temperature 	349 350 351 352 353 354 355 356 357 358 359 360 1 1 1-360 361 362 363 364 365
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda probes with heating Motronic control unit, lambda probes 2, immobilizer Engine cooling Dash panel insert, fuel gauge, fuel pump, coolant and oil pressure control Dash panel insert, rev. counter, gear indicator, warning lamps Dash panel insert, speedometer Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Earth connections Battery, starter, alternator, starter inhibitor and reversing light relay, reversing light switch Multi-point injection control unit, ignition system, injectors, Hall sender, fuses Multi-point injection control unit, throttle valve potentiometer, air mass meter, final output stage for ignition coils Multi-point injection control unit, lignition system, impectors, engine speed and coolant temperature Multi-point injection control unit, lambda probe heater, immobilizer control unit and reading 	349 350 351 352 353 354 355 356 357 358 359 360 1 1 1-360 361 362 363 364 365
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda probes with heating Motronic control unit, lambda probes 2, immobilizer Engine cooling Dash panel insert, fuel gauge, fuel pump, coolant and oil pressure control Dash panel insert, rev. counter, gear indicator, warning lamps Dash panel insert, speedometer Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Earth connections Battery, starter, alternator, starter inhibitor and reversing light relay, reversing light switch Multi-point injection control unit, ignition system, injectors, Hall sender, fuses Multi-point injection control unit, throttle valve potentiometer, air mass meter, final output stage for ignition coils Multi-point injection control unit, lambda probe heater, immobilizer control unit and reading coil 	349 350 351 352 353 354 355 356 357 358 359 360 1 1 1 1-360 361 362 363 364 365 366 367
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda probes with heating Motronic control unit, lambda probes 2, immobilizer Engine cooling Dash panel insert, fuel gauge, fuel pump, coolant and oil pressure control Dash panel insert, rev. counter, gear indicator, warning lamps Dash panel insert, speedometer Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Earth connections Battery, starter, alternator, starter inhibitor and reversing light relay, reversing light switch Multi-point injection control unit, ignition system, injectors, Hall sender, fuses Multi-point injection control unit, firing point sender, engine speed and coolant temperature Multi-point injection control unit, lambda probe heater, immobilizer control unit and reading coil Multi-point injection co	349 350 351 352 353 354 355 356 357 358 359 360 1 1 1 1-360 361 362 363 364 365 366 367
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, ignition coils, injectors, ignition coil fuses Motronic control unit, final output stage for ignition coils Motronic control unit, throttle valve potentiometer, air mass meter, knock sensors Motronic control unit, Hall senders, engine speed sender, control element fuse Motronic control unit, fuel pump relay, ignition coils Motronic control unit, Motronic current supply relay, ignition coils for output stages, lambda probes with heating Motronic control unit, lambda probes 2, immobilizer Engine cooling Dash panel insert, fuel gauge, fuel pump, coolant and oil pressure control Dash panel insert, rev. counter, gear indicator, warning lamps Dash panel insert, speedometer Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Audi A8 2.8 I fuel injection engine (128 kW - multi-point injection 6-cylinder) engine code AAH, Model year 1996 Earth connections Battery, starter, alternator, starter inhibitor and reversing light relay, reversing light switch Multi-point injection control unit, ignition system, injectors, Hall sender, fuses Multi-point injection control unit, throttle valve potentiometer, air mass meter, final output stage for ignition coils Multi-point injection control unit, lambda probe heater, immobilizer control unit and reading coil 	349 350 351 352 353 354 355 356 357 358 359 360 1 1 1 1-360 361 362 363 364 365 366 367

12. Dash panel insert, fuel gauge sender, fuel pump, coolant and oil pressure control	370
13. Dash panel insert, warning lamps, handbrake warning switch, gear indicator, selector lever	371
position indicator, coolant temperature gauge	
14. Dash panel insert, digital clock, diagnosis connection, warning lamps, speedometer sender	372
049 - Automatic gearbox (018) 8-cylinder-engines, Model year 1996	1
1. Automatic gearbox (018) 8-cylinder-engines, Model year 1996	1-372
2. Automatic gearbox (018) 8-cylinder-engines, Model year 1996	373
3. Automatic gearbox control unit, solenoid valves, kick-down switch, Motronic control unit	374
4. Multi-function switch, automatic gearbox control unit, ABS and EDL control unit	375
5. Reversing lights, Tiptronic switch, selector lever lock switch	376
6. Brake light switch, speedometer, speedometer sender	377
	1-382
050 - Automatic gearbox (01F, 01K) 6-cylinder-engines, Model year 1996	
1. Automatic gearbox (01F, 01K) 6-cylinder-engines, Model year 1996	1-377
2. Automatic gearbox (01F, 01K) 6-cylinder-engines, Model year 1996	378
3. Automatic gearbox control unit, gearbox speed sender, kick-down switch, solenoid valve, diagnosis	379
connection	
4. Automatic gearbox control unit, multi-point injection control unit, ABS with EDL control unit	380
Automatic gearbox control unit, multi-function switch	381
6. Automatic gearbox control unit, selector lever lock control unit, brake light switch	382
051 - Automatic gearbox (01V) 8-cylinder-engines, Model year 1996	383-388
1. Automatic gearbox (01V) 8-cylinder-engines, Model year 1996	383
2. Automatic gearbox (01V) 8-cylinder-engines, Model year 1996	384
3. Automatic gearbox control unit, solenoid valves, kick-down switch	385
4. Automatic gearbox control unit, multi-function switch	386
5. Automatic gearbox control unit, Tiptronic switch	387
6. Brake light switch, speedometer, speedometer sender, reversing light	388
052 - Central locking with remote control and anti-theft alarm system with interior monitoring,	389-394
Model year 1996	000 004
Central locking with remote control and anti-theft alarm system with interior monitoring, Model	389
year 1996	303
	390
2. Central locking switch	
3. Positioners for central locking front	391
4. Infra-red sensors, anti-theft alarm system horn	392
5. Anti-theft alarm system contact switch	393
6. Interior monitor, ultra-sonic sensors control unit, door contact switch	394
053 - Air conditioner with automatic control, Model year 1996	395-404
Air conditioner with automatic control, Model year 1996	395
2. Air conditioner with automatic control, Model year 1996	396
3. Air conditioner	397
4. Air conditioner	398
5. Air conditioner	399
6. Air conditioner	400
7. Air conditioner	401
8. Air conditioner	402
9. Air conditioner	403
10. Air conditioner, engine cooling 6 and 8-cylinder engine	404
054 - Air conditioner with auxiliary heater, Model year 1996	405-417
1. Air conditioner with auxiliary heater, Model year 1996	405
2. Air conditioner with auxiliary heater, Model year 1996	406
3. Air conditioner with auxiliary heater	407
Air conditioner with auxiliary heater	408
5. Air conditioner with auxiliary heater	409
6. Air conditioner with auxiliary heater	410
7. Air conditioner with auxiliary heater	411
8. Air conditioner with auxiliary heater	412
9. Air conditioner with auxiliary heater	413
10. Air conditioner with auxiliary heater	414
11. Air conditioner with auxiliary heater	415
12. Air conditioner with auxiliary heater	416
13. Air conditioner with auxiliary heater, engine cooling 6 and 8-cylinder engine	417
055 - Anti-locking brake system	418-423
1. Anti-locking brake system	418-419
2. Anti-locking brake system	420
3. Anti-locking brake system	421
4. Anti-locking brake system	422
5. Anti-locking brake system	423
·	

056 - Airbag seats driver's and front passenger	424-425
Airbag seats driver's and front passenger	424
Airbag seats driver's and front passenger's side	425
057 - Trailer coupling, Model year 1996	426-430
1. Trailer coupling, Model year 1996	426
2. Trailer coupling	427
3. Trailer coupling	428
4. Trailer coupling	429
5. Trailer coupling	430
058 - Electrically adjustable and heated exterior mirrors, with folding function	431-433
Electrically adjustable and heated exterior mirrors, with folding function	431-432
2. Electrically adjustable mirrors, heated with retraction function	433
059 - Electric sliding sunroof with automatic selection	434-436
Electric sliding sunroof with automatic selection	434-435
Electric sliding sunroof with automatic selection	436
060 - Electric seat adjustment rear seats	437-443
Electric seat adjustment rear seats Rear head reatraint adjustment quitable seat adjustment five.	437-438
Rear head restraint adjustment switch, seat adjustment fuse Adjustable front passanger's aget switch, edjustable rear aget switch, right, rear window lifter.	439
 Adjustable front passenger's seat switch, adjustable rear seat switch, right, rear window lifter isolation switch 	440
	441
Electric seat and head restraint adjustment rear seat, left Electric seat and head restraint adjustment rear seat, right	441
6. Lumbar support adjustment, rear seats	442
	443 444-449
061 - Radio gamma, delta sound system, radio-Bose sound system with and without CD changer	444-449
Radio gamma, delta sound system, radio-Bose sound system with and without CD changer Radio gamma, delta sound system, radio Rose sound system with and without CD changer.	444-445
2. Radio gamma, delta sound system, radio-Bose sound system with and without CD changer	440
 Radio gamma, delta sound system, radio-Bose sound system with and without CD changer Radio gamma, delta sound system, radio-Bose sound system with and without CD changer 	447
Nadio gamma, delta sound system, radio-Bose sound system with and without CD changer Radio gamma, delta sound system, radio-Bose sound system with and without CD changer	449
062 - Heated lock cylinder	450-451
1. Heated lock cylinder	450-451
Heated lock cylinder 2. Heated lock cylinder	450 451
063 - Electrically operated rear roller blind	452-453
Electrically operated rear roller blind	452-455
Electrically operated rear roller blind Electrically operated rear roller blind	453
064 - Electric window lifter, Model year 1996	454-460
Electric window lifter, Model year 1996	454
2. Electric window lifter, Model year 1996	455
3. Electric window lifter, control unit for window lifter/vent windows and sliding sunroof,	456
isolation switch	400
4. Electric window lifter, control unit for window lifter/vent windows and sliding sunroof	457
Electric window lifter - front left, automatic sliding sunroof close relay	458
6. Window lifter - front right and rear left	459
7. Rear right electric window lifter	460
065 - Cruise control system	461-463
1. Cruise control system	461
2. Cruise control system	462
3. Cruise control system	463
066 - Servotronic	464-466
1. Servotronic	464-465
2. Servotronic	466
067 - Telephone, AEG	467-470
1. Telephone, AEG	467-468
2. Telephone, AEG	469
3. Telephone, AEG	470
068 - Radio stereo system with passive loudspeakers	471-474
Radio stereo system with passive loudspeakers	471-472
Radio stereo system with passive loudspeakers	473
3. Radio stereo system with passive loudspeakers	474
069 - Tailgate/bootlid	475-476
1. Tailgate/bootlid	475
2. Tailgate/bootlid	476
070 - Daytime driving lights with fog lights, Model year 1996	477-482
1. Daytime driving lights with fog lights, Model year 1996	477
2. Daytime driving lights with fog lights, Model year 1996	478
3. Davtime driving lights with fog lights	479

Daytime driving lights with fog lights	480
5. Daytime driving lights with fog lights	481
6. Daytime driving lights with fog lights	482
071 - Headlights with gas discharge lamps, Model year 1996 1. Headlights with gas discharge lamps, Model year 1996	483-487 483
2. Headlights with gas discharge lamps, Model year 1996	484
3. Headlights with gas discharge lamps	485
4. Headlights with gas discharge lamps	486
5. Headlights with gas discharge lamps	487
072 - Heated front seats and rear seat 1. Heated front seats and rear seat	488-492 488-489
2. Heated seat, driver's seat	490
3. Heated seat, front passenger's seat	491
4. Heated seats, rear seat	492
073 - Electric seat, mirror, steering column and belt height adjustment with memory function, Model	493-503
year 1996 1. Electric seat, mirror, steering column and belt height adjustment with memory function, Model	493
year 1996	100
2. Electric seat, mirror, steering column and belt height adjustment with memory function, memory	494
operating unit	405
Electric seat, mirror, steering column and belt height adjustment with memory function, mirror adjustment on driver's side	495
4. Electric seat, mirror, steering column and belt height adjustment with memory function, mirror	496
adjustment on front passenger's side	.00
5. Electric seat, mirror, steering column and belt height adjustment with memory function, steering	497
column adjustment	400
Electric seat, mirror, steering column and belt height adjustment with memory function, belt height adjustment, left	498
7. Electric seat, mirror, steering column and belt height adjustment with memory function, backrest	499
adjustment, left	
8. Electric seat, mirror, steering column and belt height adjustment with memory function, driver's	500
seat adjustment	504
Electric seat, mirror, steering column and belt height adjustment with memory function, height adjustment driver's seat	501
10. Electric seat, mirror, steering column and belt height adjustment with memory function, lumbar	502
support adjustment for driver's and front passenger's seat	
11. Electric seat, mirror, steering column and belt height adjustment with memory function, front	503
passenger's seat adjustment 074 - Audio - steering wheel, Model year 1996	504-505
1. Audio - steering wheel, Model year 1996	504
2. Audio - steering wheel	505
075 - Electric steering column adjustment, Model year 1996	506-507
Electric steering column adjustment, Model year 1996 Electric steering column adjustment, Model year 1996	506
Electric steering column adjustment Flectric seat adjustment and seat heating, Recaro sport seats	507 508-517
Electric seat adjustment and seat heating, Recard sport seats Electric seat adjustment and seat heating, Recard sport seats	508-509
Electric seat adjustment, driver's seat with memory, memory operating unit	510
3. Electric backrest adjustment, driver's seat	511
4. Electric seat adjustment, driver's seat with memory	512
 Electric height adjustment, driver's seat Electropneumatic lumber support adjustment, driver's and passenger's seat 	513 514
7. Electric seat adjustment, front passenger's seat adjustment	515
8. Heated sport seats, driver's seat	516
9. Heated sport seats, front passenger's seat	517
077 - Navigation system 1. Navigation system	518-524 518-519
Operating electronics control unit, navigation	520
3. Operating electronics control unit, navigation system operating unit	521
4. Navigation control unit, operating electronics control unit, magnetic field sender	522
5. Navigation control unit, operating electronics control unit6. Navigation control unit	523 524
078 - Audi A8 2.8 I fuel injection engine (142 kW - Motronic - 6-cylinder) engine code ACK, from	524 525-538
March 1996	5_0 000
1. Audi A8 2.8 I fuel injection engine (142 kW - Motronic - 6-cylinder) engine code ACK, from March	525
1996 2. Audi A.S. 2. S. I fuel injection engine (142 kW. Motronic, 6 cylinder) engine code ACK, from March	EOG
2. Audi A8 2.8 I fuel injection engine (142 kW - Motronic - 6-cvlinder) engine code ACK. from March	526

1996 3. Audi A8 2.8 I fuel injection engine (142 kW - Motronic - 6-cylinder) engine code ACK, from March 527 4. Earth connections 528 5. Battery, starter, alternator, starter inhibitor relay 529 6. Motronic control unit, ignition system, injectors, Hall sender, fuses 530 7. Motronic control unit, knock sensors, throttle valve control unit, engine speed sender 531 8. Motronic control unit, hall sender 2, immobilizer control unit 532 9. Motronic control unit, lambda probe heater, inlet camshaft timing adjustment valves 533 10. Motronic control unit, fuel pump relay, air mass meter 534 11. Engine cooling 535 12. Dash panel insert, fuel gauge sender, fuel pump, coolant and oil pressure control 536 13. Dash panel insert, warning lamp, handbrake warning switch, gear indicator, selector lever 537 position indicator, coolant temperature gauge 14. Dash panel insert, digital clock, diagnosis connection, warning lamps, speedometer sender 538 201 - -Fitting Locations: Relay and fuse carrier in electronics box, front passenger's footwell - 3 539-550 1. Relay and fuse carrier in electronics box, front passenger's footwell 539-550 1.1 Relay and fuse carrier in electronics box, front passenger's footwell 539-547 1.2 List of earth points 548 1.3 Fitting locations of individual components 549 1.4 Fitting locations of individual components 550 403 - - Fault Finding Programme: Fault finding on the gas discharge headlights 551-552 1. Operational check of both headlights, Visual inspection of both headlights, Measuring operating 551 voltage at wiring loom connector 2. Removing headlights, opening protective cover on haedlight, Measuring operating voltge at control 552 unit connector 404 - -Fault Finding Programme: Fault finding when electric exterior mirror memory, tilt and folding 553-554 functions are malfunctioning 1. Measurements at mirror adjustment switch, Measurements at mirror memory control unit, Rectifying 553 faults 2. -Fault Finding Programme: Fault finding when electric exterior mirror memory, tilt and folding 554 functions are malfunctioning 406 - - Fault Finding Programme: Fault finding on the electronic immobiliser 555-564 1. -Fault Finding Programme: Fault finding on the electronic immobiliser 555 2. Engine does not start, Fault finding 556 3. Possible causes of faults, rectification 557 4. -Fault Finding Programme: Fault finding on the electronic immobiliser 558 5. -Fault Finding Programme: Fault finding on the electronic immobiliser 559 6. -Fault Finding Programme: Fault finding on the electronic immobiliser 560 7. Keys not correctly code number 561 8. Key adaptation not possible for one or all keys 562 9. Possible errors when adapting keys 563 10. -Fault Finding Programme: Fault finding on the electronic immobiliser 564 407 - -Fault Finding Programme: Fault Finding Programme for the 'Airbag III and V' Systems 565-578 1. -Fault Finding Programme: Fault Finding Programme for the 'Airbag III and V' Systems 565 2. Fault code 00532 (power supply voltage too low), Fault code 00588 (igniter for airbag on driver's 566 side -N95, resistance value) 3. -Fault Finding Programme: Fault Finding Programme for the 'Airbag III and V' Systems 567 4. Fault code 00589 (igniter 1 for airbag on passenger side -N131, resistance value) 568 5. -Fault Finding Programme: Fault Finding Programme for the 'Airbag III and V' Systems 569 6. Fault code 00594 (airbag ignition circuits, short circuit) 570 7. -Fault Finding Programme: Fault Finding Programme for the 'Airbag III and V' Systems 571 8. Fault code 00595 (crash data stored) 572 9. Fault code 00654 (resistance for belt tensioner on driver's side 573 10. Fault code 00655 (resistance for belt tensioner on passenger side 574 11. -Fault Finding Programme: Fault Finding Programme for the 'Airbag III and V' Systems 575 12. Fault code 01025 (signal to warning lamp) 576 13. Fault code 65535 (Control unit defective) 577 14. -Fault Finding Programme: Fault Finding Programme for the 'Airbag III and V' Systems 578 408 - - Fault Finding Programme: Malfunctions in the telephone system 579-592 1. -Fault Finding Programme: Malfunctions in the telephone system 579 2. Switching on the telephone as per Operating Manual and checking function 580 3. -Fault Finding Programme: Malfunctions in the telephone system 581 4. -Fault Finding Programme: Malfunctions in the telephone system 582 5. Making a trial call using the handset 583 6. Making a trial call using the internal handsfree facitity 584

7. Making a trial call using the external handsfree facilitx	585
8. Terminating a trial call with the 'END' key	586
9Fault Finding Programme: Malfunctions in the telephone system	587
10. Testing the wiring to the transmitter/receiver unit	588
11Fault Finding Programme: Malfunctions in the telephone system	589
12. Testing the telephone signal quality	590
13Fault Finding Programme: Malfunctions in the telephone system	591
14Fault Finding Programme: Malfunctions in the telephone system	592