

001 - Basic equipment	1-42
1. Basic equipment	1
2. Basic equipment	2
3. Earth connections	3
4. X contact relief relay, ignition/starter switch	4
5. Starter inhibitor relay	5
6. Dual tone horn relay, dual tone horn	6
7. Dash panel insert, alternator warning lamp, immobilizer reading coil	7
8. Dash panel insert, fuel gauge senders, fuel pump, coolant shortage indicator switch	8
9. Dash panel insert, handbrake warning switch, oil pressure switch, brake fluid level warning contact	9
10. Dash panel insert, ambient temperature sensor	10
11. Dash panel insert, brake pad/lining wear warning	11
12. Dash panel insert, digital clock, radio wave controlled clock	12
13. Dash panel insert, diagnosis connection	13
14. Dash panel insert, diagnosis connection	14
15. Dash panel insert, main beam warning lamp, brake light warning lamp	15
16. Dash panel insert, coolant temperature senders, connection for switch illumination	16
17. Dash panel insert, function selection switch, reset button	17
18. Dash panel insert, function selection switch II	18
19. Dash panel insert, speedometer, speedometer sender, tailgate/bootlid contact switch for anti-theft alarm system	19
20. Dash panel insert, radio connections	20
21. Dash panel insert, data wires	21
22. Data wires	22
23. Fuses	23
24. Lighting switch, turn signal switch, headlight dipper/flasher switch, parking light switch, hazard warning light relay	24
25. Hazard warning light switch, heated washer jets, fuses	25
26. Front turn signals	26
27. Bulb monitoring device, left headlight	27
28. Bulb monitoring device, right headlight	28
29. Bulb monitoring device, headlight range control	29
30. Bulb monitoring device, tail lights, brake lights	30
31. Fog lights/rear fog light control unit, fog light switch, front fog lights	31
32. Fog lights/rear fog light control unit, rear fog light switch, rear fog light, number plate lights	32
33. Brake light switch, cigarette lighter, fuses	33
34. Automatic intermittent wash/wipe relay, intermittent wiper switch	34
35. Automatic intermittent wash/wipe relay, windscreen wiper motor, headlight washer system pump, heated rear window switch, heated rear window	35
36. Reversing lights	36
37. Fuses	37
38. Entry and footwell lighting relay, entry lights, footwell lights on driver's side	38
39. Entry lights, footwell lights on front passenger's side	39
40. Rear electric window isolation switch, rear cigarette lighter, rear ashtray illumination, illuminated cupholder	40
41. Illuminated vanity mirrors, luggage compartment lights	41
42. Interior lights, reading lights	42
002 - Audi A8 / S8 4.2 I - fuel injection engine (175 / 228 / 265 kW - Motronic - 8 cylinder) engine codes ARU, AQF, AQH, Audi A8 3.7 I - injection engine (191 kW - Motronic - 8 cylinder) engine codes AQG	43-58
1. Audi A8 / S8 4.2 I - fuel injection engine (175 / 228 / 265 kW - Motronic - 8 cylinder) engine codes ARU, AQF, AQH, Audi A8 3.7 I - injection engine (191 kW - Motronic - 8 cylinder) engine codes AQG	43
2. Audi A8 / S8 4.2 I - fuel injection engine (175 / 228 / 265 kW - Motronic - 8 cylinder) engine codes ARU, AQF, AQH, Audi A8 3.7 I - injection engine (191 kW - Motronic - 8 cylinder) engine codes AQG	44
3. Battery, starter, alternator	45
4. Motronic control unit, starter inhibitor relay	46
5. Motronic control unit, ignition coils, injectors	47
6. Motronic control unit, ignition coils, injectors	48
7. Motronic control unit, throttle valve control unit, accelerator pedal position senders, cruise control system switch	49
8. Motronic control unit, knock sensors, engine speed sender, coolant temperature senders	50
9. Motronic control unit, hall sender, brake light switch, clutch pedal switch	51

10. Motronic control unit, lambda probes, air mass meter	52
11. Motronic control unit, secondary air pump motor, activated charcoal filter system solenoid valve	53
1, electro/hydraulic engine mounting solenoid valves, intake valve manifold change-over valve	
12. Motronic control unit, fuel pump relay, inlet camshaft timing adjustment valves	54
13. Motronic control unit, data wire	55
14. Engine cooling	56
15. Dash panel insert, alternator warning lamp, oil pressure warning lamp, coolant temperature gauge, fuel pump	57
16. Dash panel insert, speedometer, speedometer sender	58
003 - Audi A8 2.8 l fuel injection engine (142 kW - Motronic - 6 cylinder), engine code APR, AQD	59-73
1. Audi A8 2.8 l fuel injection engine (142 kW - Motronic - 6 cylinder), engine code APR, AQD	59
2. Audi A8 2.8 l fuel injection engine (142 kW - Motronic - 6 cylinder), engine code APR, AQD	60
3. Battery, starter, alternator	61
4. Motronic control unit, starter inhibitor relay	62
5. Motronic control unit, ignition coils, injectors	63
6. Motronic control unit, throttle valve control unit, accelerator pedal position senders, cruise control system switch	64
7. Motronic control unit, coolant temperature sender, hall sender, intake air temperature sender	65
8. Motronic control unit, engine speed sender, knock sensors	66
9. Motronic control unit, air mass meter, lambda probes	67
10. Motronic control unit, activated charcoal filter system solenoid valve 1, secondary air pump relay, secondary air pump motor, inlet camshaft timing adjustment valves	68
11. Motronic control unit, fuel pump relay, brake light switch, clutch pedal switch	69
12. Motronic control unit, data wire	70
13. Engine cooling	71
14. Dash panel insert, alternator warning lamp, oil pressure warning lamp, coolant temperature gauge, fuel pump	72
15. Dash panel insert, speedometer, speedometer sender	73
004 - Audi A8 2.5 litre turbo-diesel engine (110 kW - 6-cylinder), engine code AKN, From model year 1999	74-86
1. Audi A8 2.5 litre turbo-diesel engine (110 kW - 6-cylinder), engine code AKN, From model year 1999	74
2. Audi A8 2.5 litre turbo-diesel engine (110 kW - 6-cylinder), engine code AKN, From model year 1999	75
3. Battery, starter, alternator, alternator cut-in relay	76
4. Diesel direct injection system control unit, starter inhibitor relay, relay for glow plugs, glow plugs - engine	77
5. Diesel direct injection system control unit, electro/hydraulic engine mounting solenoid valves, exhaust gas recirculation valve, charge pressure control solenoid valve, brake light switch	78
6. Diesel direct injection system control unit, injection pump control unit, air mass meter, diesel direct injection system relay	79
7. Diesel direct injection system control unit, coolant temperature senders, oil temperature sender, intake manifold pressure sender, engine speed sender	80
8. Diesel direct injection system control unit, CAN bus connections	81
9. Diesel direct injection system control unit, cruise control system switch, accelerator pedal position sender, low fuel level sender	82
10. Diesel direct injection system control unit, additional heater control unit, metering pump	83
11. Engine cooling	84
12. Dash panel insert, warning lamps, fuel pump	85
13. Dash panel insert, oil pressure switch	86
005 - Automatic gearbox (01V) 8 cylinder engines 3.7 l, 191 kW, AQG and 6 cylinder engines, From model year 1999	87-94
1. Automatic gearbox (01V) 8 cylinder engines 3.7 l, 191 kW, AQG and 6 cylinder engines, From model year 1999	87
2. Automatic gearbox (01V) 8 cylinder engines 3.7 l, 191 kW, AQG and 6 cylinder engines, From model year 1999	88
3. Starter inhibitor relay, automatic gearbox control unit	89
4. Automatic gearbox control unit, multi-function switch	90
5. Automatic gearbox control unit, solenoid valves, kick-down switch	91
6. Automatic gearbox control unit, gearbox speed sender, gearbox input speed sender	92
7. Automatic gearbox control unit, Tiptronic switch, selector lever lock solenoid	93
8. Brake light switch, cruise control system brake pedal switch (diesel direct injection system)	94
006 - Automatic gearbox (01L) 8 cylinder engines 4.2 l, 175 kW, ARU, From model year 1999	95-102
1. Automatic gearbox (01L) 8 cylinder engines 4.2 l, 175 kW, ARU, From model year 1999	95
2. Automatic gearbox (01L) 8 cylinder engines 4.2 l, 175 kW, ARU, From model year 1999	96
3. Starter inhibitor relav. automatic gearbox control unit	97

4. Automatic gearbox control unit, multi-function switch	98
5. Automatic gearbox control unit, solenoid valves, kick-down switch	99
6. Automatic gearbox control unit, gearbox speed sender, gearbox input speed sender	100
7. Automatic gearbox control unit, Tiptronic switch, selector lever lock solenoid	101
8. Brake light switch, cruise control system brake pedal switch (diesel direct injection system)	102
007 - Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (ASR/TCS) and electronic stability program (ESP), From model year 1999	103-108
1. Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (ASR/TCS) and electronic stability program (ESP), From model year 1999	103
2. ABS with EDL control unit, speed sensors, brake light switch, hydraulic pump for electronic stability program	104
3. ABS with EDL control unit, handbrake warning switch, traction control system switch	105
4. ABS with EDL control unit, ABS hydraulic unit, ABS return flow pump relay, relay for ABS solenoid valves	106
5. ABS with EDL control unit, steering angle sender, ABS hydraulic pump fuse, ABS valves fuse	107
6. Lateral acceleration sender, brake pressure sender, yaw rate sender	108
008 - Airbag	109-115
1. Airbag	109-110
2. Airbags and belt tensioners for driver and front passenger	111
3. Side airbags for front and rear seats	112
4. Crash sensors, seat occupied sensor on front passenger's side	113
5. Rear belt tensioner igniters on driver's and front passenger's side, rear seat occupied sensor, driver's and front passenger's side	114
6. Airbag disabled warning lamp, front passenger's side	115
009 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (ASR)	116-121
1. Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (ASR)	116-117
2. ABS with EDL control unit, valve	118
3. ABS with EDL control unit, combi-processor in dash panel insert	119
4. ABS with EDL control unit, brake light switch, traction control system switch	120
5. ABS with EDL control unit, brake light switch, traction control system switch	121
010 - Central locking with radio-operated remote control and anti-theft alarm system with interior monitoring, From model year 1999	122-133
1. Central locking with radio-operated remote control and anti-theft alarm system with interior monitoring, From model year 1999	122
2. Central locking, fuses	123
3. Switch in lock cylinder for tailgate/bootlid anti-theft alarm system/central locking system, contact switch in lock cylinder on driver's side, luggage compartment light	124
4. Tailgate/boot lid contact switch for anti-theft alarm system, electric window motors	125
5. Anti-theft alarm system horn, anti-theft alarm system contact switch, central locking and anti-theft alarm system aerial, central locking motor	126
6. Glove box lock contact switch, luggage compartment release switch, entry and footwell lighting relay	127
7. Diagnosis connection, combi-processor in dash panel insert, diagnosis connection	128
8. Interior locking switch on driver's side, ultra-sonic sensor control unit	129
9. Ultra-sonic sensor control unit, interior monitor switch, door contact switch on driver's side	130
10. Door contact switch on front passenger's side, right footwell light, front right entry light	131
11. Door contact switch - rear left and rear right, entry light - rear left and rear right	132
12. Interior door handle lighting	133
011 - Daytime driving lights with fog lights, From model year 1999	134-141
1. Daytime driving lights with fog lights, From model year 1999	134
2. Daytime driving lights with fog lights, From model year 1999	135
3. Ignition/starter switch, lighting switch, headlight dipper/flasher switch, X contact relief relay	136
4. Daytime driving light switch-on relay, daytime driving light change-over relay , resistance wire	137
5. Left headlight, fuses, bulb monitoring device	138
6. Right headlight, bulb monitoring device	139
7. Fog lights/rear fog light control unit, front fog lights, fog light switch	140
8. Fog lights/rear fog light control unit, rear fog light switch, rear left fog light bulb	141
012 - Tailgate/bootlid	142-144
1. Tailgate/bootlid	142-143
2. Tailgate/bootlid	144
013 - Servotronic	145-147
1. Servotronic	145-146
2. Servotronic	147
014 - Electric sliding sunroof with automatic selection	148-150

1. Electric sliding sunroof with automatic selection	148-149
2. Electric sliding sunroof with automatik selection	150
015 - Auxiliary heater with radio-operated remote control and air conditioner, From model year 1999	151-158
1. Auxiliary heater with radio-operated remote control and air conditioner, From model year 1999	151
2. Auxiliary heater with radio-operated remote control and air conditioner, From model year 1999	152
3. Battery, X contact relief relay	153
4. Additional heater control unit, metering pump	154
5. Control and display unit for air conditioner, solar roof	155
6. Solar cell isolation relay, fresh air blower	156
7. Function selection switch in centre console	157
8. Auxiliary heating radio wave receiver, frequency divider for radio receiver and radio system, radio/telephone/auxiliary heater aerial	158
016 - Air conditioner with automatic control, From model year 1999	159-170
1. Air conditioner with automatic control, From model year 1999	159
2. Air conditioner with automatic control, From model year 1999	160
3. Control and display unit for air conditioner, fuses	161
4. Control and display unit for air conditioner, heat regulation valves, solar roof	162
5. Control and display unit for air conditioner, central vent potentiometer, sunlight penetration photo sensor, fresh air blower	163
6. Control and display unit for air conditioner, air conditioner pressure switch, air quality sensor	164
7. Control and display unit for air conditioner, magnetic coupling relay, vent temperature senders	165
8. Control and display unit for air conditioner, left footwell flap control motor, rear footwell vent control motor	166
9. Control and display unit for air conditioner, control motors for vents	167
10. Illumination for vents	168
11. Engine cooling petrol engines	169
12. Engine cooling for diesel engines	170
017 - Front and rear fog lights, From model year 1999	171-174
1. Front and rear fog lights, From model year 1999	171
2. Fog lights/rear fog light control unit, fog light	172
3. Fog lights/rear fog light control unit, rear fog light	173
4. Dash panel insert	174
018 - Driver information system, From model year 1999	175-183
1. Driver information system, From model year 1999	175
2. Driver information system, From model year 1999	176
3. Ignition/starter switch, lighting switch, X contact relief relay	177
4. Left headlight, fuse carrier 1	178
5. Right headlight, bulb monitoring device, left tail light, high level brake light bulb	179
6. Bulb monitoring device, brake light switch	180
7. Number plate lights, tail lights in boot lid, rear fog light	181
8. Dash panel insert	182
9. Dash panel insert	183
019 - Ultra-sonic parking aid system	184-190
1. Ultra-sonic parking aid system	184-185
2. Parking aid control unit, front parking aid senders	186
3. Parking aid control unit, rear parking aid sender	187
4. Parking aid control unit, parking aid button, sound sender	188
5. Parking aid control unit, reversing light	189
6. Parking aid control unit, dash panel insert	190
020 - Automatic anti-dazzle interior and exterior mirrors	191-194
1. Automatic anti-dazzle interior and exterior mirrors	191-192
2. Automatic anti-dazzle interior and exterior mirrors	193
3. Automatic anti-dazzle interior and exterior mirrors	194
021 - Trailer coupling, From model year 1999	195-202
1. Trailer coupling, From model year 1999	195
2. Trailer coupling, From model year 1999	196
3. Turn signal switch, hazard warning light switch, hazard warning light relay, trailer operation	197
4. Bulb monitoring device, X contact relief relay, left tail light, right tail light	198
5. Bulb monitoring device, trailer socket	199
6. Trailer socket, rear fog light cut-out, contact switch, reversing lights	200
7. Trailer socket, rear fog light switch	201
8. Reversing light switch, multi-function switch, number plate light	202
022 - Headlights with gas discharge lamps and automatic headlight range control, From model year 1999	203-208
1. Headlights with gas discharge lamps and automatic headlight range control, From model year 1999	203
2. Headlights with gas discharge lamps and automatic headlight range control, From model year 1999	204

3. Ignition/starter switch, lighting switch, headlight dipper/flasher switch	205
4. Fuses, left gas discharge lamp control unit	206
5. Bulb monitoring device, right gas discharge lamp control unit, headlight range control motor, right	207
6. Control unit for headlight range control, left headlight range control motor, vehicle level senders	208
023 - Electrically operated rear roller blind	209-212
1. Electrically operated rear roller blind	209-210
2. Electrically operated rear roller blind	211
3. Electrically operated rear roller blind	212
024 - Heated steering wheel	213-215
1. Heated steering wheel	213-214
2. Heated steering wheel	215
025 - Steering wheel with Tiptronic	216-219
1. Steering wheel with Tiptronic	216-217
2. Steering wheel with Tiptronic	218
3. Steering wheel with Tiptronic	219
026 - Multi-function steering wheel, From model year 1999	220-225
1. Multi-function steering wheel, From model year 1999	220
2. Multi-function steering wheel	221
3. Multi-function steering wheel	222
4. Multi-function steering wheel	223
5. Multi-function steering wheel	224
6. Multi-function steering wheel	225
027 - Mobile phone	226-230
1. Mobile phone	226-227
2. Mobile phone	228
3. Mobile phone	229
4. Mobile phone	230
028 - Telephone	231-236
1. Telephone	231-232
2. Telephone, telephone aerial	233
3. Telephone with radio navigation system	234
4. Telephone with navigation system NS Low	235
5. Telephone, telephone handset, telephone microphone	236
029 - Card-System Italian (tele passport)	237-239
1. Card-System Italian (tele passport)	237-238
2. Cardsystem Italian	239
030 - Heated front seats and rear seat	240-245
1. Heated front seats and rear seat	240-241
2. Heated driver's seat	242
3. Heated front passenger's seat	243
4. Rear heated seat	244
5. Rear heated seat	245
031 - Electric seat adjustment rear seats, From model year 1999	246-253
1. Electric seat adjustment rear seats, From model year 1999	246
2. Electric seat adjustment rear left seat	247
3. Head restraint adjustment rear left seat	248
4. Electric seat adjustment rear right seat	249
5. Head restraint adjustment rear right seat	250
6. Lumbar support adjustment, rear seats	251
7. Rear electric window isolation switch, adjustable front passenger seat switch, adjustable front passenger's seat relay	252
8. Rear head restraint adjustment switch, longitudinal adjustment switch, front passenger's seat	253
032 - Electric seat adjustment - without memory function	254-260
1. Electric seat adjustment - without memory function	254-255
2. Seat adjustment for driver's seat	256
3. Seat adjustment for driver's seat	257
4. Lumbar support adjustment for driver's and front passenger's seat	258
5. Seat adjustment front passenger's seat	259
6. Seat adjustment front passenger's seat	260
033 - Electric seat, mirror, steering column and belt height adjustment with memory function, From model year 1999	261-272
1. Electric seat, mirror, steering column and belt height adjustment with memory function, From model year 1999	261
2. Memory operating unit, seat adjustment (with memory) control unit	262

3. Seat adjustment (with memory) control unit, driver's seat backrest adjustment motor, left head restraint adjustment motor, seat adjustment current supply relay	263
4. Driver's seat adjustment switches	264
5. Driver's seat adjustment	265
6. Seat adjustment front passenger's seat	266
7. Seat adjustment front passenger's seat	267
8. Lumbar support adjustment for driver's and front passenger's seat	268
9. Mirror adjustment, driver's side	269
10. Mirror adjustment, front passenger's side	270
11. Steering column adjustment	271
12. Belt height adjustment on driver's and front passenger's side	272
034 - Radio Bose sound system: Concert, Symphony with or without CD changer	273-281
1. Radio Bose sound system: Concert, Symphony with or without CD changer	273-274
2. Radio, radio fuse, diagnosis connection	275
3. Radio, CD changer	276
4. Radio, multi-function steering wheel control unit	277
5. Radio, telephone/navigation systems loudspeaker	278
6. Amplifier with bass loudspeaker, loudspeakers	279
7. Aerial	280
8. Radio aerials Symphony	281
035 - Radio stereo system: Chorus, Concert	282-289
1. Radio stereo system: Chorus, Concert	282-283
2. Radio, radio fuse	284
3. Radio, CD changer	285
4. Radio, multi-function steering wheel control unit	286
5. Loudspeaker	287
6. Loudspeaker	288
7. Aerial	289
036 - Provision for radio	290-293
1. Provision for radio	290-291
2. Provision for radio	292
3. Provision for radio	293
037 - Radio navigation system (RNS)	294-304
1. Radio navigation system (RNS)	294-295
2. Radio navigation system, fuse	296
3. Radio navigation system, fuse	297
4. Radio navigation system, CD changer	298
5. Loudspeakers, navigation aerial (GPS)	299
6. Loudspeaker	300
7. Loudspeakers for radio Bose sound system	301
8. Navigation operating electronics control unit, navigation/TV tuner	302
9. Navigation operating electronics control unit, navigation/TV tuner, heated rear window with window aerial	303
10. TV aerials	304
038 - Navigation system "NS Low"	305-310
1. Navigation system "NS Low"	305-306
2. Navigation system with CD drive control unit, navigation aerial (GPS)	307
3. Navigation system with CD drive control unit	308
4. Navigation system with CD drive control unit, function selection switch II	309
5. Navigation system with CD drive control unit, loudspeakers	310
039 - Electric head restraint and lumbar support adjustment for rear seats	311-315
1. Electric head restraint and lumbar support adjustment for rear seats	311-312
2. Head restraint adjustment switch, seat adjustment fuse	313
3. Electric head restraint adjustment for rear seats	314
4. Electric lumbar support adjustment for rear seats	315
040 - Electric steering column adjustment	316-318
1. Electric steering column adjustment	316-317
2. Electric steering column adjustment	318
041 - Heated lock cylinder	319-321
1. Heated lock cylinder	319-320
2. Heated lock cylinder	321
042 - Electrically adjustable and heated exterior mirrors with or without retraction function	322-325
1. Electrically adjustable and heated exterior mirrors with or without retraction function	322-323
2. Electrically adjustable and heated exterior mirrors with or without retraction function driver's side	324
3. Electrically adjustable and heated exterior mirrors with or without retraction function front	325

passenger's side	
043 - Electric windows, From model year 1999	326-331
1. Electric windows, From model year 1999	326
2. Fuse for electric windows	327
3. Central locking motor with control unit for interior lights switch-off delay and anti-theft alarm system	328
4. Front left electric window	329
5. Electric windows - front right and rear left	330
6. Rear right electric window	331
044 - Electric seat adjustment and seat heating, Recaro sport seats	332-344
1. Electric seat adjustment and seat heating, Recaro sport seats	332-333
2. Memory operating unit, seat adjustment (with memory) control unit	334
3. Head restraint adjustment driver's seat	335
4. Driver's seat adjustment switches	336
5. Driver's seat adjustment	337
6. Electropneumatic lumbar support adjustment, driver's seat	338
7. Seat adjustment fuse, front passenger's seat adjustment	339
8. Electric seat adjustment, front passenger's seat	340
9. Heated sport seats, driver's seat	341
10. Heated sport seats, driver's seat	342
11. Heated sport seats, front passenger's seat	343
12. Heated sport seats, front passenger's seat	344
045 - Heated windscreen	345-347
1. Heated windscreen	345-346
2. Windscreen heater	347
046 - Basic equipment	348-389
1. Basic equipment	348
2. Basic equipment	349
3. Earth connections	350
4. X contact relief relay, ignition/starter switch	351
5. Starter inhibitor relay	352
6. Dual tone horn relay, dual tone horn	353
7. Dash panel insert, alternator warning lamp, immobilizer reading coil	354
8. Dash panel insert, fuel gauge senders, fuel pump, coolant shortage indicator switch	355
9. Dash panel insert, handbrake warning switch, oil pressure switch, brake fluid level warning contact	356
10. Dash panel insert, ambient temperature sensor	357
11. Dash panel insert, brake pad/lining wear warning	358
12. Dash panel insert, digital clock, radio wave controlled clock	359
13. Dash panel insert, diagnosis connection	360
14. Dash panel insert, diagnosis connection	361
15. Dash panel insert, main beam warning lamp, brake light warning lamp	362
16. Dash panel insert, coolant temperature senders, connection for switch illumination	363
17. Dash panel insert, function selection switch, reset button	364
18. Dash panel insert, function selection switch II	365
19. Dash panel insert, speedometer, speedometer sender, tailgate/bootlid contact switch for anti-theft alarm system	366
20. Dash panel insert, radio connections	367
21. Dash panel insert, data wires	368
22. Data wires	369
23. Fuses	370
24. Lighting switch, turn signal switch, headlight dipper/flasher switch, parking light switch, hazard warning light relay	371
25. Hazard warning light switch, heated washer jets, fuses	372
26. Front turn signals	373
27. Bulb monitoring device, left headlight	374
28. Bulb monitoring device, right headlight	375
29. Bulb monitoring device, headlight range control	376
30. Bulb monitoring device, tail lights, brake lights	377
31. Fog lights/rear fog light control unit, fog light switch, front fog lights	378
32. Fog lights/rear fog light control unit, rear fog light switch, rear fog light, number plate lights	379
33. Brake light switch, cigarette lighter, fuses	380
34. Automatic intermittent wash/wipe relay, intermittent wiper switch	381
35. Automatic intermittent wash/wipe relay, windscreen wiper motor, headlight washer system pump, heated rear window switch. heated rear window	382

36. Reversing lights	383
37. Fuses	384
38. Entry and footwell lighting relay, entry lights, footwell lights on driver's side	385
39. Entry lights, footwell lights on front passenger's side	386
40. Rear electric window isolation switch, rear cigarette lighter, rear ashtray illumination, glove box light, glove box lock illumination	387
41. Illuminated vanity mirrors, luggage compartment lights	388
42. Interior lights, reading lights	389
047 - Audi A8 3.3 l litre turbo-diesel engine (165 kW - 8-cylinder), engine code AKF, From model year 2000	390-406
1. Audi A8 3.3 l litre turbo-diesel engine (165 kW - 8-cylinder), engine code AKF, From model year 2000	390
2. Audi A8 3.3 l litre turbo-diesel engine (165 kW - 8-cylinder), engine code AKF, From model year 2000	391
3. Battery, starter, alternator, alternator cut-in relay, starter inhibitor relay	392
4. Relay for glow plugs, relay 2 for glow plugs, glow plugs - engine	393
5. Diesel direct injection system control unit, brake light switch, exhaust gas recirculation valve	394
6. Diesel direct injection system control unit, air mass meter, diesel direct injection system control unit 2	395
7. Diesel direct injection system control unit, terminal 30 voltage supply relay, diesel direct injection system control unit 2	396
8. Diesel direct injection system control unit, diesel direct injection system control unit 2, coolant temperature senders, injectors for cylinder 2	397
9. Diesel direct injection system control unit, engine speed sender, intake manifold pressure sender	398
10. Diesel direct injection system control unit, CAN bus	399
11. Diesel direct injection system control unit, cruise control system switch, fuel pressure sender	400
12. Diesel direct injection system control unit, charge air cooling pump relay	401
13. Diesel direct injection system control unit, additional heater control unit, fuel pump relay	402
14. Engine cooling	403
15. Fuel pump, fuel cooling pump	404
16. Dash panel insert, warning lamps, fuel pump	405
17. Dash panel insert, oil pressure switch	406
048 - Audi A8 2.5 litre turbo-diesel engine (110 kW / 132 kW - 6-cylinder), engine code AKE, From model year 2000	407-420
1. Audi A8 2.5 litre turbo-diesel engine (110 kW / 132 kW - 6-cylinder), engine code AKE, From model year 2000	407
2. Audi A8 2.5 litre turbo-diesel engine (110 kW / 132 kW - 6-cylinder), engine code AKE, From model year 2000	408
3. Battery, starter, alternator, alternator cut-in relay	409
4. Diesel direct injection system control unit, starter inhibitor relay, relay for glow plugs, glow plugs - engine	410
5. Diesel direct injection system control unit, electro/hydraulic engine mounting solenoid valves, exhaust gas recirculation valve, charge pressure control solenoid valve, brake light switch	411
6. Diesel direct injection system control unit, injection pump control unit, diesel direct injection system relay	412
7. Diesel direct injection system control unit, coolant temperature senders, oil temperature sender, intake manifold pressure sender, engine speed sender	413
8. Diesel direct injection system control unit, CAN bus connections	414
9. Diesel direct injection system control unit, cruise control system switch, accelerator pedal position sender, low fuel level sender	415
10. Diesel direct injection system control unit, additional heater control unit, metering pump	416
11. Diesel direct injection system control unit, air mass meter, air mass meter fuse	417
12. Engine cooling	418
13. Dash panel insert, warning lamps, fuel pump	419
14. Dash panel insert, oil pressure switch	420
049 - Audi A8 / S8 4.2 l fuel injection engine (175 / 228 / 265 kW - Motronic - 8 cylinder), engine codes ARU AQF, AQH	421-436
1. Audi A8 / S8 4.2 l fuel injection engine (175 / 228 / 265 kW - Motronic - 8 cylinder), engine codes ARU AQF, AQH	421
2. Audi A8 / S8 4.2 l fuel injection engine (175 / 228 / 265 kW - Motronic - 8 cylinder), engine codes ARU AQF, AQH	422
3. Battery, starter, alternator	423
4. Motronic control unit, starter inhibitor relay	424
5. Motronic control unit, ignition coils, injectors	425
6. Motronic control unit, ignition coils, injectors	426
7. Motronic control unit. throttle valve control unit. accelerator pedal position senders. cruise	427

control system switch	
8. Motronic control unit, knock sensors, engine speed sender, coolant temperature senders	428
9. Motronic control unit, hall sender, brake light switch, clutch pedal switch	429
10. Motronic control unit, lambda probes, air mass meter	430
11. Motronic control unit, secondary air pump motor, activated charcoal filter system solenoid valve	431
1, electro/hydraulic engine mounting solenoid valves, intake manifold change-over valve	
12. Motronic control unit, fuel pump relay, inlet camshaft timing adjustment valves	432
13. Motronic control unit, data wire	433
14. Engine cooling	434
15. Dash panel insert, alternator warning lamp, oil pressure warning lamp, coolant temperature gauge, fuel pump	435
16. Dash panel insert, speedometer, speedometer sender	436
050 - Audi A8 2.8 l fuel injection engine (142 kW - Motronic - 6 cylinder), engine code APR, AQD	437-451
1. Audi A8 2.8 l fuel injection engine (142 kW - Motronic - 6 cylinder), engine code APR, AQD	437
2. Audi A8 2.8 l fuel injection engine (142 kW - Motronic - 6 cylinder), engine code APR, AQD	438
3. Battery, starter, alternator	439
4. Motronic control unit, starter inhibitor relay	440
5. Motronic control unit, ignition coils, injectors	441
6. Motronic control unit, throttle valve control unit, accelerator pedal position senders, cruise control system switch	442
7. Motronic control unit, coolant temperature sender, hall sender, intake air temperature sender	443
8. Motronic control unit, engine speed sender, knock sensors	444
9. Motronic control unit, air mass meter, lambda probes	445
10. Motronic control unit, activated charcoal filter system solenoid valve 1, secondary air pump relay, secondary air pump motor, inlet camshaft timing adjustment valves	446
11. Motronic control unit, fuel pump relay, brake light switch, clutch pedal switch	447
12. Motronic control unit, data wire	448
13. Engine cooling	449
14. Dash panel insert, alternator warning lamp, oil pressure warning lamp, coolant temperature gauge, fuel pump	450
15. Dash panel insert, speedometer, speedometer sender	451
051 - Central locking with radio-operated remote control and anti-theft alarm system with interior monitoring, From model year 2000	452-463
1. Central locking with radio-operated remote control and anti-theft alarm system with interior monitoring, From model year 2000	452
2. Central locking, fuses	453
3. Switch in lock cylinder for tailgate/bootlid anti-theft alarm system/central locking system, contact switch in lock cylinder on driver's side, luggage compartment light	454
4. Tailgate/boot lid contact switch for anti-theft alarm system, electric window motors	455
5. Anti-theft alarm system horn, anti-theft alarm system contact switch, central locking and anti-theft alarm system aerial, central locking motor	456
6. Glove box lock contact switch, luggage compartment release switch, entry and footwell lighting relay	457
7. Diagnosis connection, combi-processor in dash panel insert, diagnosis connection	458
8. Interior locking switch on driver's side, ultra-sonic sensor control unit	459
9. Ultra-sonic sensor control unit, interior monitor switch, door contact switch on driver's side	460
10. Door contact switch on front passenger's side, right footwell light, front right entry light	461
11. Door contact switch - rear left and rear right, entry light - rear left and rear right	462
12. Interior door handle lighting	463
052 - Radio stereo system: Chorus, Concert	464-471
1. Radio stereo system: Chorus, Concert	464-465
2. Radio, radio fuse	466
3. Radio, CD changer	467
4. Radio, multi-function steering wheel control unit	468
5. Loudspeaker	469
6. Loudspeaker	470
7. Aerial	471
053 - Radio Bose sound system: Concert, Symphony with and without CD changer	472-480
1. Radio Bose sound system: Concert, Symphony with and without CD changer	472-473
2. Radio, radio fuse, diagnosis connection	474
3. Radio, CD changer	475
4. Radio, multi-function steering wheel control unit	476
5. Radio, telephone/navigation systems loudspeaker	477
6. Amplifier with bass loudspeaker, loudspeakers	478
7. Aerial	479
8. Radio aeriels Svmphonv	480

054 - Provision for radio	481-484
1. Provision for radio	481-482
2. Provision for radio	483
3. Provision for radio	484
055 - Radio navigation system (RNS)	485-495
1. Radio navigation system (RNS)	485-486
2. Radio navigation system, fuse	487
3. Radio navigation system, fuse	488
4. Radio navigation system, CD changer	489
5. Loudspeakers, navigation aerial (GPS)	490
6. Loudspeaker	491
7. Loudspeakers for radio Bose sound system	492
8. Navigation operating electronics control unit, navigation/TV tuner	493
9. Navigation operating electronics control unit, navigation/TV tuner, heated rear window with window aerial	494
10. TV aerials	495
056 - Navigation system "NS Low"	496-501
1. Navigation system "NS Low"	496-497
2. Navigation system with CD drive control unit, navigation aerial (GPS)	498
3. Navigation system with CD drive control unit	499
4. Navigation system with CD drive control unit, function selection switch II	500
5. Navigation system with CD drive control unit, loudspeakers	501
057 - Heated front seats and rear seat	502-507
1. Heated front seats and rear seat	502-503
2. Heated driver's seat	504
3. Heated front passenger's seat	505
4. Rear heated seat	506
5. Rear heated seat	507
058 - Electric seat adjustment rear seats, From model year 2000	508-515
1. Electric seat adjustment rear seats, From model year 2000	508
2. Electric seat adjustment rear left seat	509
3. Head restraint adjustment rear left seat	510
4. Electric seat adjustment rear right seat	511
5. Head restraint adjustment rear right seat	512
6. Lumbar support adjustment, rear seats	513
7. Rear electric window isolation switch, adjustable front passenger seat switch, adjustable front passenger's seat relay	514
8. Rear head restraint adjustment switch, longitudinal adjustment switch, front passenger's seat	515
059 - Electric seat adjustment and seat heating, recaro sport seats	516-528
1. Electric seat adjustment and seat heating, recaro sport seats	516-517
2. Memory operating unit, seat adjustment (with memory) control unit	518
3. Head restraint adjustment driver's seat	519
4. Driver's seat adjustment switches	520
5. Driver's seat adjustment	521
6. Electropneumatic lumbar support adjustment, driver's seat	522
7. Seat adjustment fuse, front passenger's seat adjustment	523
8. Electric seat adjustment, front passenger's seat	524
9. Heated sport seats, driver's seat	525
10. Heated sport seats, driver's seat	526
11. Heated sport seats, front passenger's seat	527
12. Heated sport seats, front passenger's seat	528
060 - Electric seat, mirror, steering column and belt height adjustment with memory function, From model year 2000	529-540
1. Electric seat, mirror, steering column and belt height adjustment with memory function, From model year 2000	529
2. Memory operating unit, seat adjustment (with memory) control unit	530
3. Seat adjustment (with memory) control unit, driver's seat backrest adjustment motor, left head restraint adjustment motor, seat adjustment current supply relay	531
4. Driver's seat adjustment switches	532
5. Driver's seat adjustment	533
6. Seat adjustment front passenger's seat	534
7. Seat adjustment front passenger's seat	535
8. Lumbar support adjustment for driver's and front passenger's seat	536
9. Mirror adjustment, driver's side	537
10. Mirror adjustment, front passenger's side	538
11. Steering column adjustment	539

12. Belt height adjustment on driver's and front passenger's side	540
061 - Mobile phone	541-545
1. Mobile phone	541-542
2. Mobile phone	543
3. Mobile phone	544
4. Mobile phone	545
062 - Telephone	546-551
1. Telephone	546-547
2. Telephone, telephone aerial	548
3. Telephone with radio navigation system	549
4. Telephone with navigation system NS Low	550
5. Telephone, telephone handset, telephone microphone	551
063 - Trailer coupling, From model year 2000	552-559
1. Trailer coupling, From model year 2000	552
2. Trailer coupling, From model year 2000	553
3. Turn signal switch, hazard warning light switch, hazard warning light relay, trailer operation	554
4. Bulb monitoring device, X contact relief relay, left tail light, right tail light	555
5. Bulb monitoring device, trailer socket	556
6. Trailer socket, rear fog light cut-out, contact switch, reversing lights	557
7. Trailer socket, rear fog light switch	558
8. Reversing light switch, multi-function switch, number plate light	559
064 - Airbag	560-566
1. Airbag	560-561
2. Airbags and belt tensioners for driver and front passenger	562
3. Side airbags for front and rear seats	563
4. Crash sensors, seat occupied sensor on front passenger's side	564
5. Rear belt tensioner igniters on driver's and front passenger's side, rear seat occupied sensor, driver's and front passenger's side	565
6. Airbag disabled warning lamp (front passenger's side), airbag disabling key switch (front passenger's side), glove box light	566
065 - Electric sliding sunroof with automatic selection	567-569
1. Electric sliding sunroof with automatic selection	567-568
2. Electric sliding sunroof with automatic selection	569
066 - Electric windows, From model year 2000	570-575
1. Electric windows, From model year 2000	570
2. Fuse for electric windows	571
3. Central locking motor with control unit for interior lights switch-off delay and anti-theft alarm system	572
4. Front left electric window	573
5. Electric windows - front right and rear left	574
6. Rear right electric window	575
067 - Tailgate/bootlid	576-578
1. Tailgate/bootlid	576-577
2. Tailgate/bootlid	578
068 - Electrically operated rear roller blind	579-582
1. Electrically operated rear roller blind	579-580
2. Electrically operated rear roller blind	581
3. Electrically operated rear roller blind	582
069 - Heated lock cylinder	583-585
1. Heated lock cylinder	583-584
2. Heated lock cylinder	585
070 - Electrical tyre pressure monitoring	586-590
1. Electrical tyre pressure monitoring	586-587
2. Tyre pressure monitor control unit, tyre pressure sensors for tyre pressure	588
3. Tyre pressure monitor control unit, fuses	589
4. Function selection switch II, combi-processor in dash panel insert	590
071 - Automatic gearbox (01L) 8 cylinder engines 4.2 l, 265 kW, AQH, From model year 2000	591-598
1. Automatic gearbox (01L) 8 cylinder engines 4.2 l, 265 kW, AQH, From model year 2000	591
2. Automatic gearbox (01L) 8 cylinder engines 4.2 l, 265 kW, AQH, From model year 2000	592
3. Starter inhibitor relay, automatic gearbox control unit	593
4. Automatic gearbox control unit, multi-function switch	594
5. Automatic gearbox control unit, solenoid valves, kick-down switch	595
6. Automatic gearbox control unit, gearbox speed sender, gearbox input speed sender	596
7. Automatic gearbox control unit, Tiptronic switch, selector lever lock solenoid	597
8. Brake light switch, cruise control system brake pedal switch (diesel direct injection system)	598
072 - Automatic gearbox (01V) 8 cylinder engines 3.7 l, 191 kW, AQG, From model year 2000	599-606

1. Automatic gearbox (01V) 8 cylinder engines 3.7 l, 191 kW, AQG, From model year 2000	599
2. Automatic gearbox (01V) 8 cylinder engines 3.7 l, 191 kW, AQG, From model year 2000	600
3. Starter inhibitor relay, automatic gearbox control unit	601
4. Automatic gearbox control unit, multi-function switch	602
5. Automatic gearbox control unit, solenoid valves, kick-down switch	603
6. Automatic gearbox control unit, gearbox speed sender, gearbox input speed sender	604
7. Automatic gearbox control unit, Tiptronic switch, selector lever lock solenoid	605
8. Brake light switch, cruise control system brake pedal switch (diesel direct injection system)	606
073 - Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (ASR/TCS) and electronic stability program (ESP), From model year 2000	607-612
1. Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (ASR/TCS) and electronic stability program (ESP), From model year 2000	607
2. ABS with EDL control unit, speed sensors, brake light switch, hydraulic pump for electronic stability program	608
3. ABS with EDL control unit, handbrake warning switch, traction control system switch	609
4. ABS with EDL control unit, ABS hydraulic unit, ABS return flow pump relay, relay for ABS solenoid valves	610
5. ABS with EDL control unit, steering angle sender, ABS hydraulic pump fuse, ABS valves fuse	611
6. Lateral acceleration sender, brake pressure sender, yaw rate sender	612
074 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (ASR)	613-618
1. Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (ASR)	613-614
2. ABS with EDL control unit, ABS control unit fuse, speed sensor	615
3. ABS with EDL control unit, valve	616
4. ABS with EDL control unit, combi-processor in dash panel insert	617
5. ABS with EDL control unit, brake light switch, traction control system switch	618
075 - Air conditioner with automatic control, From model year 2000	619-630
1. Air conditioner with automatic control, From model year 2000	619
2. Air conditioner with automatic control, From model year 2000	620
3. Control and display unit for air conditioner, fuses	621
4. Control and display unit for air conditioner, heat regulation valves, solar roof	622
5. Control and display unit for air conditioner, central vent potentiometer, sunlight penetration photo sensor, fresh air blower	623
6. Control and display unit for air conditioner, air conditioner pressure switch, air quality sensor	624
7. Control and display unit for air conditioner, magnetic coupling relay, vent temperature senders	625
8. Control and display unit for air conditioner, left footwell flap control motor, rear footwell vent control motor	626
9. Control and display unit for air conditioner, control motors for vents	627
10. Illumination for vents	628
11. Engine cooling petrol engines	629
12. Engine cooling for diesel engines	630
076 - Auxiliary heater with radio-operated remote control and air conditioner, From model year 2000	631-638
1. Auxiliary heater with radio-operated remote control and air conditioner, From model year 2000	631
2. Auxiliary heater with radio-operated remote control and air conditioner, From model year 2000	632
3. Battery, X contact relief relay	633
4. Additional heater control unit, metering pump	634
5. Control and display unit for air conditioner, solar roof	635
6. Solar cell isolation relay, fresh air blower	636
7. Function selection switch in centre console	637
8. Auxiliary heating radio wave receiver, frequency divider for radio receiver and radio system, radio/telephone/auxiliary heater aerial	638
077 - Driver information system, From model year 2000	639-647
1. Driver information system, From model year 2000	639
2. Driver information system, From model year 2000	640
3. Ignition/starter switch, lighting switch, X contact relief relay	641
4. Left headlight, fuse carrier 1	642
5. Right headlight, bulb monitoring device, left tail light, high level brake light bulb	643
6. Bulb monitoring device, brake light switch	644
7. Number plate lights, tail lights in boot lid, rear fog light	645
8. Dash panel insert	646
9. Dash panel insert	647
078 - Multi-function steering wheel, From model year 2000	648-653
1. Multi-function steering wheel, From model year 2000	648
2. Multi-function steering wheel	649
3. Multi-function steering wheel	650

4. Multi-function steering wheel	651
5. Multi-function steering wheel	652
6. Multi-function steering wheel	653
079 - Headlights with gas discharge lamps and automatic headlight range control, headlights with gas discharge lamps 'plus' and automatic headlight range control, From model year 2000	654-659
1. Headlights with gas discharge lamps and automatic headlight range control, headlights with gas discharge lamps 'plus' and automatic headlight range control, From model year 2000	654
2. Headlights with gas discharge lamps and automatic headlight range control, headlights with gas discharge lamps 'plus' and automatic headlight range control, From model year 2000	655
3. Ignition/starter switch, lighting switch, headlight dipper/flasher switch	656
4. Fuses, left gas discharge lamp control unit	657
5. Bulb monitoring device, right gas discharge lamp control unit, headlight range control motor, right	658
6. Control unit for headlight range control, left headlight range control motor, vehicle level senders	659
080 - Heated windscreen	660-662
1. Heated windscreen	660-661
2. Windscreen heater	662
081 - Ultra-sonic parking aid system	663-669
1. Ultra-sonic parking aid system	663-664
2. Parking aid control unit, front parking aid senders	665
3. Parking aid control unit, rear parking aid sender	666
4. Parking aid control unit, parking aid button, sound sender	667
5. Parking aid control unit, reversing light	668
6. Parking aid control unit, dash panel insert	669
082 - Daytime driving lights with fog lights, From model year 2000	670-677
1. Daytime driving lights with fog lights, From model year 2000	670
2. Daytime driving lights with fog lights, From model year 2000	671
3. Ignition/starter switch, lighting switch, headlight dipper/flasher switch, X contact relief relay	672
4. Daytime driving light switch-on relay, daytime driving light change-over relay , resistance wire	673
5. Left headlight, fuses, bulb monitoring device	674
6. Right headlight, bulb monitoring device	675
7. Fog lights/rear fog light control unit, front fog lights, fog light switch	676
8. Fog lights/rear fog light control unit, rear fog light switch, rear left fog light bulb	677
083 - Radio navigation system (RNS-D)*	678-689
1. Radio navigation system (RNS-D)*	678-679
2. Radio navigation system, fuse	680
3. Radio navigation system, fuse	681
4. Radio navigation system, CD changer	682
5. Loudspeakers, navigation aerial (GPS)	683
6. Loudspeaker	684
7. Loudspeakers for radio Bose sound system	685
8. Navigation operating electronics control unit, navigation/TV tuner	686
9. Navigation operating electronics control unit, navigation/TV tuner, navigation interface	687
10. TV aerials	688
11. Heated rear window with window aerial	689