

Contents

01 - Self-diagnosis	1
1 Dash panel insert self-diagnosis with service interval extension	1
1.1 Dash panel insert self-diagnosis with service interval extension	1
1.2 General information	1
1.3 Starting dash panel insert self-diagnosis	2
1.4 Interrogate fault memory	4
1.5 Fault table	5
1.6 Final control diagnosis	12
1.7 Erase fault memory	15
1.8 End output	17
1.9 Code control unit	17
1.10 Read measured value block	20
1.11 Adaption	28
1.12 Adaption channels 02 to 09	34
1.13 Adaption channels 18 to 33	42
1.14 Adaption channels 40 to 48	48
1.15 Adaption channels 60 to 62	62
1.16 Input values on dash panel insert replacement	67
1.17 Resetting service display on completion of service work (without VAS 5051)	68
1.18 Checking data exchange between control units	69
2 Immobilizer self-diagnosis - immobilizer III	72
2.1 Immobilizer self-diagnosis - immobilizer III	72
2.2 General information	72
2.3 Starting immobilizer self-diagnosis	74
2.4 Interrogate fault memory	76
2.5 Fault table	77
2.6 Erase fault memory	78
2.7 End output	80
2.8 Read measured value block	80
2.9 Adaption	84
2.10 Matching of vehicle keys	84
2.11 Procedure in the event of loss of keys	90
2.12 Adaption following replacement of dash panel insert	91
2.13 Adaption following replacement of engine control unit	96
2.14 Adaption following replacement of dash panel insert and engine control unit	100
2.15 Control unit release	104
3 Cruise control system (CCS) self-diagnosis	107
3.1 Cruise control system (CCS) self-diagnosis	107
3.2 General information	107
3.3 Checking cruise control system (CCS) - petrol engines with electronic throttle	107
3.4 Checking cruise control system (CCS) - diesel engines	112
3.5 Wiring and component check using test box V.A.G 1598/31	115
3.6 Activating/deactivating cruise control system	116
4 Acoustic Parking System (APS) self-diagnosis	118
4.1 Acoustic Parking System (APS) self-diagnosis	118
4.2 General information	118
4.3 Starting automatic parking system self-diagnosis	118
4.4 Interrogate fault memory	120
4.5 Fault table	121
4.6 Final control diagnosis	126
4.7 Erase fault memory	128
4.8 End output	129
4.9 Code control unit	130
4.10 Read measured value block	132



4.11	Adaption	136
5	Automatic headlight range control self-diagnosis	145
5.1	Automatic headlight range control self-diagnosis	145
5.2	General information	145
5.3	Starting automatic headlight range control self-diagnosis	146
5.4	Interrogate fault memory	147
5.5	Fault table	149
5.6	Final control diagnosis	151
5.7	Basic setting	153
5.8	Erase fault memory	155
5.9	End output	156
5.10	Code control unit	157
5.11	Read measured value block	159
6	Connecting vehicle diagnostic, testing and information system VAS 5051	162
6.1	Connecting vehicle diagnostic, testing and information system VAS 5051	162
6.2	Safety precautions	162