

Contents

1	General information	1
1.1	--- Change history ---	1
1.2	Engine number	1
1.3	Vehicle identification number	4
1.4	Vehicle data sticker	4
2	Preparations	6
2.1	Vehicle: raising	6
2.2	Engine cover panel: removing and installing	8
2.3	Noise insulation: removing and installing	12
2.4	Window regulators: activating automatic open/close function	13
2.5	Vehicle diagnostic tester: connecting	13
3	Maintenance	16
3.1	Diesel particulate filter: reading out ash deposit volume	19
3.2	Event memory: reading out and erasing	20
3.3	Navigation system (MMI basic): releasing eject button and running CD for languages	20
3.4	Service interval display: resetting service	20
3.5	Transport mode: deactivating	21
3.6	Transport mode: checking activation and activating if necessary	21
3.7	Shipping mode: deactivating	22
3.8	Battery: reading out status and sending diagnostic log	22
3.9	Battery: checking electrolyte level	23
3.10	Battery: determining and recording state of charge (SOC)	25
3.11	Mirror hanger indicating defective battery: renewing battery on affected vehicles	28
3.12	Brake fluid: changing	28
3.13	Brake fluid (vehicles older than 12 months): changing	33
3.14	Brake fluid: checking fluid level	33
3.15	Brake system: checking condition of brake hoses, and checking that caps are fitted on bleeder screws	33
3.16	Brake pads: checking thickness	34
3.17	Tyres: checking condition and wear pattern, and checking and recording tread depth	35
3.18	Brake discs: checking for surface rust and operating brakes to clean if necessary	37
3.19	Parking brake: releasing	37
3.20	Tyres: checking tyre pressures and adjusting if necessary	37
3.21	Tyres (except spare wheel): checking tyre pressures and adjusting to 3.5 bar if necessary	38
3.22	Tyre Pressure Loss Indicator: storing changed tyre pressures	39
3.23	Tyre repair kit: checking that set is complete, and checking and recording expiry date	39
3.24	Wheel bolts: tightening to specified torque	39
3.25	Axles (front and rear): checking components for play, secure attachment and damage, and checking protective boots	40
3.26	Engine, gearbox, final drive and steering: checking for leaks and damage	44
3.27	Underbody: checking trim, wheel housing liners, side members and pipes/wiring for damage, and checking that they are properly secured	44
3.28	Roof insert: checking operation	45
3.29	Roof insert - sliding/tilting sunroof: cleaning and lubricating	45
3.30	Rear lid hinges: lubricating	47
3.31	Front lid arrester hook: lubricating	48
3.32	Door hinges with arresters and locking cylinders: lubricating	48
3.33	Windscreen/rear window washer system: checking spray pattern and adjusting if necessary	50
3.34	Wiper blades: checking for damage	51
3.35	Headlight washer system: checking operation	51
3.36	Headlights: checking for correct adjustment	51
3.37	Headlights and reversing lights, side lights, number plate lights, turn signals, hazard warning lights: checking operation	52



3.38	Luggage compartment lighting: checking operation	53
3.39	Glove box light, interior lighting and reading light: checking operation	53
3.40	Horn: checking operation	54
3.41	Passenger airbag: checking key switch on / off and setting to "on"	54
3.42	Vehicle interior: removing any objects other than those protecting interior surfaces	54
3.43	Vehicle interior and exterior: checking for and documenting any damage	55
3.44	Vehicle keys: checking operation and recording number of keys given to customer	55
3.45	Vehicle key: removing from ignition lock	55
3.46	Vehicle key(s), wheel covers and owner's literature: checking availability and recording number present	55
3.47	Sun visors: checking that they are folded up and folding up if necessary	56
3.48	Luggage compartment cover and sun blind: checking that they are rolled up and rolling up if necessary	56
3.49	Turbocharger: greasing rod linkage	56
3.50	Engine oil: draining	58
3.51	Engine oil: renewing oil filter	68
3.52	Engine oil: filling up	76
3.53	Engine oil: checking oil level and correcting if necessary	77
3.54	Poly V-belts for ancillaries: checking	79
3.55	Spark plugs: renewing	83
3.56	Hydraulic system: checking fluid level	97
3.57	Coolant level: checking (fill level should be at top marking on coolant expansion tank; level may be above top marking, but not below it)	99
3.58	Air cleaner: renewing filter element and cleaning housing	102
3.59	Plenum chamber and water drains: checking for dirt	114
3.60	Snow screen: cleaning	115
3.61	Dust and pollen filter: renewing	116
3.62	Fuel filter: renewing	116
3.63	Fuel tank: adding fuel additive	118
3.64	Vehicle exterior: checking unprotected areas for dirt, and cleaning if necessary	119
3.65	Protective transport film and car cover: checking position and correcting if necessary	119
3.66	Protective transport film: renewing according to manufacturer's instructions	119
3.67	Car cover: renewing according to manufacturer's instructions	120
3.68	Body: checking vehicle paintwork for damage and corrosion from below and with front lid, rear lid and doors open	120
3.69	Vehicles parked outdoors: locking	120
3.70	Vehicles parked outdoors: covering unprotected vehicles with protective transport film and car cover (not for vehicles with control number 5K0)	120
3.71	Road test	120
3.72	Suspension struts on front and rear axle: removing locking elements and correctly fitting bump stops	121
3.73	Stock vehicles: observing measures specified in Maintenance table for stock vehicles (see "Before handing vehicle over to customer")	122
3.74	Checklist "Documentation of cleaning and care routine": checking that list is present	123
3.75	Checklist "Documentation of cleaning and care routine": signing and placing in vehicle wallet	123
3.76	Cleaning and care: checking that required measures have been carried out on time	123
3.77	Stock vehicle care management: deciding and recording date of next check	123
3.78	Display instruments: setting time and date	123
3.79	Manual gearbox/automatic gearbox: selecting 1st gear/park	123
3.80	Automatic gearbox (multitronic): changing ATF	124
3.81	Poly V-belts for ancillaries: renewing	124
3.82	Poly V-belts for ancillaries and all pulleys: renewing	124
3.83	Poly V-belt for ancillaries and pulleys for coolant pump and power steering pump: renewing	124
3.84	Poly V-belts for ancillaries and idler rollers: renewing	124
3.85	Instrument cluster: resetting driver information system	124
3.86	Toothed belt for camshaft drive: renewing	125

3.87	Toothed belt for camshaft drive and tensioning roller: renewing	125
4	Exhaust emissions test	126
4.1	Petrol engines: performing exhaust emissions test	126
4.2	Diesel engines: performing exhaust emissions test	133